ProJet™ 7000

3D Professional Printer



User Guide

Original Instructions

Rev H, P/N 40-D080

CONTENTS

1 INTRODUCTION . . . 4

About this Manual . . . 4
Service Contact . . . 4
Copyright . . . 5
FCC Notice . . . 5
Radio Frequency Transmission . . . 5
Limitations of Warranty and Liability . . . 5

2 SAFETY . . . 6

Customer Safety Program . . . 6
Levels of User . . . 6
Operators . . . 6
Certified Service Personnel . . . 6
Safety Design Features in the ProJet™ 7000 . . . 6
Safety Symbols and Definitions . . . 7
Safety Hazards and General Guidelines . . . 8
Follow these general safety guidelines regarding . . . 8
Training and Instructions . . . 8
Material Handling . . . 8
Machine Handling . . . 8
Laser Safety . . . 8
Alarms and Warnings . . . 8
Environmental Safety Issues . . . 9
Safety Interlocks . . . 9
Interlocks . . . 9
Laser Safety . . . 10
Print Material Handling and Safety . . . 10
Print Material Characteristics . . . 10
Print Material Disposal . . . 10
Print Material Spill Containment . . . 10
Shelf Life . . . 11
In-Service Life . . . 11
Contamination . . . 11
Polymerization . . . 11
Electrical Safety . . . 11
Emergency Shut Down Using the E-Stop . . . 12
First Aid and Protective Equipment . . . 12
First Aid and Protective Equipment . . . 12
Skin Contact . . . 12
Eye Contact . . . 12
Contact Lenses . . . 12
Fume Inhalation . . . 13
Safety Notice . . . 13
Label Installation Diagram . . . 14
Material cart labels . . . 18
Ground labels (item #10) . . . 19
Printer and material cart weights . . . 19

3 OVERVIEW . . . 20

ProJet™ 7000 Components . . . 20
Build Chamber - Right Side . . . 21
Build Chamber - Left Side . . . 22
Detail A . . . 23
Lower Build Chamber . . . 24
Material Cart . . . 25
Material Cart with Bottle Holder Extended . . . 26
Front Panel Indicators . . . 27
Blue LED - Laser . . . 27
Green LED - Control . . . 27
Amber LED - System . . . 27

4 USER INTERFACE . . . 28

Opening Screen and Login . . . 28
Status . . . 30
Settings . . . 31
Printer . . . 32
Global Print Defaults . . . 32
Scale Factors . . . 33
Network . . . 34
Display Settings . . . 34
User Settings . . . 35
Heater Settings . . . 37
Drawing Settings . . . 38
Advanced . . . 39
Printer . . . 39
Elevator-Leveler . . . 40
Print Applicator . . . 41
Printhead . . . 42
Prints . . . 44
Alerts . . . 48
Logout . . . 49
New Features for Firmware v1.6.2846 . . . 50
Restart Build Wizard . . . 50
Recoat Parameter Modifications on-the-fly Wizard . . . 52
Stir Wizard . . . 54

5 OPERATION . . . 55

Install Print Tray and Material Cart . . . 55
Install Elevator Forks and Print Platform . . . 58
Power Up and Login . . . 60
Add Material to the Material Cart and Print Tray . . . 63
Level Print Platform . . . 63
Install the ProJet™ 7000 in 3DSPRINT 2.5 . . . 66
Install the ProJet™ 7000 in 3D Manage . . . 66
Submit a Print Job . . . 67
Start a Print Job . . . 69
Delete a Part in Print Preview . . . 70
Print Job Complete - Move Platform to Offload Position . . . 73
Move Print Platform to Offload Position using Elevator Controls . . . 75

6 REMOTE OPERATION . . . 76

7 POST PROCESSING . . . 78

8 BASIC REGULATIONS . . . 78

United States . . . 78
Canada . . . 78
European Union . . . 78

9 EC DECLARATION OF CONFORMITY . . . 79

1 INTRODUCTION

Thank you for purchasing the ProJet™ 7000 3D Printer. We pride ourselves in our ability to offer customers three dimensional modeling solutions.

The 3D Systems team is confident your system will provide many years of service.



ABOUT THIS MANUAL

This manual provides users with an understanding of features, system requirements, and operating procedures needed to create finished parts using the ProJet 7000.

Should additional questions arise, contact 3D Systems:

Service Contact

Hotline	Every workday: 8:00 - 17:00 EST/EDT 1.800.793.3669
E-Mail	moreinfo@3dsystems.com
Service Address U.S.A.	3D Systems Inc. 333 Three D Systems Circle Rock Hill, SC 29730
Service Address Japan	3D Systems, Japan K.K. 4-6-8 Tsurumaki Setagaya-Ku, Tokyo 154-0016
Service Address Europe	3D Systems Europe Ltd. Mark House, Mark Road Hemel Hempstead Herts HP2 7UA United Kingdom

COPYRIGHT

© 2017 by 3D Systems, Inc. All rights reserved. This document is subject to change without notice as 3D Systems may (but shall not be obligated to) make improvements to this document from time to time. This document is copyrighted and contains proprietary information that is the property of 3D Systems, Inc. The ProJet™ 7000 customer does not have the right to copy, reproduce, or translate this document in any way without the prior written consent of 3D Systems, Inc. No copies of the document may be sold or given to any person or other entity. ProJet is a trademark and 3D Systems, the 3D logo and VisiJet are registered trademarks of 3D Systems, Inc.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by 3D Systems could void your authority to operate this equipment.

RADIO FREQUENCY TRANSMISSION

This product generates 13.56 MHz using an Inductive Loop System as a Radio Frequency Identification device (RFID). This RFID device complies with the requirements specified in FCC Part 15, Industry Canada RS-210, European Council Directive 2014/53/EU, and all applicable local laws and regulations.

Operation of this device is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device referenced in this guide contains transmitter, FCC ID: 2ADGF-SKTKM2, IC:12666A-SKTKM2

Access to the transmitter for service technicians is available through common enclosure access methods including use of common tools and removal of covers.

NOTE: Changes or modifications to this equipment not specifically approved by 3D Systems may void the user's authority to operate this equipment.

LIMITATIONS OF WARRANTY AND LIABILITY

This information is provided by 3D Systems for the convenience of its customers. It is believed to be reliable, but NO REPRESENTATIONS, GUARANTEES, OR WARRANTIES OF ANY KIND ARE MADE AS TO ITS ACCURACY, FITNESS FOR A PARTICULAR USE, OR THE RESULTS TO BE OBTAINED THEREFROM. The information is based in whole or in large part on laboratory work and does not necessarily indicate performance in all conditions. Notwithstanding any information provided by 3D Systems or its affiliates, the customer remains fully responsible for determining which federal, state, or local laws or regulations, or industry practices are relevant to activities in which it engages, as well as assuring that those laws, regulations, or standards are complied with under actual operating conditions, and 3D Systems undertakes no responsibility in these areas.

IN NO EVENT WILL 3D SYSTEMS BE RESPONSIBLE FOR DAMAGES OF ANY NATURE, INCLUDING SPECIAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OF OR RELIANCE UPON THIS INFORMATION. THE CUSTOMER ASSUMES ALL RISK RESULTING FROM THE USE OF THIS INFORMATION. Customer use of the materials that follow is an acknowledgment of its agreement to the foregoing. Any customer not wishing to be bound should return this material to 3D Systems. Nothing contained herein is to be considered as permission, recommendation, nor as an inducement to practice any patented invention without permission of the patent owner.

2 SAFETY

You must be properly trained before operating the ProJet™ 7000. Also, anyone assisting you must be properly trained. After you are trained, always follow the safety guidelines and procedures in this section before operating the ProJet™ 7000.

CUSTOMER SAFETY PROGRAM

Before using the ProJet™ 7000, customers must have a safety program in place. The safety program should do the following:

- Label and point out hazardous equipment, materials, and procedures.
- Explain what to do in an emergency situation.
- Provide information about the hazards of equipment and materials in the form of **Material Safety Data Sheets (MSDS)**. The MSDSs are provided with all materials supplied by 3D Systems.

The information in this chapter supplements the customer's existing safety program. It points out safety considerations that specifically concern the ProJet™ 7000.

LEVELS OF USER



WARNING: Do not attempt to perform any procedures described in this manual unless you have been specifically trained to do so.

There are two levels of users of the ProJet™ 7000, based on the amount and type of training the user has received. The two levels of users (operators and certified service personnel), are described below.

Operators

Operators are trained to operate the system and perform all the necessary tasks to build a part.

Certified Service Personnel

Certified service personnel are those who have completed the 3D Systems service training package and are certified to perform service tasks. Certification may occur at various levels, and certified service personnel should only perform tasks they are authorized and certified to complete.

SAFETY DESIGN FEATURES IN THE ProJet™ 7000

The following design features are provided to reduce potentially hazardous operating conditions:



WARNING: If any of the following safety features fail, your actions may be all that will prevent potentially hazardous operating conditions.

- Safety interlocks at the ProJet™ 7000 process chamber door and limited access to cabinets are intended to prevent accidental exposure of the user to the laser beam, thermal hazards, pinch points, or to electrical shock.
- The design of the beam delivery system is intended to prevent the laser from being aimed outside the area of the process chamber.
- Limited access to service areas prevents accidental exposure to electrical shock hazards or pinch points.
- The viewing window to the process chamber prevents operator exposure to laser emission while observing operation.
- If the ProJet™ 7000 detects certain unsafe conditions during operation, it is designed to shut down immediately.

SAFETY SYMBOLS AND DEFINITIONS



CAUTION: Indicates the possibility of damage to the equipment.



WARNING: Indicates the possibility of injury or death to personnel.



ELECTRIC SHOCK HAZARD: High voltage electricity is accessible in the vicinity of this sign or behind the access panel. High voltage can cause severe burns or death. Access panels are for service only and should be opened only by certified service personnel.



LASER RADIATION HAZARD: Invisible laser radiation is accessible in the vicinity of this sign or behind the access panel. Direct and scattered radiation can cause severe burns and blindness. Access panels are for service only and should be opened only by certified service personnel.



IRRITANT: Indicates that skin or eye irritation could result while exposed to a chemical composition.



Ultraviolet radiation inside. Exposure may cause eye damage. Do not operate without covers. Wear UV eye protection.



HOT SURFACE: There are surfaces in the vicinity that may be hot and could cause severe burns or fire.



NOTE: Indicates an important point.

SAFETY HAZARDS AND GENERAL GUIDELINES

The ProJet™ 7000 was designed with safety in mind. However, as with all equipment, improper use and malfunctions could cause injury.

This section provides general guidelines for operating the ProJet™ 7000.

Follow these general safety guidelines regarding

- Training and Instructions
- Material Handling
- Machine Handling
- Laser Safety
- Alarms and Warnings

Training and Instructions

- Do not operate the ProJet™ 7000 before receiving proper training.
- Read and follow all operating instructions.
- Follow all safety rules in this section and heed all hazard warnings in this guide.
  Operators are trained to operate the system and perform all the necessary tasks to build a part.

Material Handling

- Do not use any material without first reviewing its MSDS.
- To prevent injury and equipment damage, be sure to follow all handling guidelines in 2.09 Print Material Handling and Safety.

Machine Handling

- When operating the ProJet™ 7000, always keep the following points in mind:
- Do not try to open any panel or door while a machine is running.
- Do not operate the ProJet™ 7000 before receiving proper training.
- Always follow the procedures in this manual.
- Conform to all the safety rules described in this section and in other sections of this manual.
- Use common sense in dealing with the heated, inert environment of the process chamber.
- Do not allow operators to attempt to access or adjust the laser system in any way.
- The ProJet 7000 printer is not to be lifted or moved by the Operator. When needed, only Certified Service Personnel may move the printer and re-install after moving. 3D Systems is not responsible for failed builds or equipment damage due to movement of the machine by the Operator.
- The ProJet 7000 material delivery module is designed for mobility on the floor with its casters. It should never be lifted off of the floor by the Operator, with or without print material inside.

Laser Safety

- Post warning signs during open laser beam operations. Only Certified Service Personnel are permitted to perform open laser beam operations.
- Do not enter any area displaying posted warning signs during open beam operations without proper eye protection.



WARNING: Open laser beam operation should occur only during service procedures performed by certified service personnel.

Alarms and Warnings

- If you hear an alarm, or if you see an error, alarm, or warning message on the ProJet™ 7000 display or on the front panel indicators, clear the alarm, error, or warning message before resuming operation.
- Displayed error, alarm, or warning messages can result from unsafe practices, such as opening an enclosure door or panel when equipment is powered up and running.

ENVIRONMENTAL SAFETY ISSUES

The following are environmental issues concerning the ProJet™ 7000:

- Controlling waste heat is not required for normal operation of the ProJet™ 7000.
- When you dispose of materials, refer to the MSDS for that material and follow any applicable local regulations.
- All waste products, (spilled print material, cleaning liquids, etc.) must be disposed of in accordance with all applicable local regulations.

SAFETY INTERLOCKS

Interlocks

Safety interlock devices on the ProJet™ 7000 equipment help prevent accidental laser exposure, electrical shock and crush injuries.

ProJet™ 7000 equipment will not operate unless all safety interlocks are satisfied.

WARNING: Never disable or override any safety interlock device on the ProJet™ 7000. Operating equipment without all safety interlocks enabled can cause injury. If you suspect a safety interlock device is not working, do not operate the ProJet™ 7000. Disconnect power from the equipment and contact 3D Systems Customer Support for assistance.



LASER SAFETY

The ProJet™ 7000 is designated as a Class I Laser Device by the U.S. Center for Devices and Radiological Health (CDRH). Class I devices are not considered harmful and require no special safety precautions. Under normal operation conditions, the laser beam is completely confined. The viewing window blocks the UV laser radiation from exposure outside of the build area.



LASER RADIATION HAZARD: Operating the equipment or performing procedures other than those specified within this guide may result in exposure to hazardous, invisible laser radiation.



LASER RADIATION HAZARD: Never stare directly into a laser beam, nor into any beam reflection, whether diffused or from a mirror-like surface.



LASER RADIATION HAZARD: During normal operation, and with all panels installed, the ProJet™ 7000 is classified as a Class I laser device. If any of the interlocks are defeated, the ProJet™ 7000 becomes a Class IV device. Eye damage can occur by looking directly into the beam or by viewing any type of beam reflection.

PRINT MATERIAL HANDLING AND SAFETY



IRRITANT: Always wear chemical-resistant gloves, goggles and protective clothing when handling print material. Avoid skin contact. Avoid breathing print material fumes.

- Always wear approved goggles, nitrile gloves and protective clothing when working near print materials or with partially cured parts.
- Wearing contact lenses when working with print materials is not recommended.
- Always wear chemical-resistant gloves whenever handling print materials or partially cured parts. Recommended gloves are 100% Nitrile. Do NOT wear latex gloves.
- Always work in a well ventilated area when using print materials. Avoid breathing vapors.
- Always wash skin thoroughly with a non-abrasive soap and COLD water after working with print materials. DO NOT USE HOT WATER OR SOLVENTS to wash hands, as it will result in absorption through the skin.
- Use extreme care when handling solvents used to remove excess print material from uncured parts. These solvents (e.g., denatured alcohol, isopropyl alcohol) are very flammable.
- Keep all print materials away from heat, sparks and flame. Print material containers may rupture when exposed to extreme heat.



WARNING: Use National Fire Protection Association Class B extinguishers such as carbon dioxide, dry chemical, or foam.

Print Material Characteristics

The photopolymers used in the print materials may be hazardous if handled improperly. Repeated skin contact with print materials may cause sensitization. Consult the manufacturer's Material Safety Data Sheet (MSDS) for information on specific print materials. For further information on this and related topics, consult the 3D Systems - Materials website.



CAUTION: Never mix different print materials.

Print Material Disposal

Do not dump used print material down any drains. Dispose of print material according to the guidelines given in the MSDS included with the print material and all applicable regulations,(local, state, and federal).

Print Material Spill Containment

Your company has the responsibility to define what constitutes a major spill. Personnel who are involved in cleaning up major

spills of print material should wear NIOSH/MSHA approved respirators designed for use with organic chemical vapors. In addition, each person should wear protective goggles, rubber boots, and 100% nitrile gloves to minimize exposure to print material, which can cause eye, skin, and respiratory irritation, as well as possible skin allergies and respiratory reactions.



WARNING: Untrained personnel should be evacuated from the area.



WARNING: Print materials are flammable. Care should be taken during print material containment and cleanup operations.

A supply of dikes and control booms should be stocked so they are available to contain the affected area in the event of a major print material spill. The spilled print material should then be absorbed on inert absorbent material and placed into drums for transfer to an approved waste disposal site. After cleaning up the spill, individuals should wash thoroughly with soap and cold water. All clothing should be washed before reuse. Avoid exposure to sunlight until skin and clothing have been cleaned of print material. Refer to the MSDS before using any chemicals. Repeated or prolonged skin contact may cause sensitization. Vapor may be harmful.

Shelf Life

VisiJet SL & Accura materials are certified for use for at least 12 months from their date of manufacture. Most materials are certified for 18 months from their manufacture dates. The recertification dates are marked on the material cartridge labels. In general, resins are usable for several months after their recertification dates provided that the materials have been properly stored, handled and not exposed to excess heat. However, use of very old or material past its recertification date may shorten your In-Service material life. It is advisable to check the viscosity of any material past its recertification date prior to use.

In-Service Life

In-Service Life of the VisiJet SL materials is defined as the useful life of the material after having been poured into the ProJet 7000 print tray. The In-Service Life of the Projet 7000 material greatly varies depending on material type, usage and environmental conditions. The more volume built, the more the material is refreshed with newer material. This blends older material with newer material and extends the In-Service Live of the materials. If the material is exposed to temperatures outside of the normal operating limits, is exposed to UV light, is exposed to particulates or vapors in the air such as dust or fumes, or if contaminates are introduced such as partially cured platforms being placed back into the print tray, this will shorten the material In-Service life. The type of patterns and builds performed also affect the in-service life of the material. With all this taken into consideration, we would expect the in-Service life of the material to be at least two years but can be much longer with proper care and maintenance. The material retains its usefulness until a buildup of viscosity or a change in reactivity prevents further processing in the ProJet™ 7000.

Contamination

Care should be taken when cleaning windows, panels, and other parts of the ProJet™ 7000. Cleaning products which contain ammonia should not be used because they can cause contamination of the material. Instead use a small amount of isopropyl alcohol on a paper towel to clean up spills. Accidental contamination of resins may change the material's performance characteristics to such an extent that acceptable parts can no longer be reliably created.

Polymerization

Signs of polymerization of stored resin include container bulging, leaking, and the emission of heat, or an unusual odor from the container. If you notice this, do not use the material and dispose of it properly.

ELECTRICAL SAFETY

To prevent electrical shock, the ProJet™ 7000 will not operate unless all external panels are installed and all electrical safety interlock circuits are closed. The ProJet™ 7000 was designed to minimize operator exposure to electrical hazards during normal operations. All exposed electrical circuits are contained within limited-access cabinets. This is to separate the operator from service and maintenance areas.



WARNING: Hazardous voltage exists inside the enclosures of the ProJet™ 7000. Injury or death from electrical shock can result if you remove external panels or try to defeat safety interlocks. Panels should only be removed and safety interlocks should only be defeated by certified service personnel.

EMERGENCY SHUT DOWN USING THE E-STOP

ALERT: In the event of an emergency, immediately press the Emergency Stop switch (E-Stop).

The emergency stop switch is pressed any time the operator experiences or suspects a machine malfunction. Pressing the E-Stop disables the laser and all motors. Pressing the E-Stop does not switch off all power to the machine.

To restart the system after an emergency shut down, rotate the E-Stop switch clockwise to reset it.



FIRST AID AND PROTECTIVE EQUIPMENT

First Aid and Protective Equipment

The following paragraphs provide general first aid procedures and recommendations for protective equipment to minimize the risks from print material exposure. If professional medical attention is necessary, take the Material Safety Data Sheet (MSDS) for the exact print material involved to the attending physician.

Skin Contact

Wear 100% nitrile gloves and lab coats to avoid skin contact. Should print material come in contact with skin, wash thoroughly with soap and cold water and immediately remove contaminated clothing and shoes. If skin is irritated, get medical attention. Dry-clean contaminated clothing. Discard contaminated shoes and leather products.

Eye Contact

Safety goggles should be worn to prevent accidental splashes into the eyes. If print material comes in contact with the eye, flush immediately with large amounts of water for 15 minutes, avoid sunlight, fluorescent light, and other ultraviolet light, and obtain immediate medical attention. Eye wash facilities and a first aid kit should be readily available and close to the print material.

Contact Lenses

If print material splashes into the eye when contact lenses are worn, flush the eye with water immediately. Verify that flushing has removed the contact lens from the eye. Protect eyes from light and obtain immediate medical attention. Discard contact lenses that come into contact with liquid print material.

Fume Inhalation

Remove the person to fresh air. Give artificial respiration or cardiopulmonary resuscitation (CPR) if required. If breathing is difficult, give oxygen. Obtain immediate medical attention.

SAFETY NOTICE

CAUTION: Use of controls or adjustments, or performance of procedures other than those contained in the operation, maintenance or any other manual provided with this machine may result in hazardous radiation exposure.

This laser process machine is certified as a CLASS 1 laser product to the requirements of the US Federal Product Performance Standard for Laser Products contained in the regulations in 21 CFR Subchapter J except for specific deviations described in FDA Laser Notice #50.

NOTE: Class 1 laser products are not considered to be hazardous.

This machine incorporates a Class 4 laser and optical system which, by itself, may be hazardous. However, this machine incorporates a protective housing, laser protective viewing window, and safety interlocks in the machine design such that there is no exposure or human access to the laser radiation generated by the laser during operation.






All service to the laser process machine, the embedded laser system and optics requiring interlock override shall only be performed by 3D Systems Corporation service personnel, their authorized agents, or personnel trained by 3D Systems Corporation. The manufacturer's user information for the incorporated laser products are supplied with this process machine.


UNDER NO CIRCUMSTANCE shall attempts be made by the user to operate the laser with safety interlocks bypassed or tool removable access panels that allow access to laser radiation removed. Labels are provided on the products that indicate hazards. Reproductions of these labels and diagrams showing their location are provided in this manual.


The laser should not be operated if the laser protective window material installed onto the front of the process chamber is damaged or removed. The window material has a measured minimum optical density (OD) of 5+ @ 355nm. Contact the manufacturer for replacement information.


LABEL INSTALLATION DIAGRAM

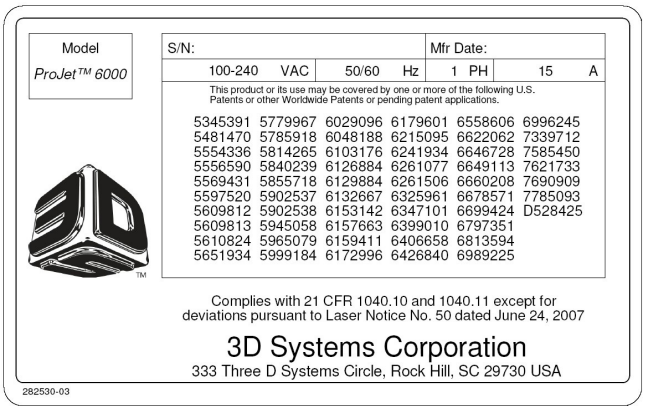
Item	P/N	Description	Qty	Label
1	282530-03	System Label, ProJet™ 6000	1	
2	203375-00	Laser Interlocks Defeated Sticker	3	
3	203373-00	Laser Warning When Open Sticker	2	
4	283148-02	LABEL, CLASS I LASER PRODUCT	1	
5	203019-00	Electrical hazard Sticker	1	
6	283615-00	LABEL, ELECTRICAL HAZARD, NO USER SERVICE	3	
7	19965-001-01	CE declaration label	1	
8	19984-001-00	Heat Hazard Sticker	3	
9	283156-00	LABEL, LASER HAZARDS 2	2	

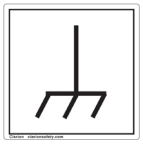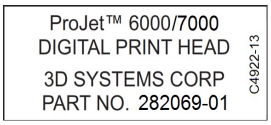Item	P/N	Description	Qty	Label
10	283617-00	LABEL, CHASSIS/SIGNAL GROUND	13	
11	283218-00	LABEL, ID, CART, PROJET 6000	1	
12	283234-00	LABEL, LASER FRU PART NUMBER	1	
13	283198-00	LABEL, LASER-CONTROL-SYSTEM	1	
14	283611-00	LABEL, LASER WARNING, INTERLOCKS DEFEATED, FRENCH	3	
15	283612-00	LABEL, LASER WARNING, PANEL OPEN, FRENCH	2	
16	283613-00	LABEL, LASER WARNING, INTERLOCK FAILED, FRENCH	2	
17	283614-00	LABEL, CLASS I LASER PRODUCT, FRENCH	1	
18	283616-00	LABEL, ELECTRICAL HAZARD, NO USER SERVICE, FRENCH	3	
19	100239-00	LBL_CRUSH_BELT-DRV_BK-YL_TRNGL-33MM	1	
20	283618-00	LABEL, NO LIFT	1	
21	286523-00	LABEL, cTUVus	1	

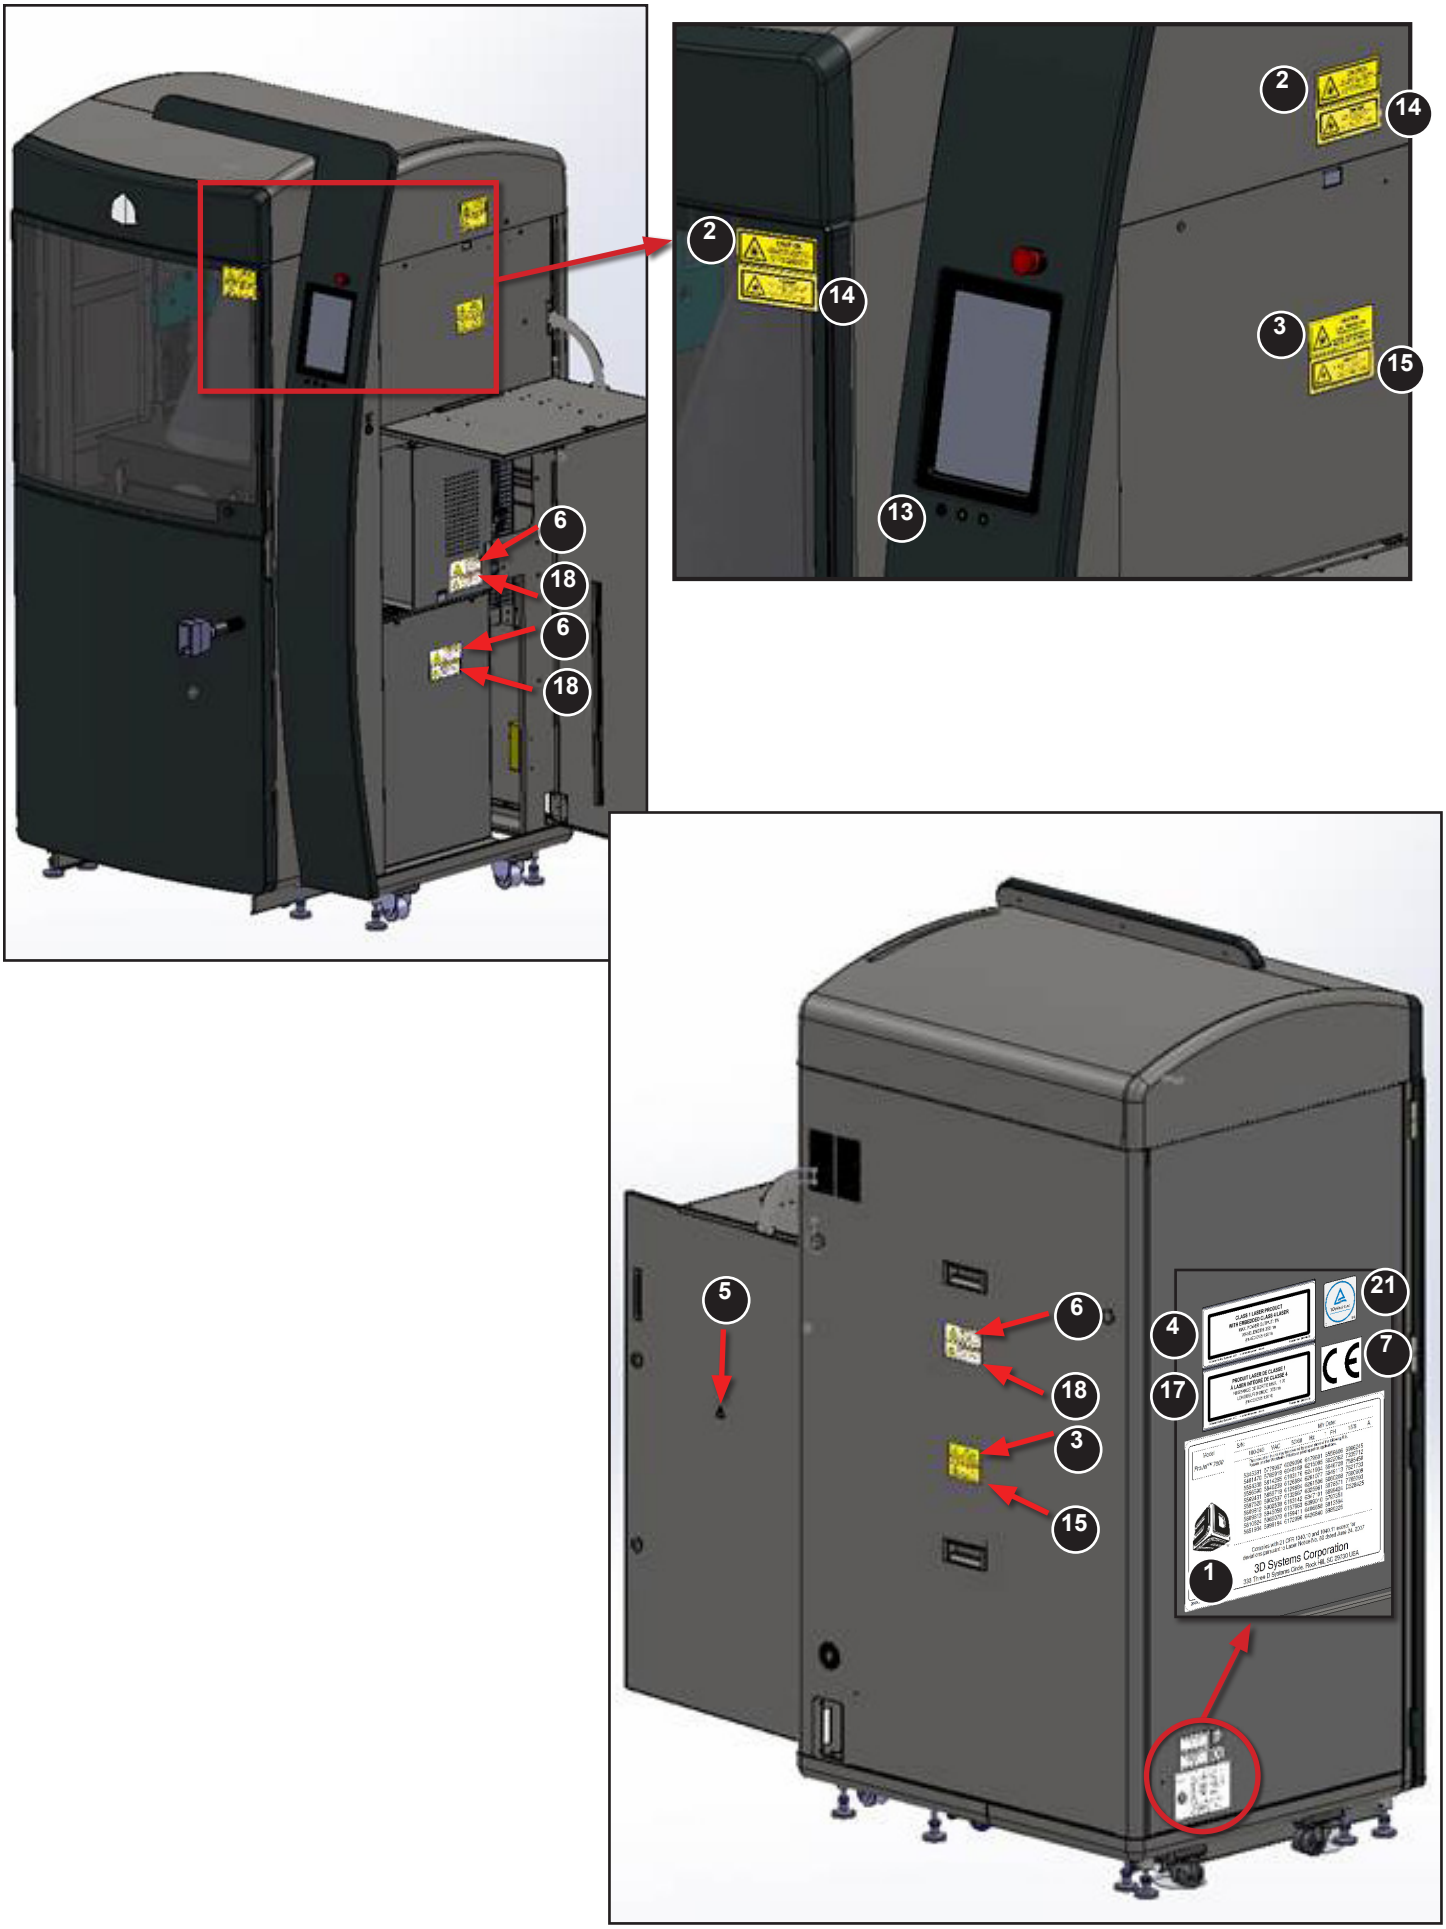

2
14
2
14
3
15
13
6
18
6
18
5
6
18
3
15
4
21
7
17
1
3D Systems Corporation

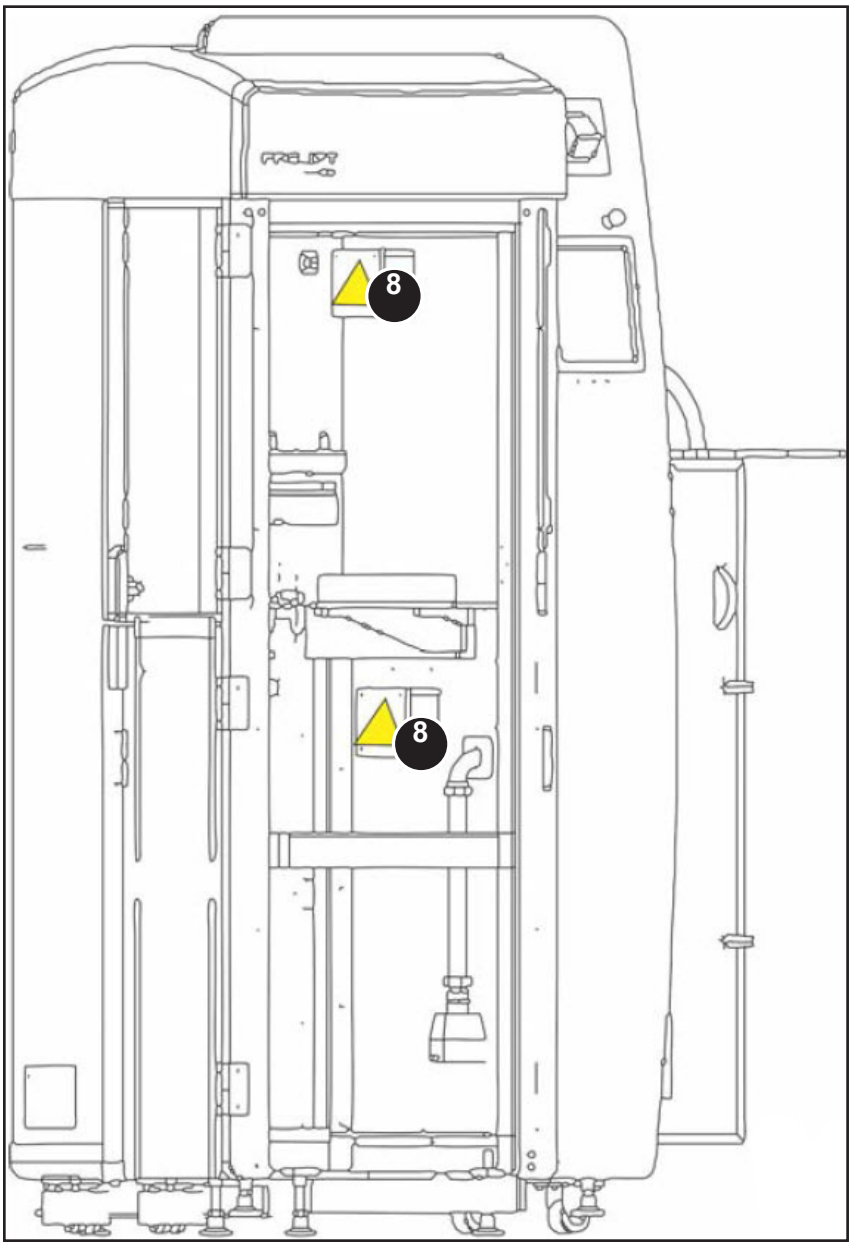

8
8

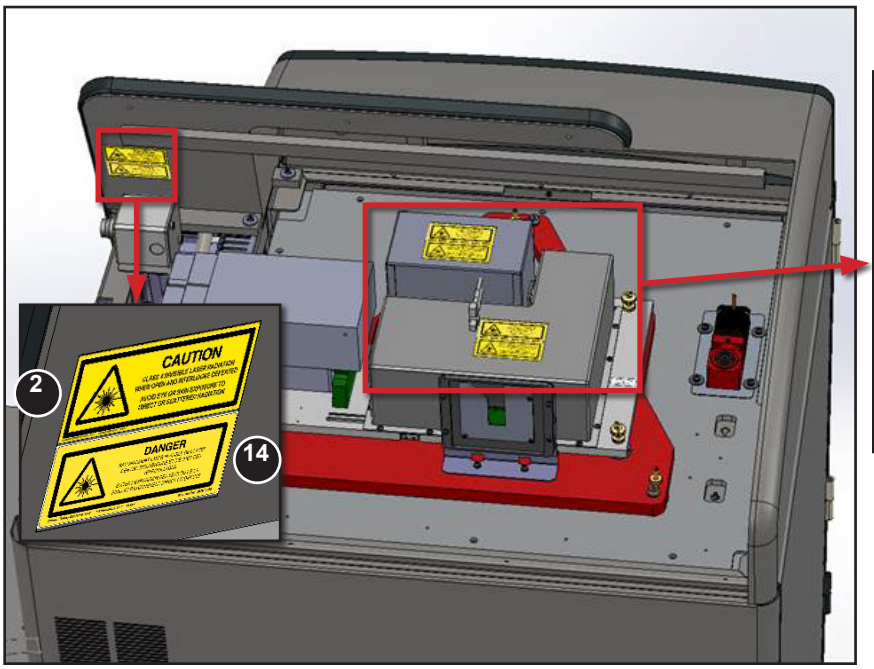

CAUTION
DANGER
2
14

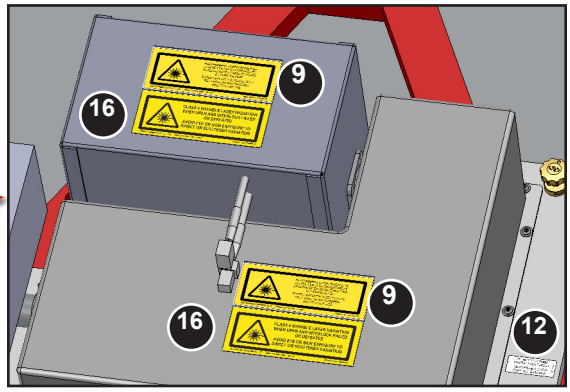
9
16
9
16
12

MATERIAL CART LABELS

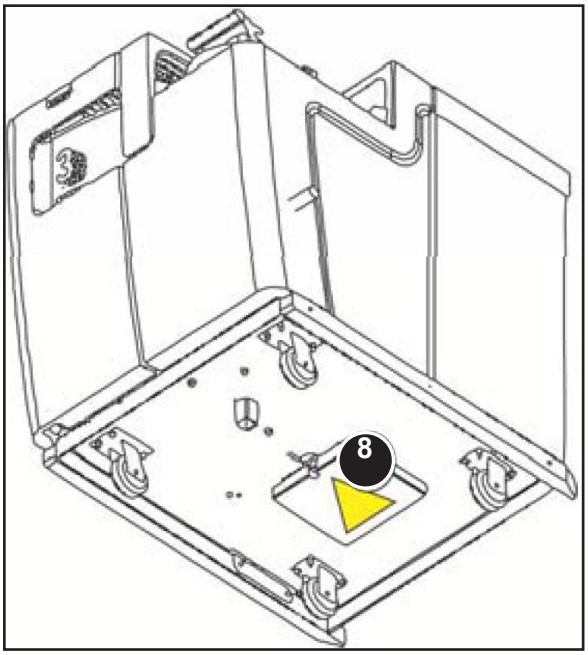

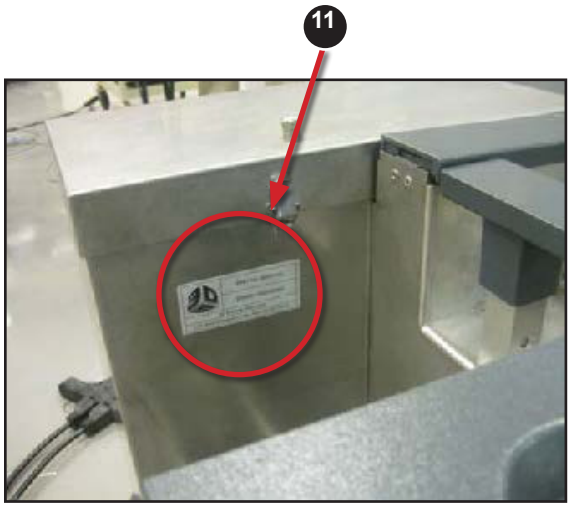


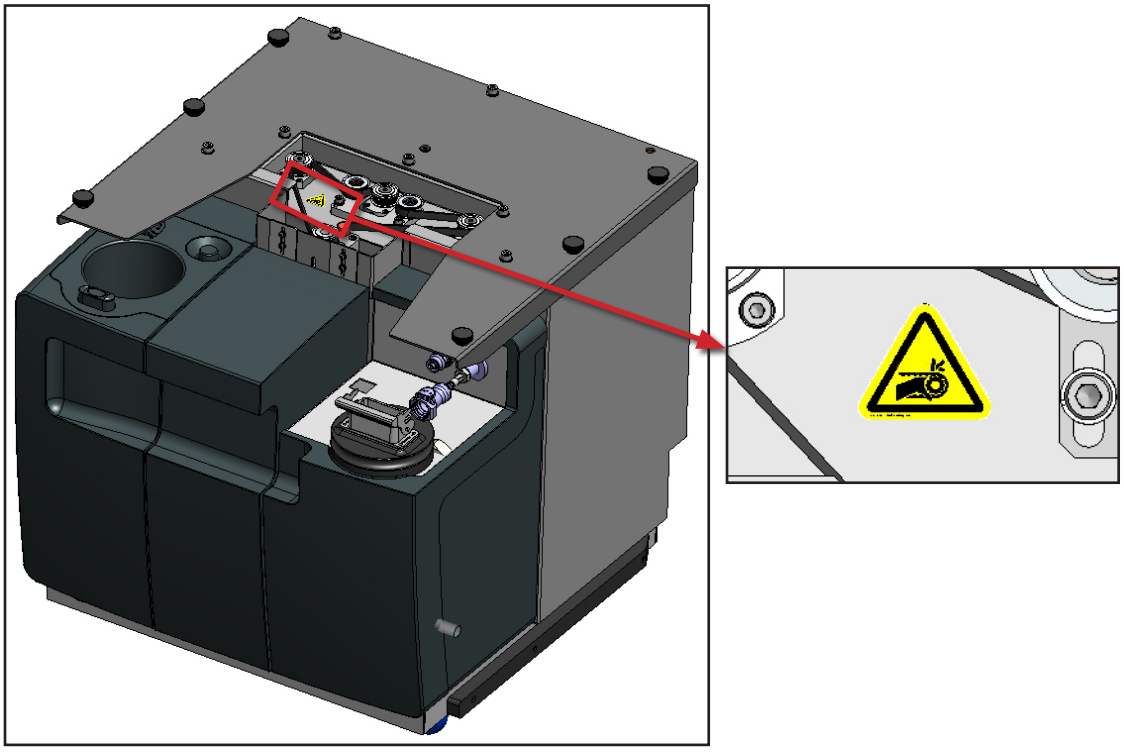


GROUND LABELS (ITEM #10)




Electronics door

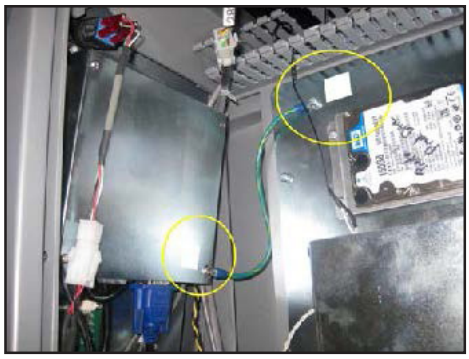


Touch Screen

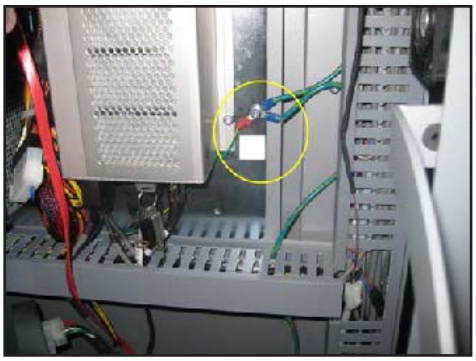

Near Laser Controller

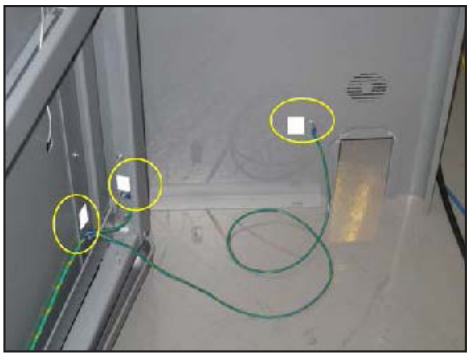

Rear Panel, Inner and Outer Frame

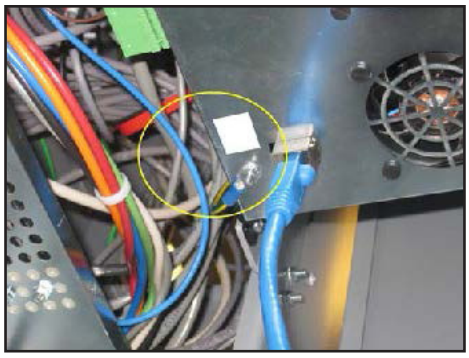


Bottom of Card Rack



Small PC Board Panel, Inner Frame



Outer Frame Left Side Panel

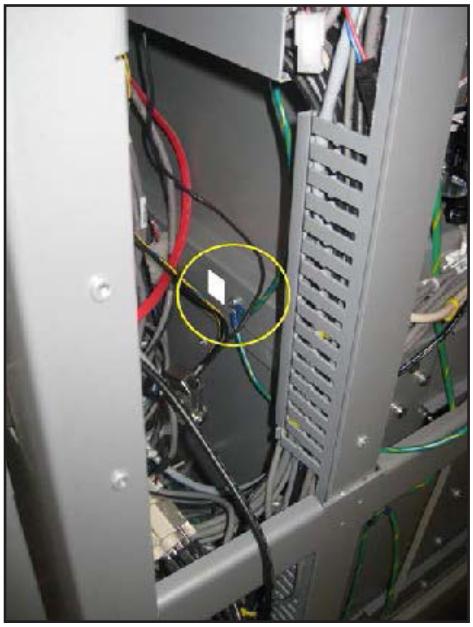

Inner Frame


PRINTER AND MATERIAL CART WEIGHTS

		lbs	kg
ProJet 7000 Printer	without material delivery module	715.0	325.0
Material Delivery Module	full	433.4	197.0
	empty	220.0	100.0

3 OVERVIEW


The ProJet™ 7000 is a 3-D solid modeler that generates plastic models or prototype parts from computer data. The system builds parts by processing a three-dimensional CAD file to represent cross sections, or slices. The ProJet™ 7000 creates models by profiling each slice as a layer on the surface of a print material. A laser beam solidifies each layer of material. After each layer is profiled, the vertical elevator system lowers the prototype part into the print tray, and immerses the part beneath the surface of the material to a predefined depth. Additional print material is added by a print applicator, which ensures consistent layer thickness. This process is repeated for each layer until all of the data for the model is processed. The part is then removed from the ProJet™ 7000 for post-processing.

ProJet™ 7000 COMPONENTS

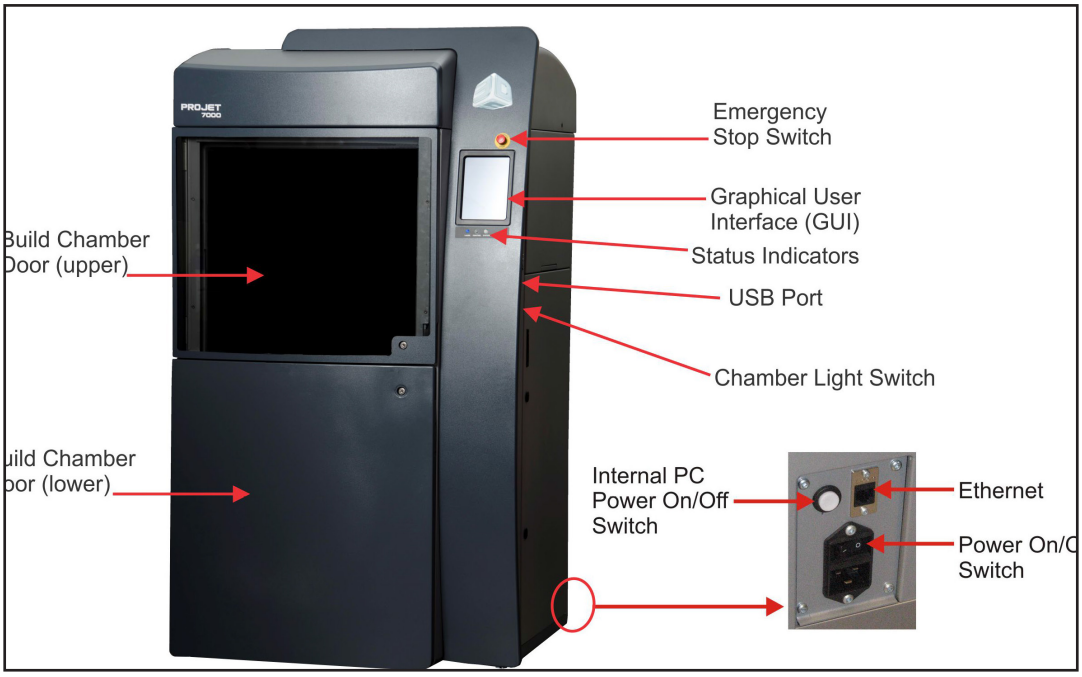


Item	Function
Emergency Stop Button	The emergency stop button (E-Stop), is pressed any time the operator experiences or suspects a machine malfunction. Pressing the E-Stop disables the laser and all motors. Pressing the E-Stop does not switch off all power to the machine.
Graphical User Interface	The graphical user interface (GUI), provides a touch screen which allows operator to perform all functions needed to operate the machine and build parts.
Status Indicators	The three LEDs on the front panel indicate the readiness of the machine and the laser.
USB Ports	Allows the connection of an external mouse and keyboard
Chamber Lights Switch	Switches the build chamber lights On or Off.
Internal PC Power On/Off switch (and Indicator)	This switch is used to reset the PC or power the PC On/Off. The switch is illuminated to indicate the PC is powered on.
Ethernet	Ethernet cable connection.
Power On/Off Switch	Switch power to the machine On or Off.
Lower Build Chamber Door	Used to access the material cart area. This door can be opened only during certain times, as indicated by the status indicators. The door is provided with interlock switches which will disable the machine and switch the laser off if the door is opened.
Upper Build Chamber Door	Used to access the build chamber. This door can be opened only during certain times, as indicated by the status indicators. The door is provided with interlock switches which will disable the machine and switch the laser off if the door is opened.

BUILD CHAMBER - RIGHT SIDE

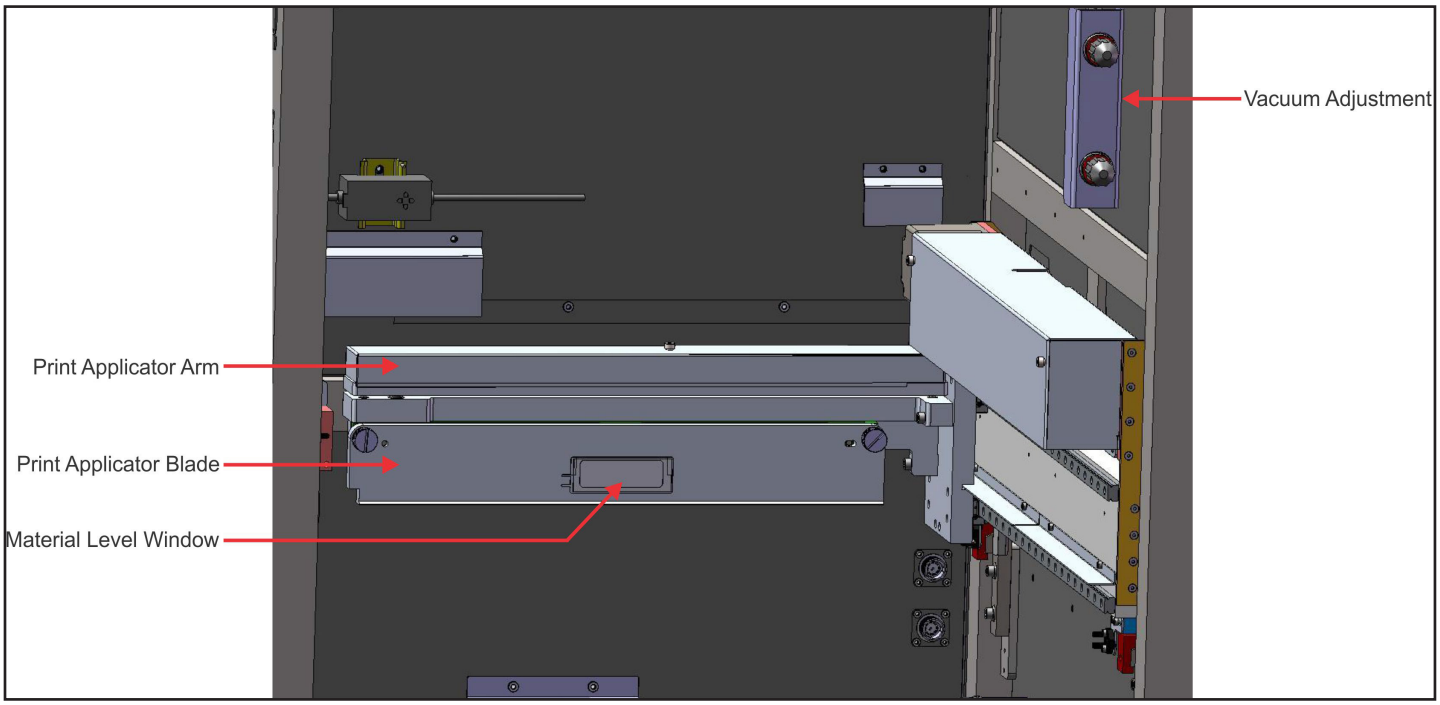


Item	Function
Vacuum Adjustments	Adjust the vacuum delivered to the print applicator.
Material Level Window	Provides a visible check of the material within the print applicator blade.
Print Applicator Blade	The part of the print applicator that contacts the material in the print tray.
Print Applicator Arm	Moves front to back across the print tray (not shown). The print applicator travels in the Y axis.

BUILD CHAMBER - LEFT SIDE

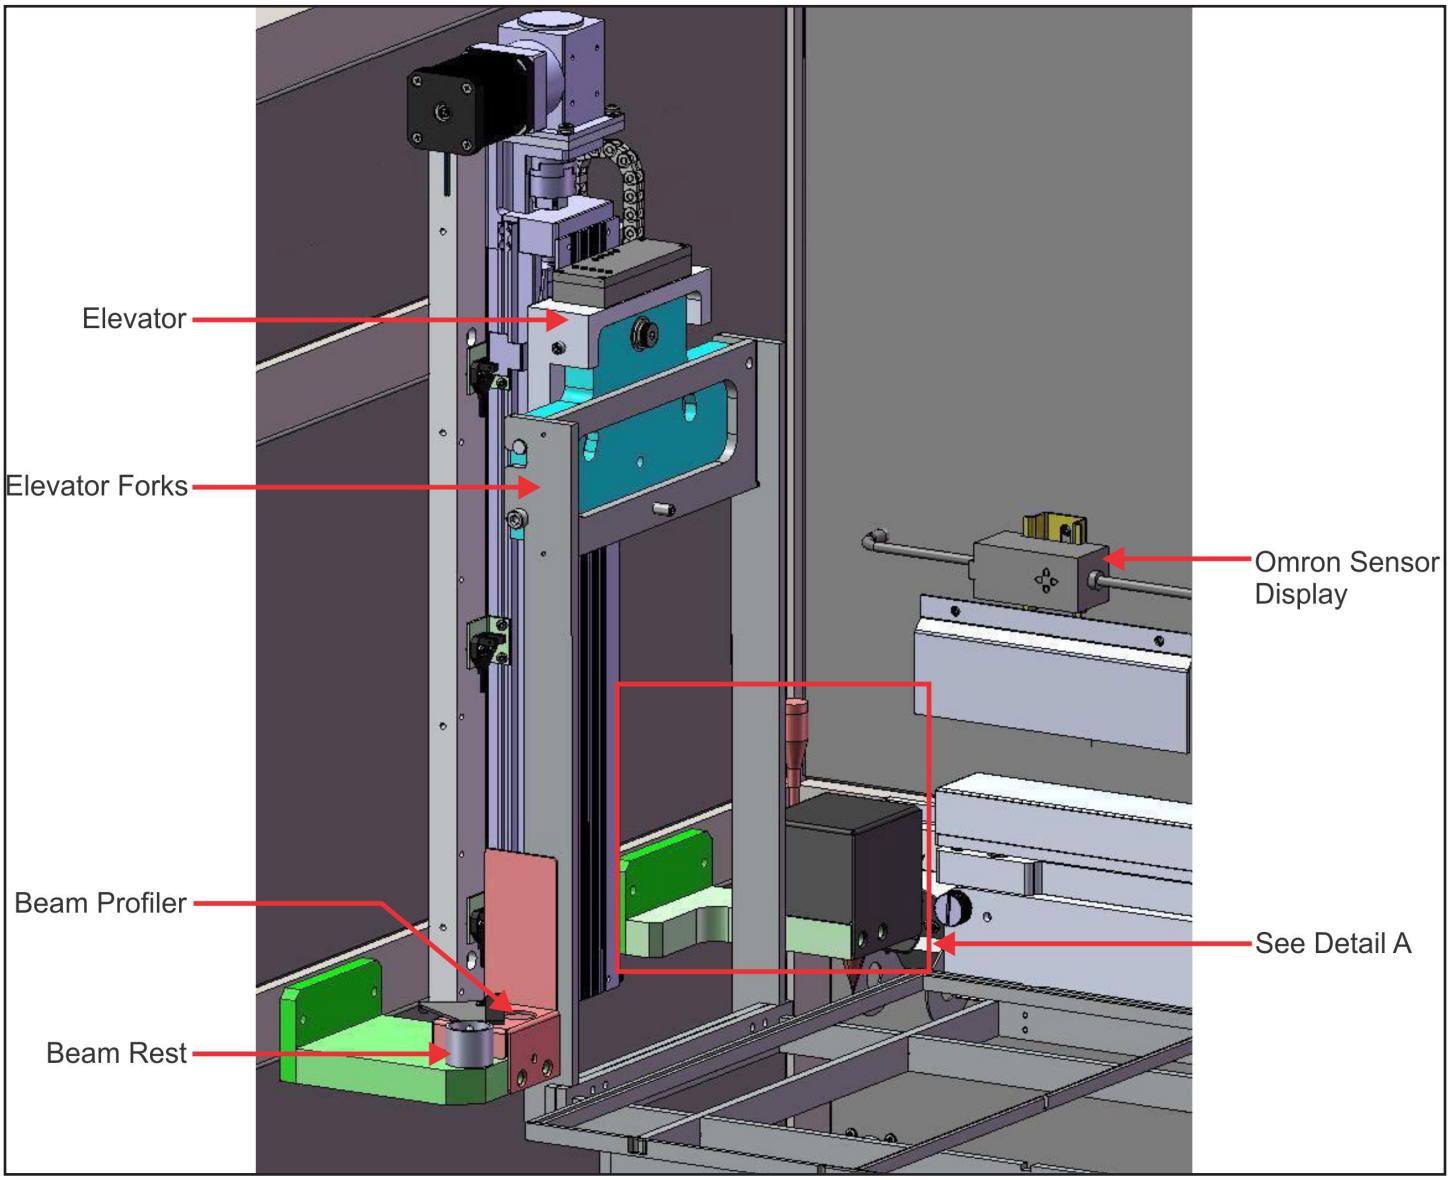

Item	Function
Omron Sensor Display	Displays the measurements obtained by the omron sensor.
Beam Rest	Beam is projected onto the beam rest during the print leveling cycle.
Beam Profiler	A UV-sensitive detector used for beam calibration and adjustment.
Elevator Forks	Supports the build print platform
Elevator	Moves the build platform in the Z axis (up and down).

Detail A

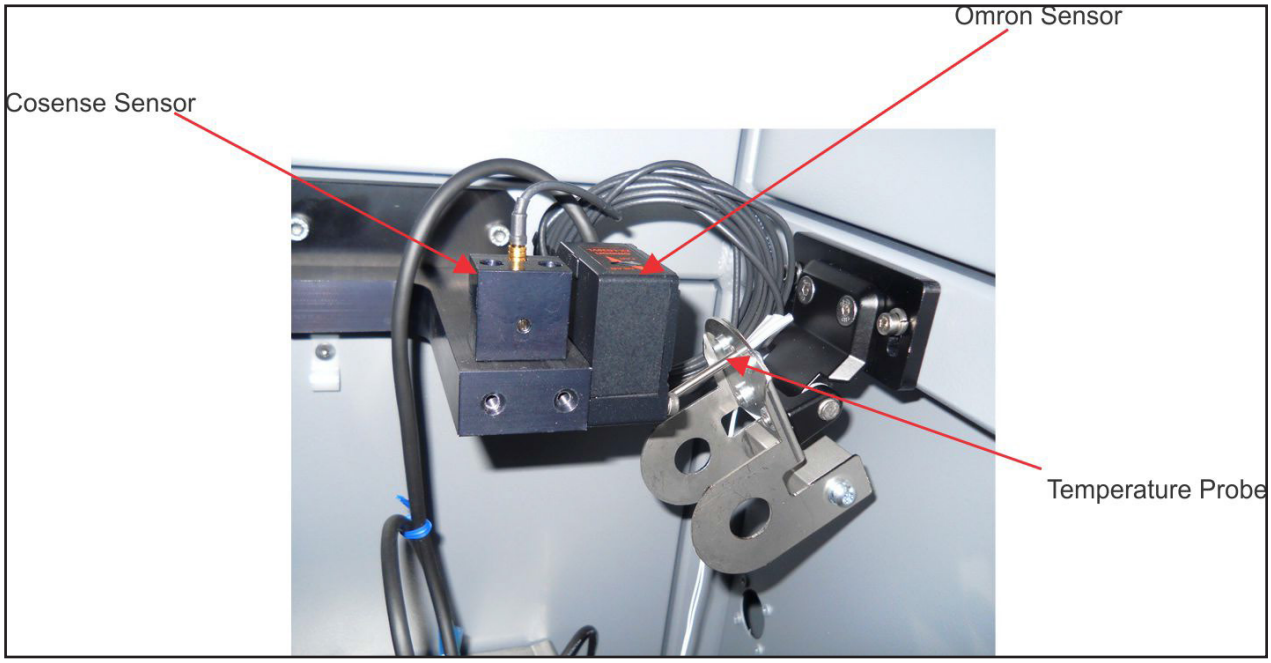


Item	Function
Omron Sensor	Detects the level of the material in the print tray. Used for fine adjustment only.
Temperature Probe	Measures the temperature of the material in the print tray.
Cosense Sensor	Detects the level of the material in the print tray. Used for coarse adjustment only.

LOWER BUILD CHAMBER



Item	Function
Chamber Heaters	Provides a controlled temperature for the build chamber and material.
Material Cart Umbilical	Provides power and control signals to the material cart.
Cosense Sensor	Locating Pin Secures the material cart in a fixed position

MATERIAL CART

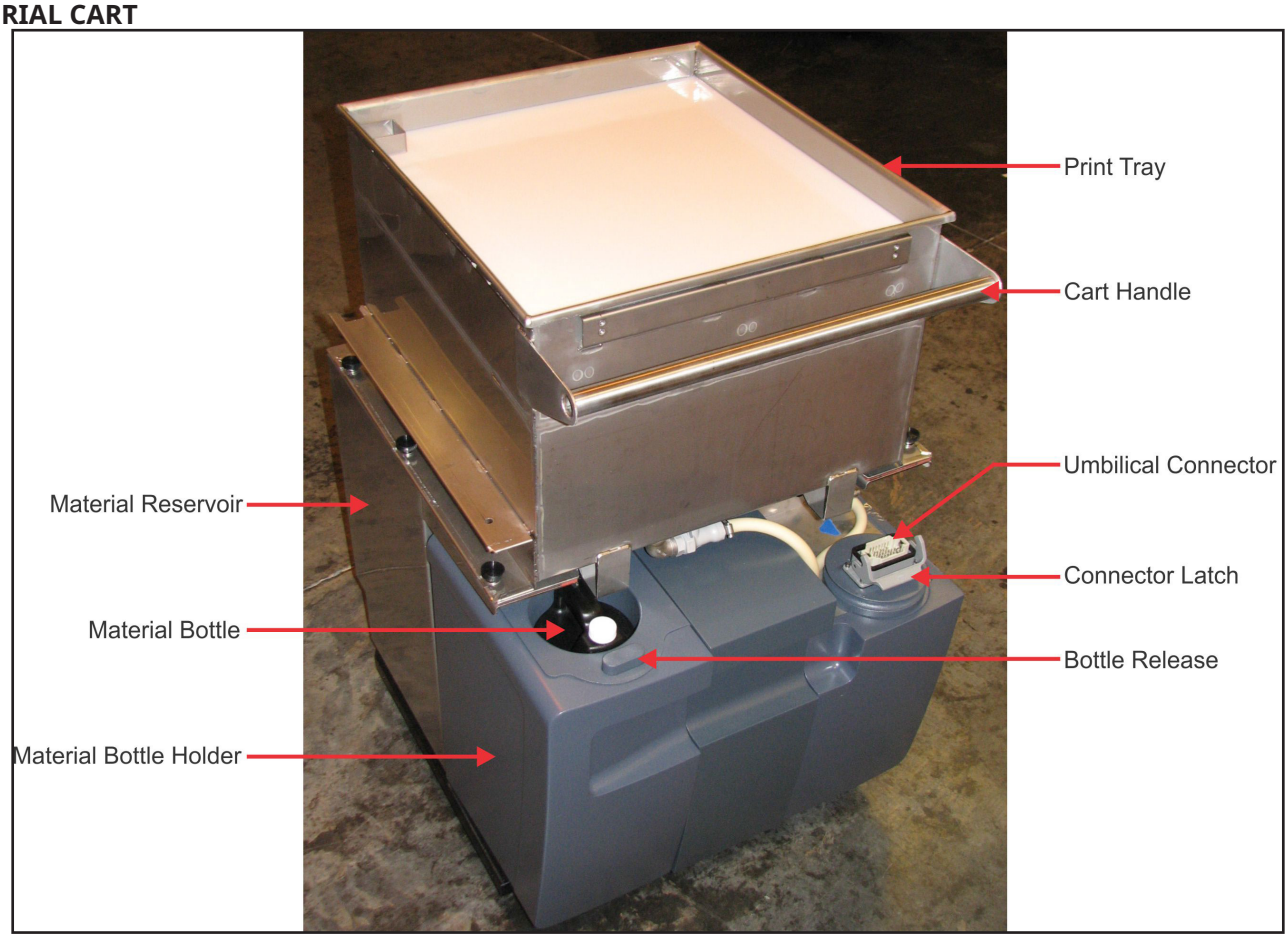

Item	Function
Print Tray	Contains the print material used during the build process.
Cart Handle	For moving the material cart.
Umbilical Connector	Umbilical from the machine is connected here to provided power and control signals to the material cart.
Connector Latch	Secures umbilical from the machine to the material cart connector.
Bottle Release	Press to release the material bottle from the coupling located in the bottom of the material bottle holder.
Material Bottle Holder	Holds material bottles. Material bottles are seated onto the coupling in the bottom of the holder. The material bottle will extend, allowing the user to change material bottles without removing the material cart from the machine. See figure below.
Material Bottle	Material bottles provide new material for the system. The material cart pump transfers material from the material bottles to the material reservoir.
Material Reservoir	Holds the material needed to fill the print tray for initial filling and during normal operation

Material Cart with Bottle Holder Extended



FRONT PANEL INDICATORS



Blue LED - Laser

State	Indication
Off	Laser is off.
Flashing	Blue LED does not flash.
On	Laser is enabled.

Green LED - Control

State	Indication
Off	Control systems are not enabled. The machine is not ready for use.
Flashing	Machine is in Bypass Mode.
On	Control systems are enabled. The machine is ready for use.


Amber LED - System

State	Indication
Off	All safety and interlock systems have not been satisfied. Laser safety shutter is not operational.
Flashing	Amber LED does not flash.
On	All safety and interlock systems have been satisfied. Laser safety shutter is operational.

4 USER INTERFACE

NOTE: Please see the section New Features for Firmware v1.6.2846 on pg. 47 to view updated options and functions in the ProJet 6000 GUI.

OPENING SCREEN AND LOGIN

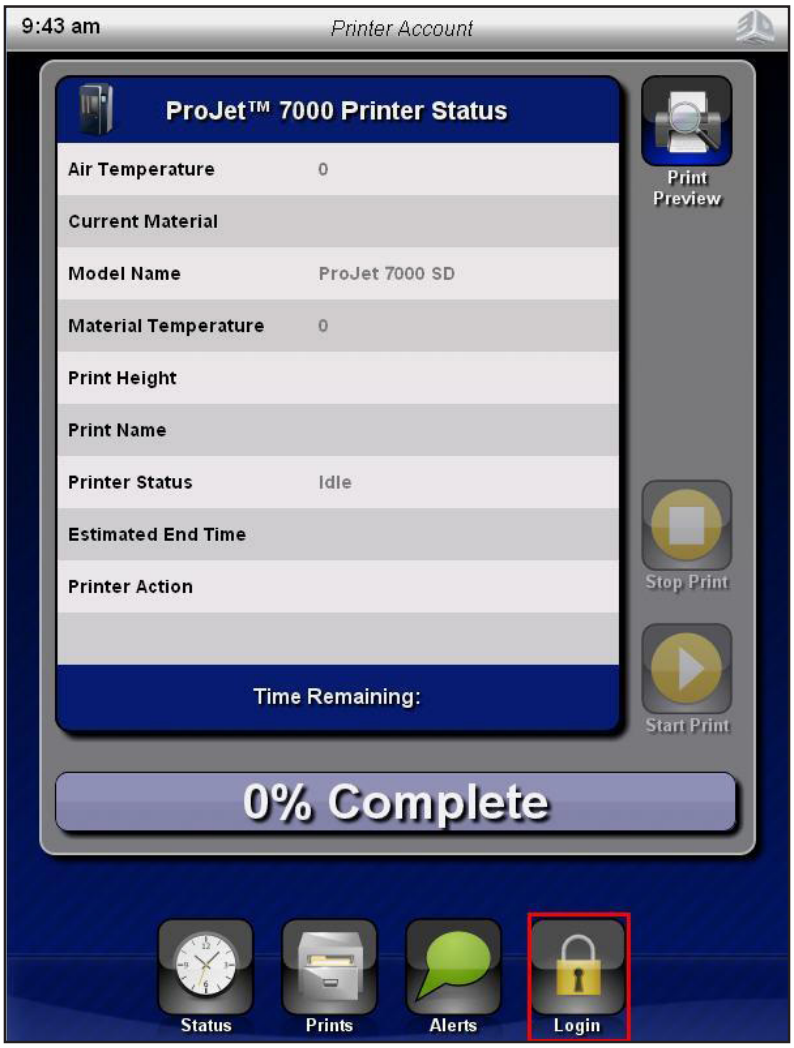


1. After the machine is powered up, the opening screen is displayed. To begin the login process, touch the **Login** icon.




2. The login screen is displayed. Touch the **Username** field.
3. A keyboard is displayed. Enter your username and password.
    a. Key in your username.
    b. Press **Enter**.
    c. Key in your password.
    d. Press **Enter**.
    e. Touch the **Submit** icon.
4. After logging in, the Status screen is displayed initially.

This screen provides the operational status of the machine. The details of this screen are explained in section **Status**.

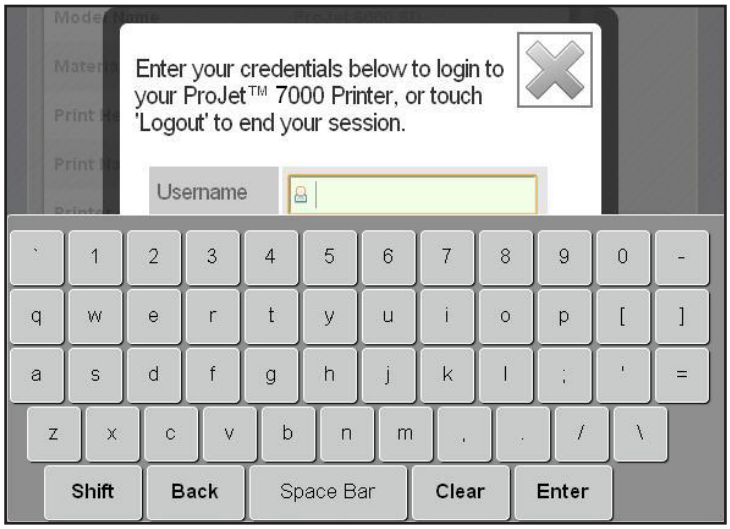

The six icons located at the bottom of the screen provide access to all of the functionality of the ProJet™ 7000. The sections that follow (see below), provide a detailed description of all functions, controls and indicators which are available on the ProJet™ 7000.

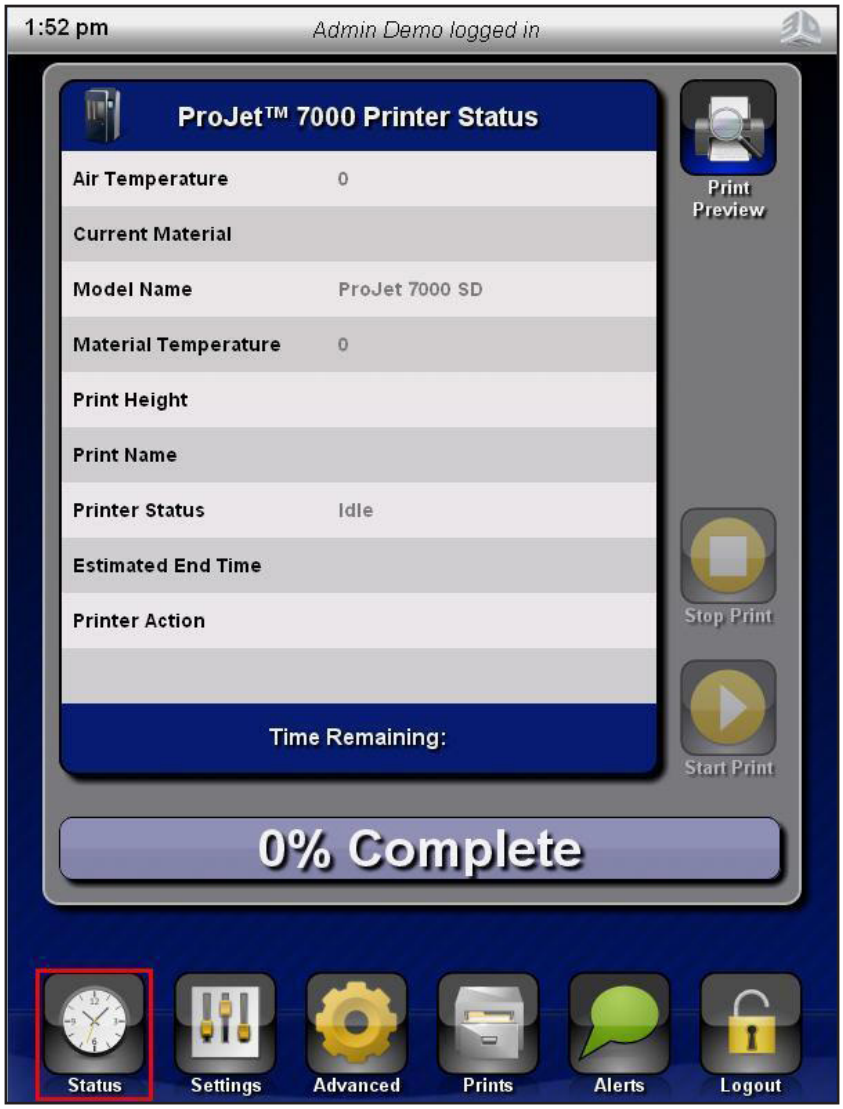


STATUS



Controller/Indicator	Function
Air Temperature	Air temperature inside the build chamber.
Current Material	Material type presently in the cart and print tray.
Model Name	Specific model of ProJet™ 7000.
Material Temperature	Temperature of the material in the print tray.
Print Height	Height of print job in the Z axis.
Print Name	Name of print file presently building.
Printer Status	Present status of the ProJet™ 7000.
Estimated End Time	Estimated time the present build will end.
Print Preview	Allows you to view the current layer and delete parts if the build is paused.
Printer Action	Displays the present action of the printer (Profiling, Drawing, etc.)
Stop Print	Stop building the present print job.
Start Print	Starts a print job or re-starts a suspended build job **Start** becomes **Resume** when paused.


SETTINGS

The following sections describe the functionality of the **Settings Screen**.

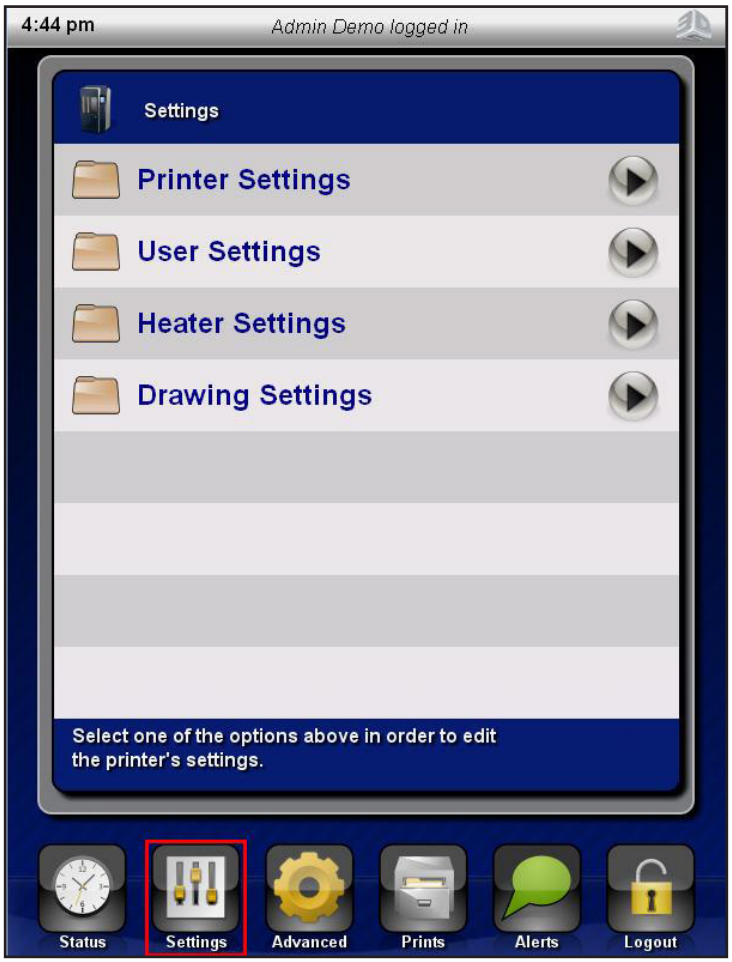


PRINTER

Printer Settings provides access to **Global Print Settings**, **Network** and **Display Settings** for the ProJet™ 7000.

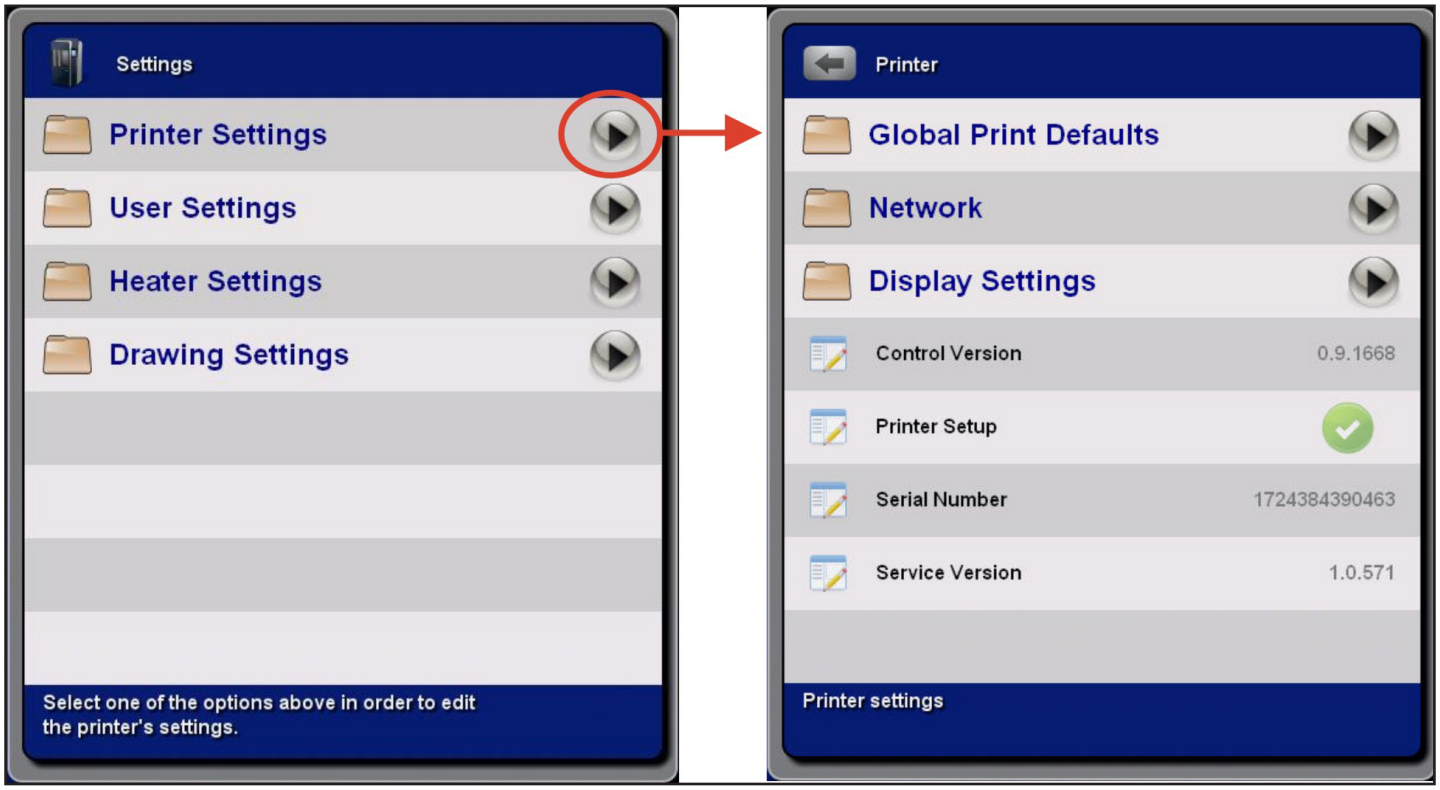

Global Print Defaults


1. Touch **Global Print Defaults** to display the Global Print Settings for the ProJet™ 7000.

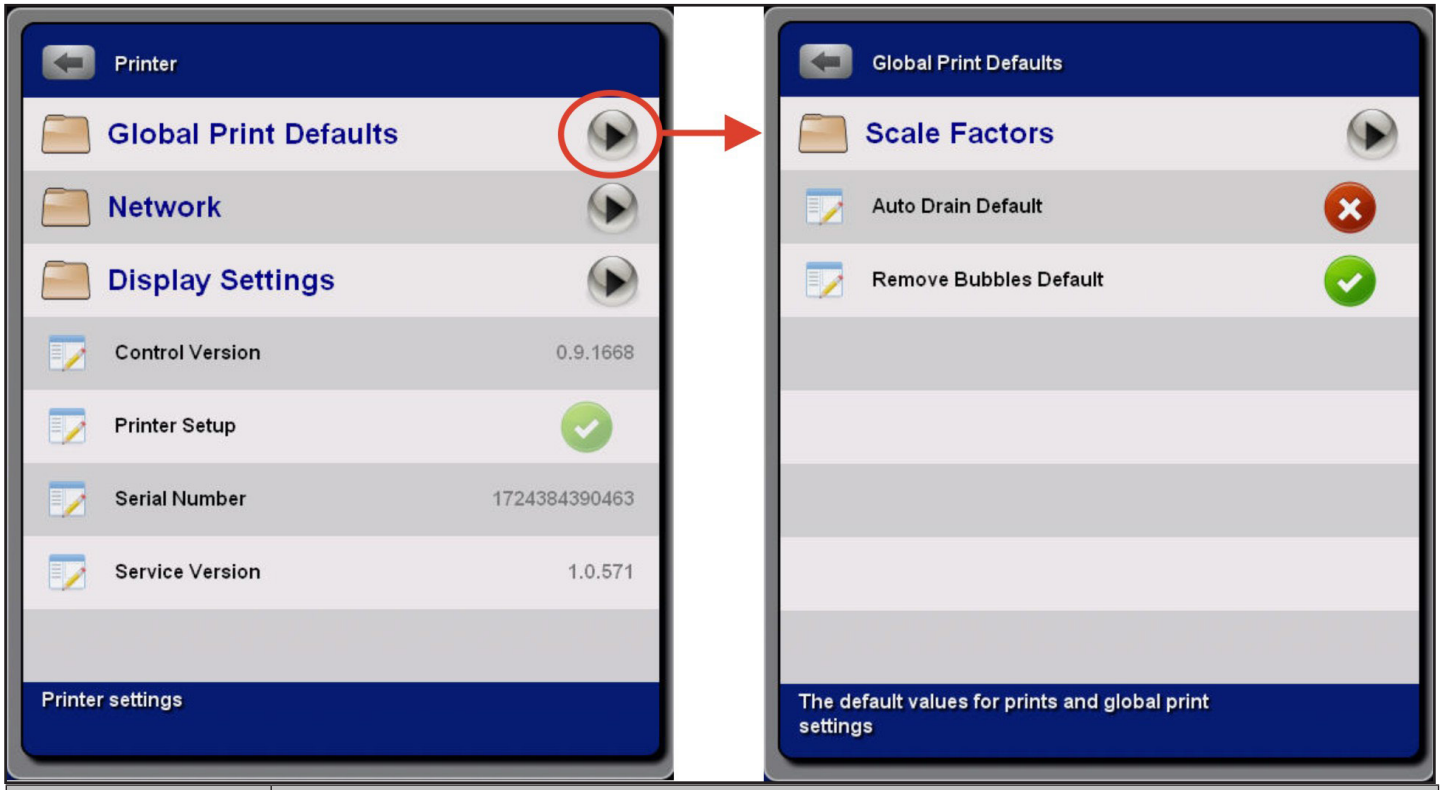

Controller/Indicator	Function
Auto Drain Default	The **Auto Drain** function automatically moves the print platform to the offload position at build completion. This control sets the default for the Auto Drain function to On or Off.


Controller/Indicator	Function
Remove Bubbles Default	The **Remove Bubbles** function utilizes the print applicator to remove bubbles from the print material at the beginning of a build. This control sets the default for the Remove Bubbles function to On or Off.

Scale Factors

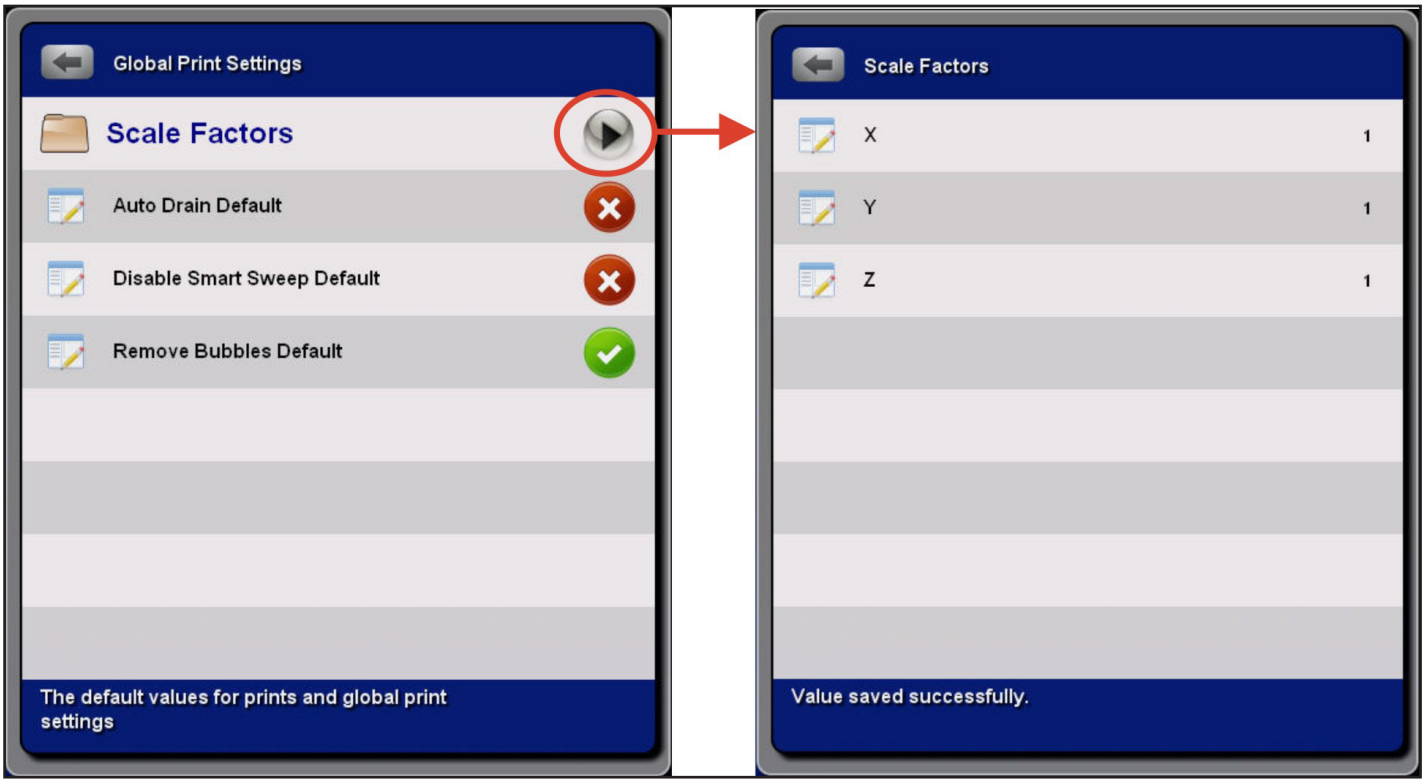


NOTE: Scale Factors are specific adjustments made for each individual machine. Refer to the VisiJet® SL Materials for ProJet™ 6000/7000 Systems - Part Building and Post-Processing for the recommended starting scale values for the specific VisiJet SL material and build mode.

2. Touch **Print Scale Factors** to display the scale factors for the X, Y and Z axis.
3. The scale factors can be changed from this screen. For example, to change the scale factor for the X axis from 1 to 1.2:

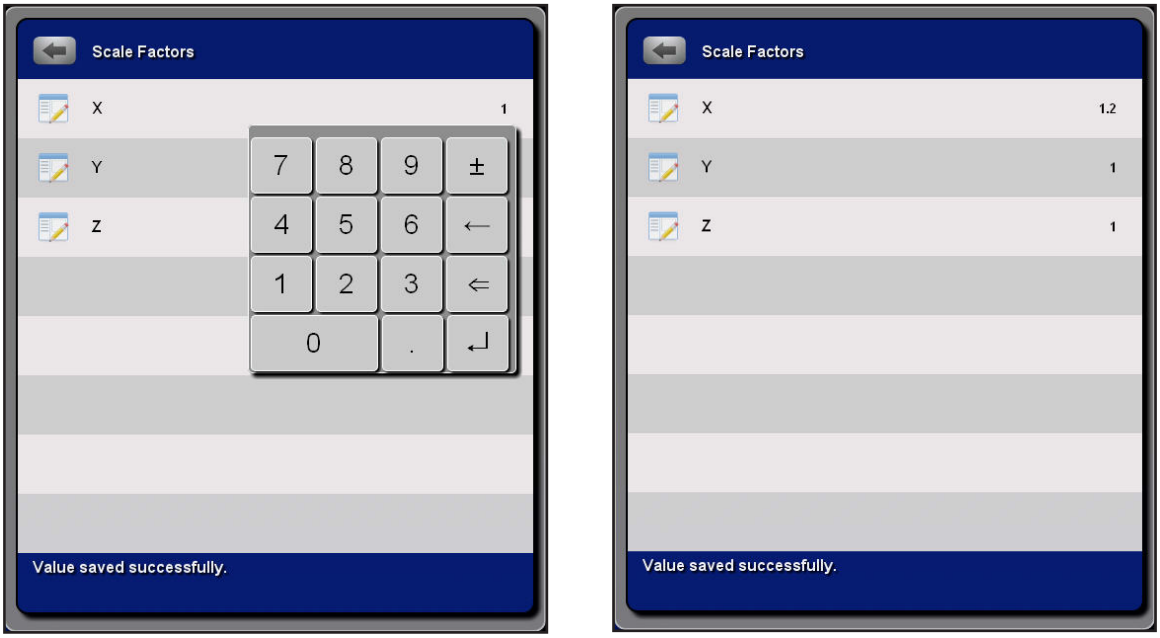

a. On the display, touch the **1** displayed for **X**. The keyboard appears.
b. Touch the decimal point and then the **2**.
c. Touch the return key.

4. The scale factors can be changed from this screen. For example, to change the scale factor for the X axis from 1 to 1.2:

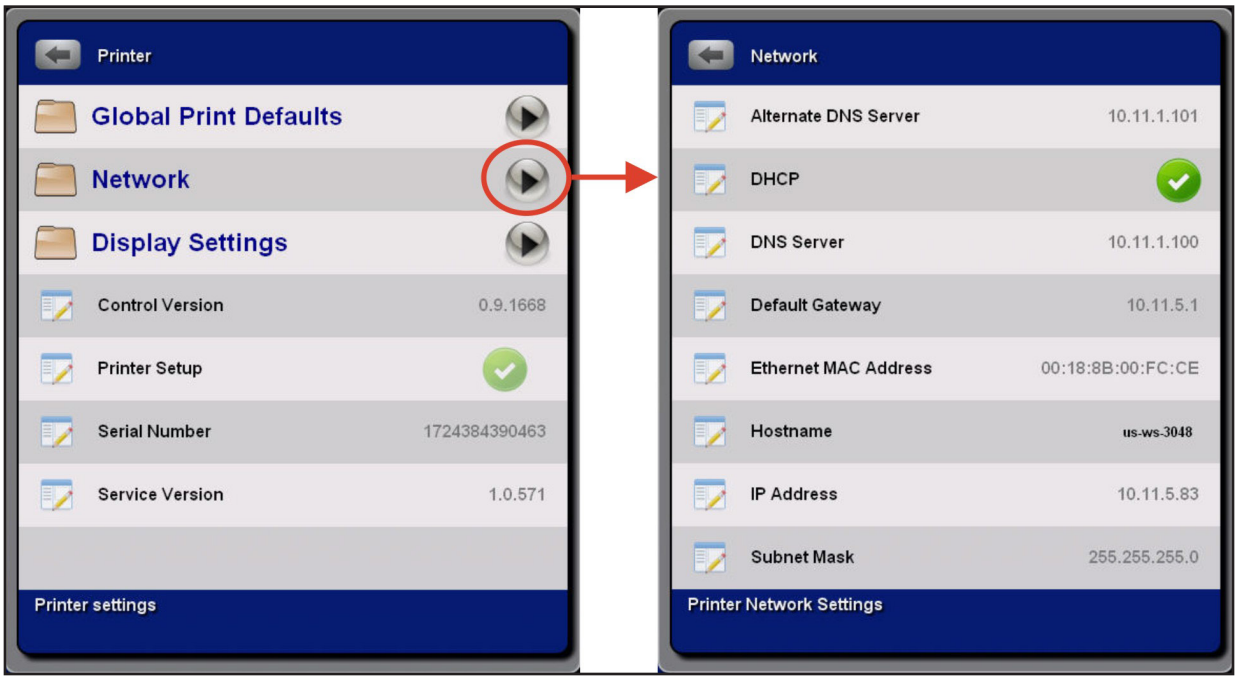


Network

5. Touch **Network** to display the network settings for the ProJet™ 7000. Only the **Ethernet MAC Address** and the **Hostname** can be changed from this display. The remainder of the panel is for information only and those settings must be changed in Windows.

Display Settings

6. Touch **Display Settings** to display the display settings for the ProJet™ 7000. This panel is for information only. If other changes to the network settings are required, contact your local Authorized Service Technician to assist making these changes.

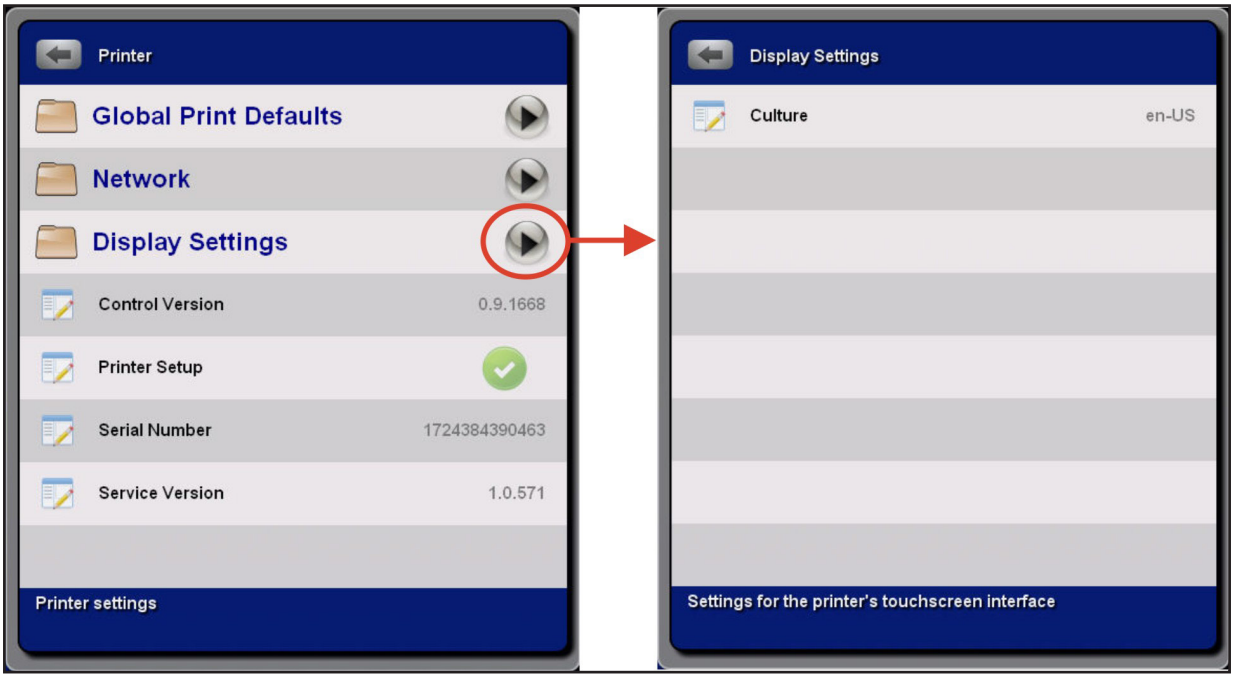


USER SETTINGS

The **User Settings** screen is accessed from the **Settings** screen as shown.




1. To add new users to the ProJet 7000, press **Add New User**.
2. Add the new user name.
    a. The **Login** is the username when logging in but the display name is displayed everywhere else.
    b. Press the **Login** field.
3. A keyboard is displayed.
    a. Enter the name of the new user.
    b. Press **Enter**

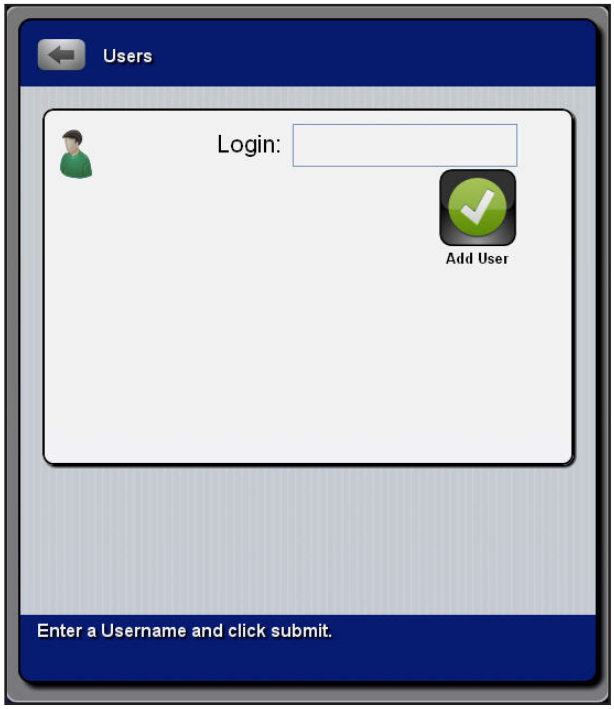





c. Press **Add User**

4. Press the **Password** field and the keyboard is displayed.
    a. Key in the password.
    b. Press **Enter**.
    c. Select the type of user from the **Role** pull-down.
    d. Press **Save Changes**.
5. The screen will return to the **Users** screen with the new user displayed.

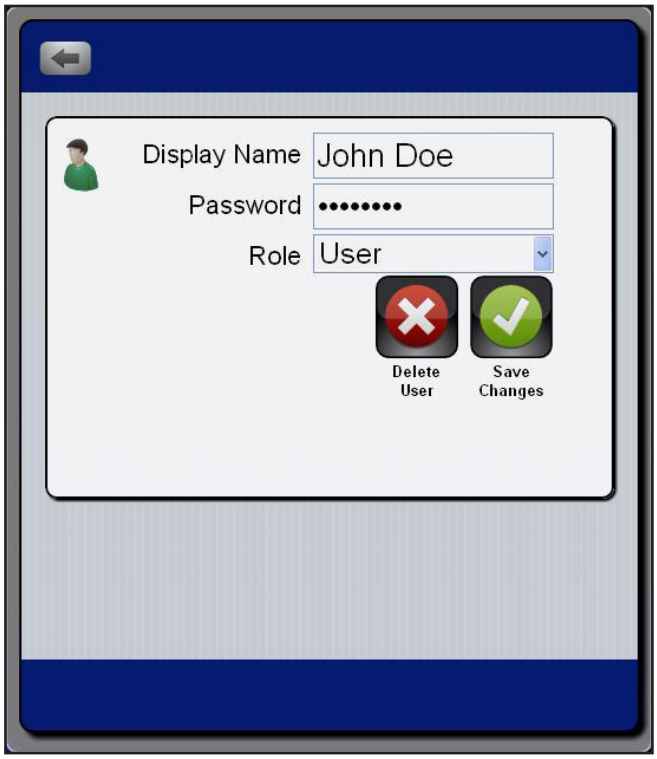

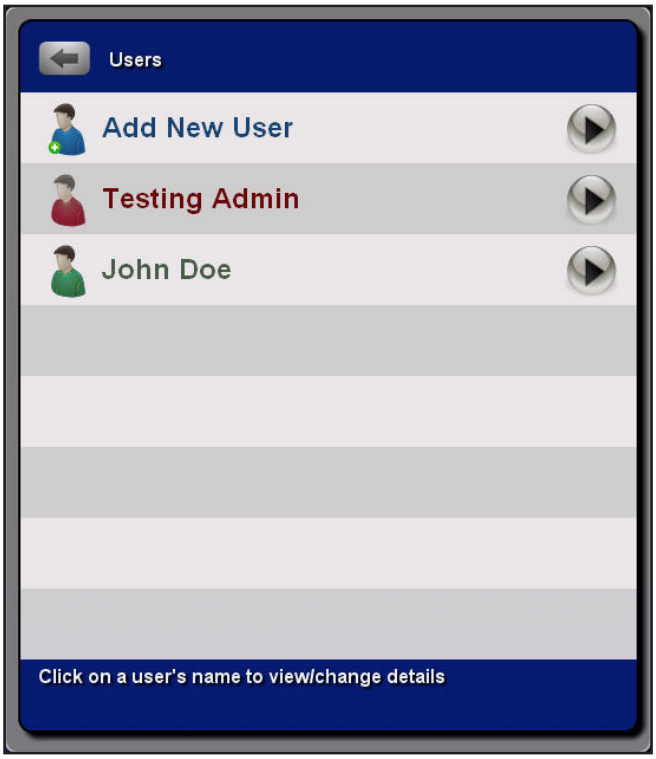


Heater Settings

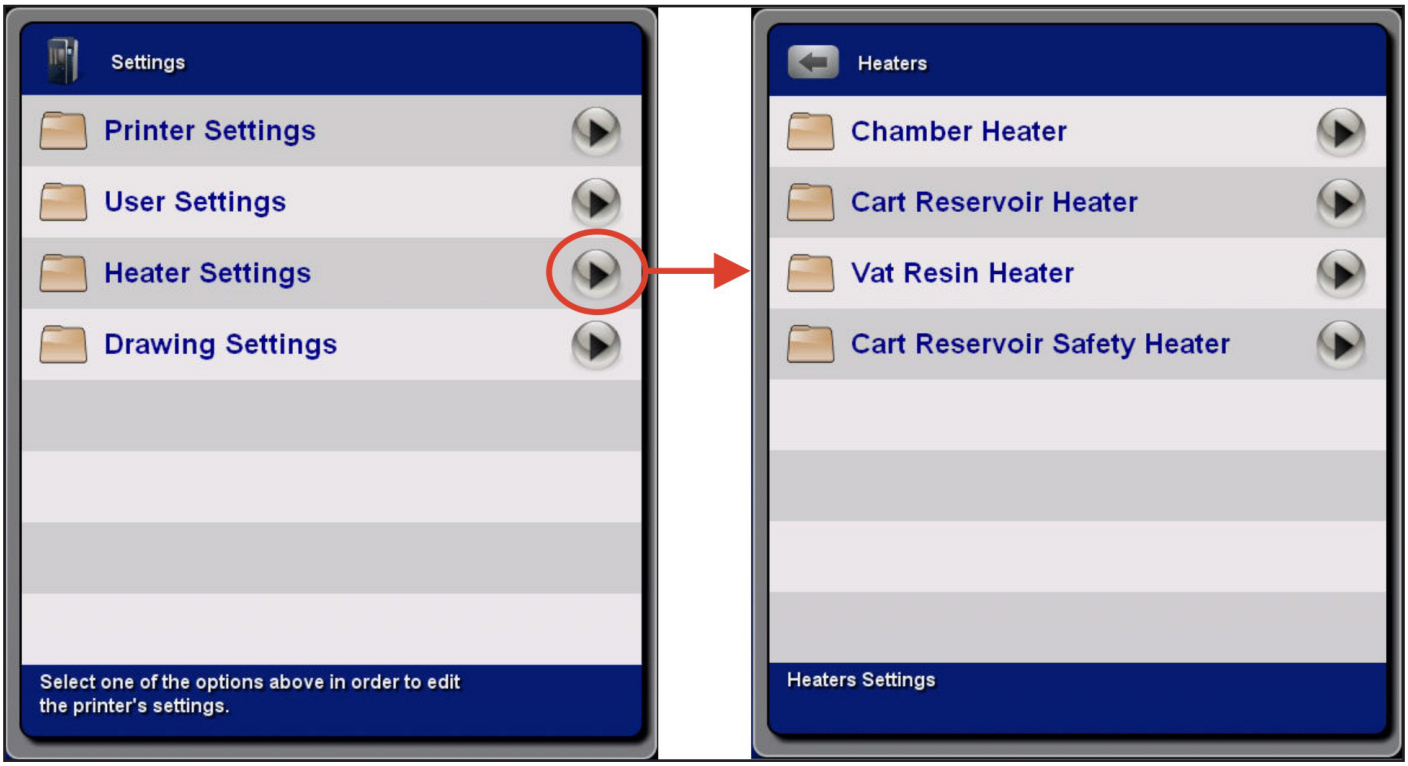

Each control allows the user to set the **Setpoint** for that particular system.


Controller	Function
Chamber Heater	Set the Setpoint temperature for the build chamber.
Cart Reservoir Heater	Set the Setpoint temperature for the resin in the cart reservoir.
Vat Resin Heater	Set the Setpoint temperature for the resin in the print tray.
Cart Reservoir Safety Heater	This is a safety setting. This sets the upper limit allowed for the resin temperature in the cart reservoir. When the resin temperature reaches the upper limit, the cart reservoir heater is switched off.

Drawing Settings

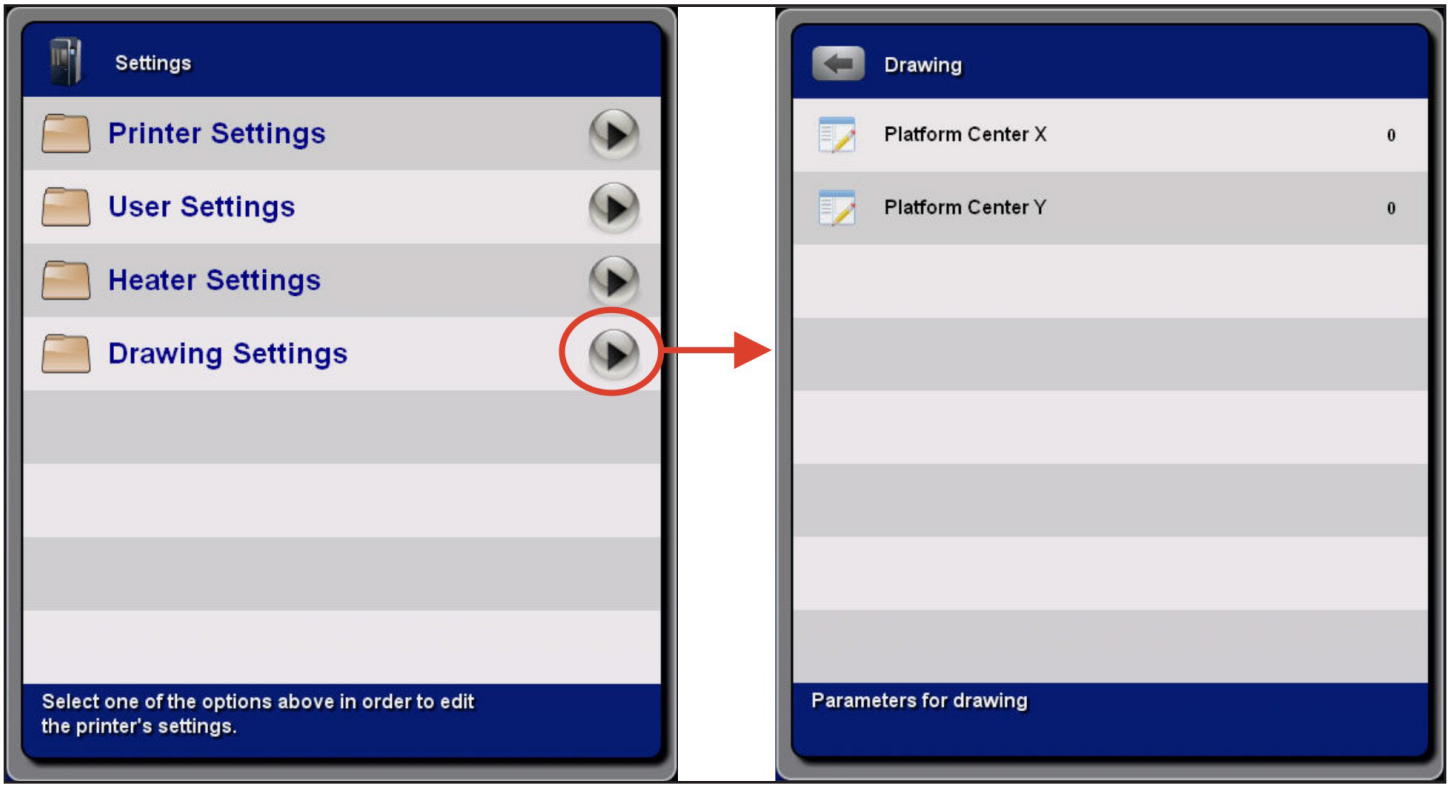

Control	Function
Platform Center X	Allows the user to manually enter an offset for the center of the build platform in the X axis
Platform Center Y	Allows the user to manually enter an offset for the center of the build platform in the Y axis

ADVANCED

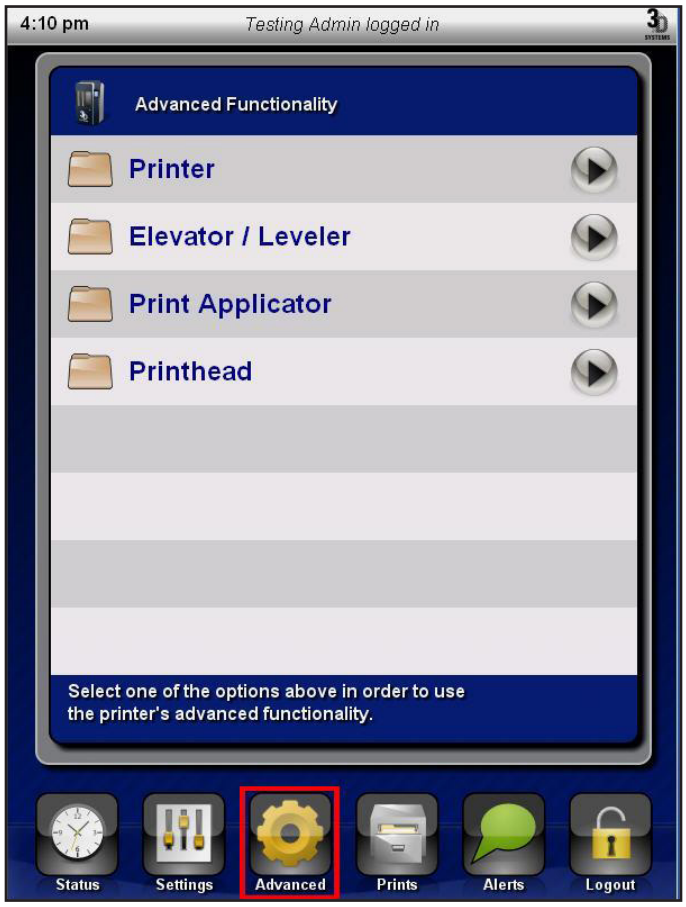


Printer




Control/Indicator	Function
Unregister Printer	Removes all customer information from the printer.
Shutdown Printer	Switches the printer off.

Elevator-Leveler

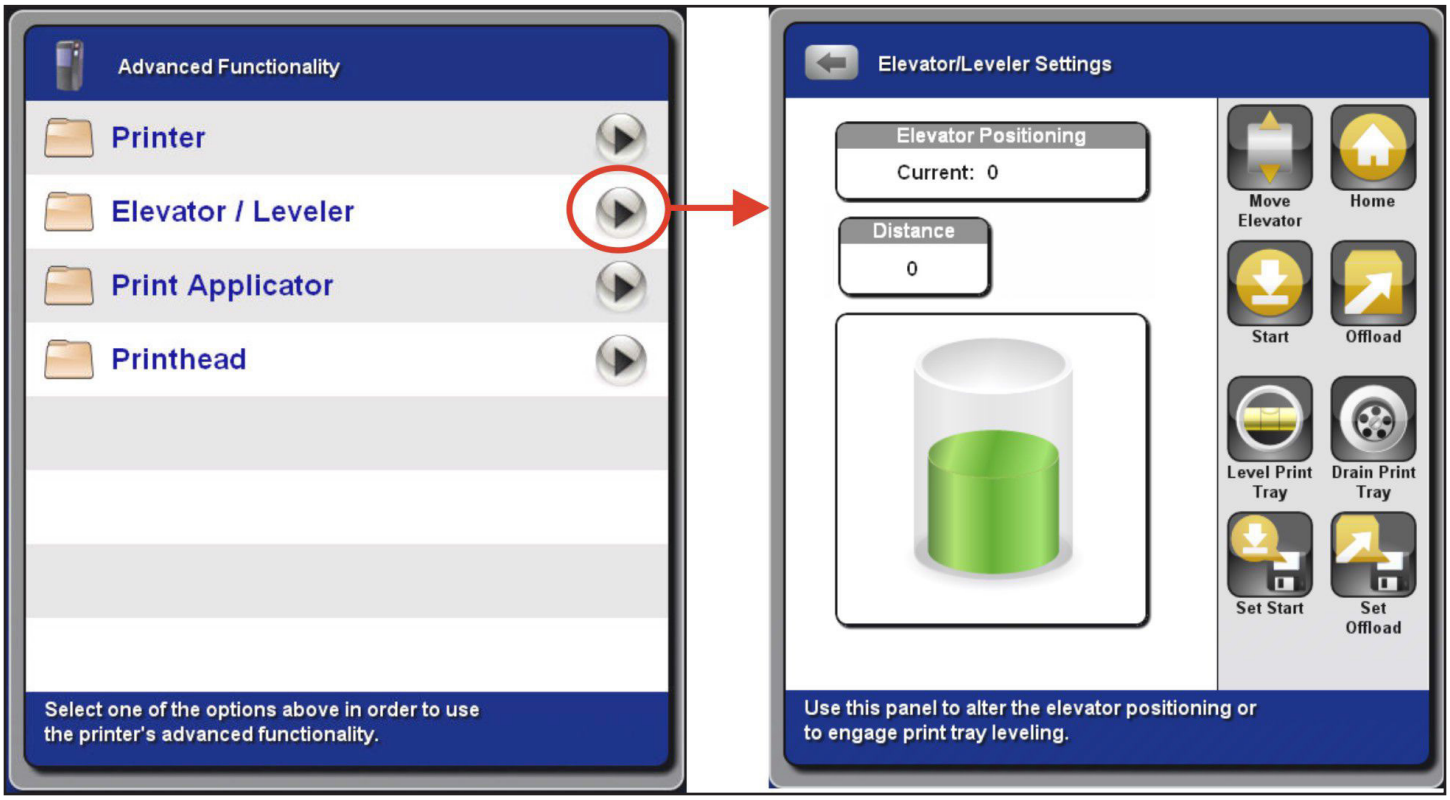

Control/Indicator	Function
Elevator Positioning	Shows the current position of the elevator relative to the home position.
Distance	Specifies distance, in inches, from current position; negative moves elevator down, positive moves elevator up.
Move Elevator	Manually moves elevator at the Distance specified.
Home	Moves the elevator to the home switch and redefines the home position (relative zero position of the elevator).
Start	Moves the elevator to the Start position, as defined by Set Start.
Offload	Moves the elevator to the Offload position.
Level Print Tray	Levels the material in the print tray. If empty, fills the print tray with material.
Drain Print Tray	Drains all material from the print tray.
Set Start	Saves the elevator's current location as the Start position.
Set Offload	Saves the elevator's current location as the Offload position.


Print Applicator

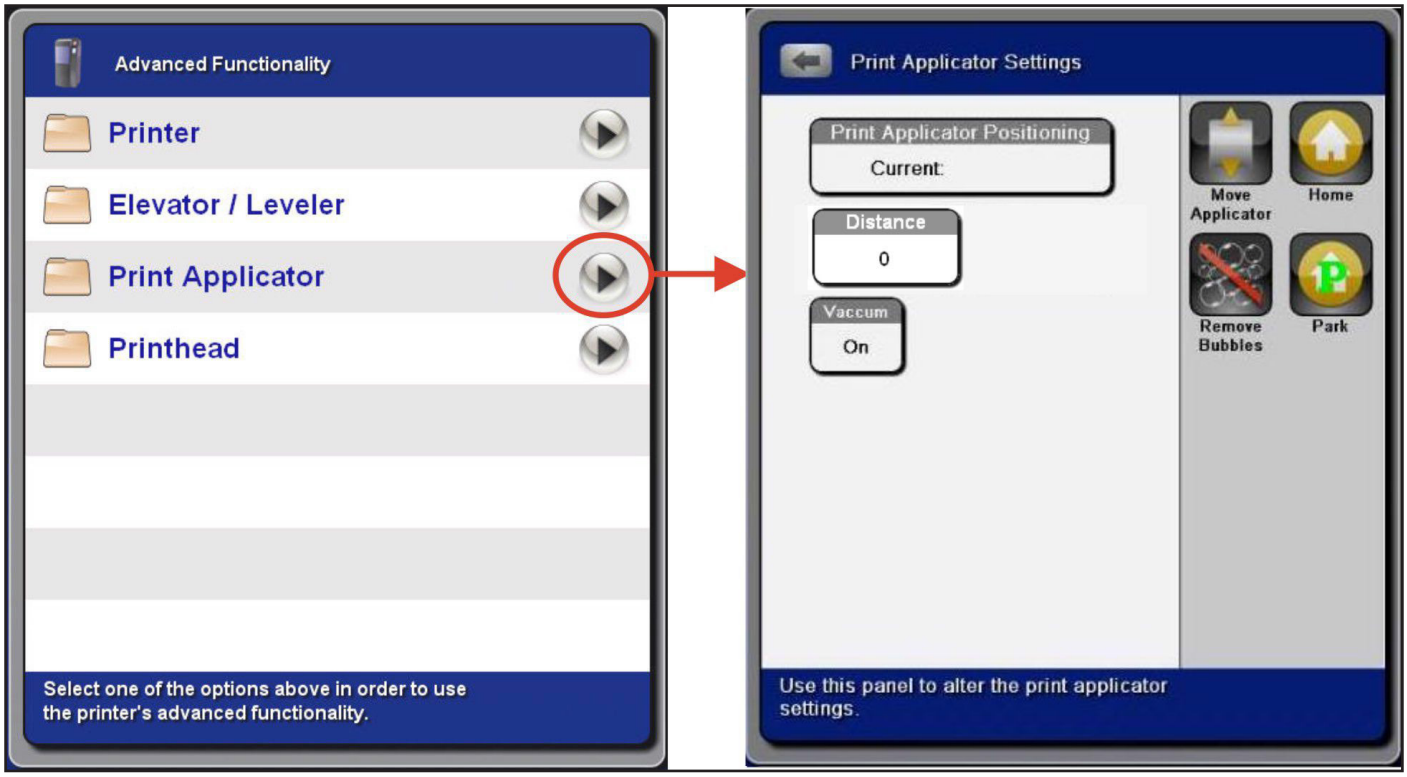

Control/Indicator	Function
Print Applicator Positioning	Shows the current position of the print applicator relative to the home position.
Velocity	Specifies the applicator speed, in inches per second, during manual motion. This setting does not affect the applicator speed during the build.
Distance	Distance in inches to move.
Vacuum	Switch vacuum for the applicator On or Off.
Move Applicator	Manually moves print applicator as specified by the user, with velocity/distance.
Home	Moves the applicator motion axis to the home position and redefines the home position (relative zero position of the applicator).
Remove Bubbles	Manually starts the routine for removing bubbles.
Park	The print applicator on the 7000 must be in the Park position for the elevator to move up. The Park position is at the rear limit of the 7000 recoater axis.

NOTE: The default VisiJet material heater settings can be found in the VisiJet® SL Materials for ProJet™ 6000 Systems - Part Building and Post-Processing.

Printhead

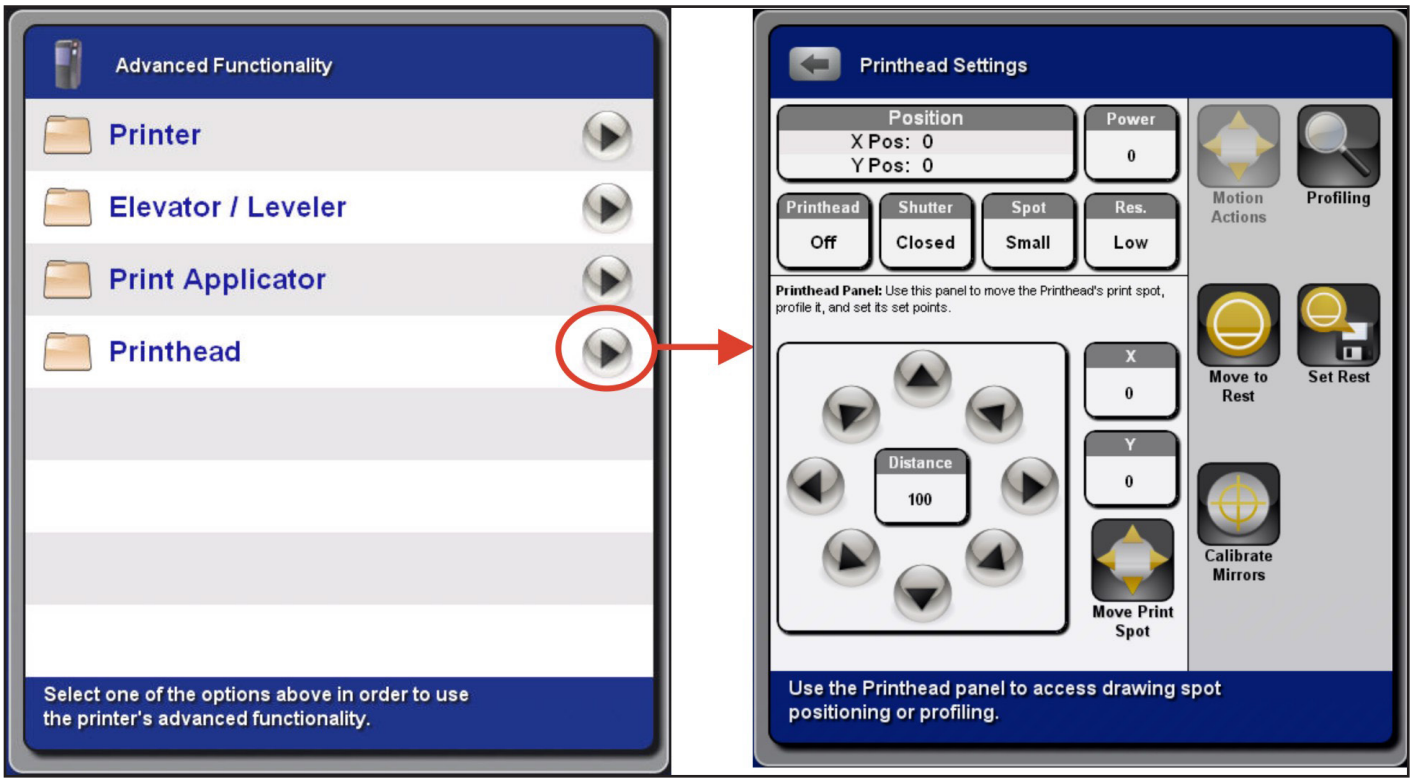

Control/Indicator	Function
Position	Current X Position and Y Position of the beam in mirror counts.
Power	Requested laser power.
Printhead	Switch the laser On or Off.
Shutter	Open and close the shutter.
Spot	Set the IPM to the small or large spot focus position.
Res.	System Mode, select High or Low.
Motion Actions	Select **Motion Actions** mode. See table below for more information.
Profiling	Select **Beam Profiling** mode. See table below for more information.
Move to Rest	Moves the beam to the rest position.
Set Rest	Set the rest position for the beam.
Calibrate Mirrors	Presently not enabled.

When **Motion Actions** is selected, the panel displays the functions outlined in red.


Control/Indicator	Function
X	Specifies the absolute coordinate for X in mirror counts.
Y	Specifies the absolute coordinate for Y in mirror counts.
Move Print Spot	Move beam to the position specified by **X** and **Y**.
Distance	Defines the distance increment when moving the beam with the arrow buttons. To move the beam faster, use a larger value. For fine movement, use a smaller value.



Arrow keys move the beam in the specified direction.


When **Profiling** is selected, the panel displays the functions outlined in red.

Control/Indicator	Function
X Width	Shows the beam width, in mils, in the X direction.
Y Width	Shows the beam width, in mils, in the Y direction.
Max ADC	Shows the maximum intensity of the beam.
Peak Sum	Indicates how well the beam is focused; the higher the value, the better the focus.
Profile at pinhole	Perform a profile of the Printhead's drawing spot at the specified pinhole.
Find Pinholes	Call this action once the Printhead's drawing spot is on the profiler to have the Printer find all the profiler pinholes.

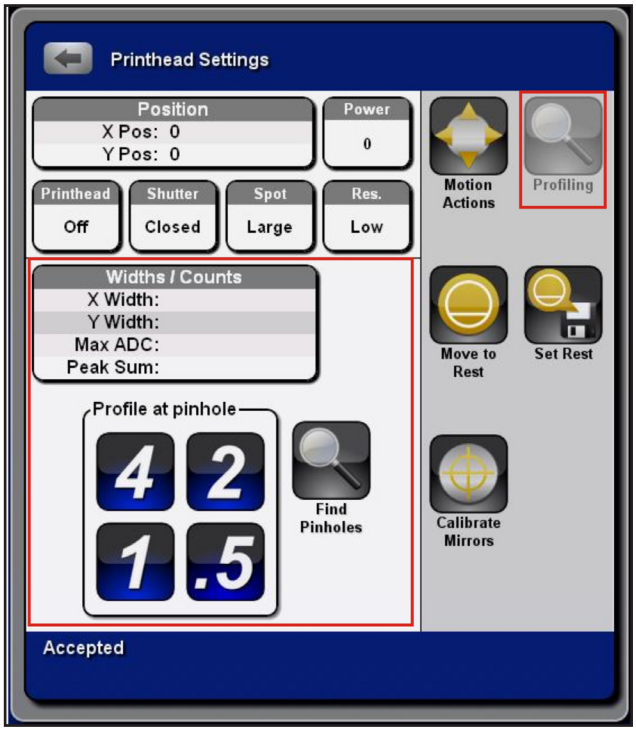


Prints

After print jobs have been submitted to the printer, the user may use the front panel to select, start and view information about a particular print job.

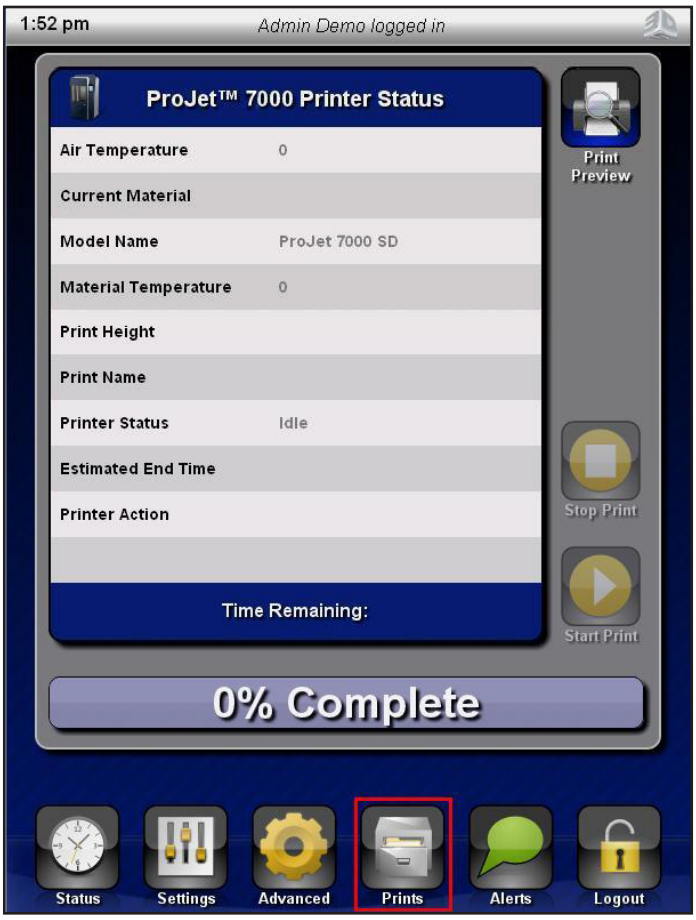


1. Press the **Prints** key.
2. The system will display the **Prints** screen. The screen below shows a sample screen with multiple print jobs submitted to the printer. The color and icon associated with each print job indicate the following:
   - Red with caution icon - Print job was aborted.
   - Green with check mark - Print job printed successfully.
   - Blue with blue build box - Print job is ready and next to be built.

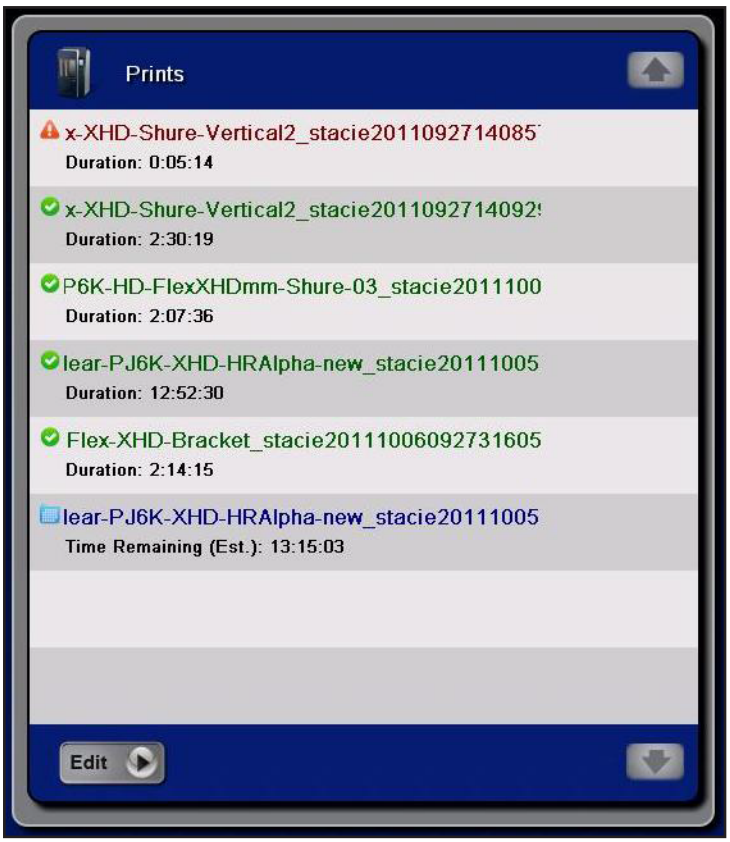


3. To view additional information about each print job, press the Edit key at the bottom of the screen. A right arrow key appears beside each print job. Press this key to view details about a print job.



4. Press the right arrow key beside the aborted (red) print job will display the following information.

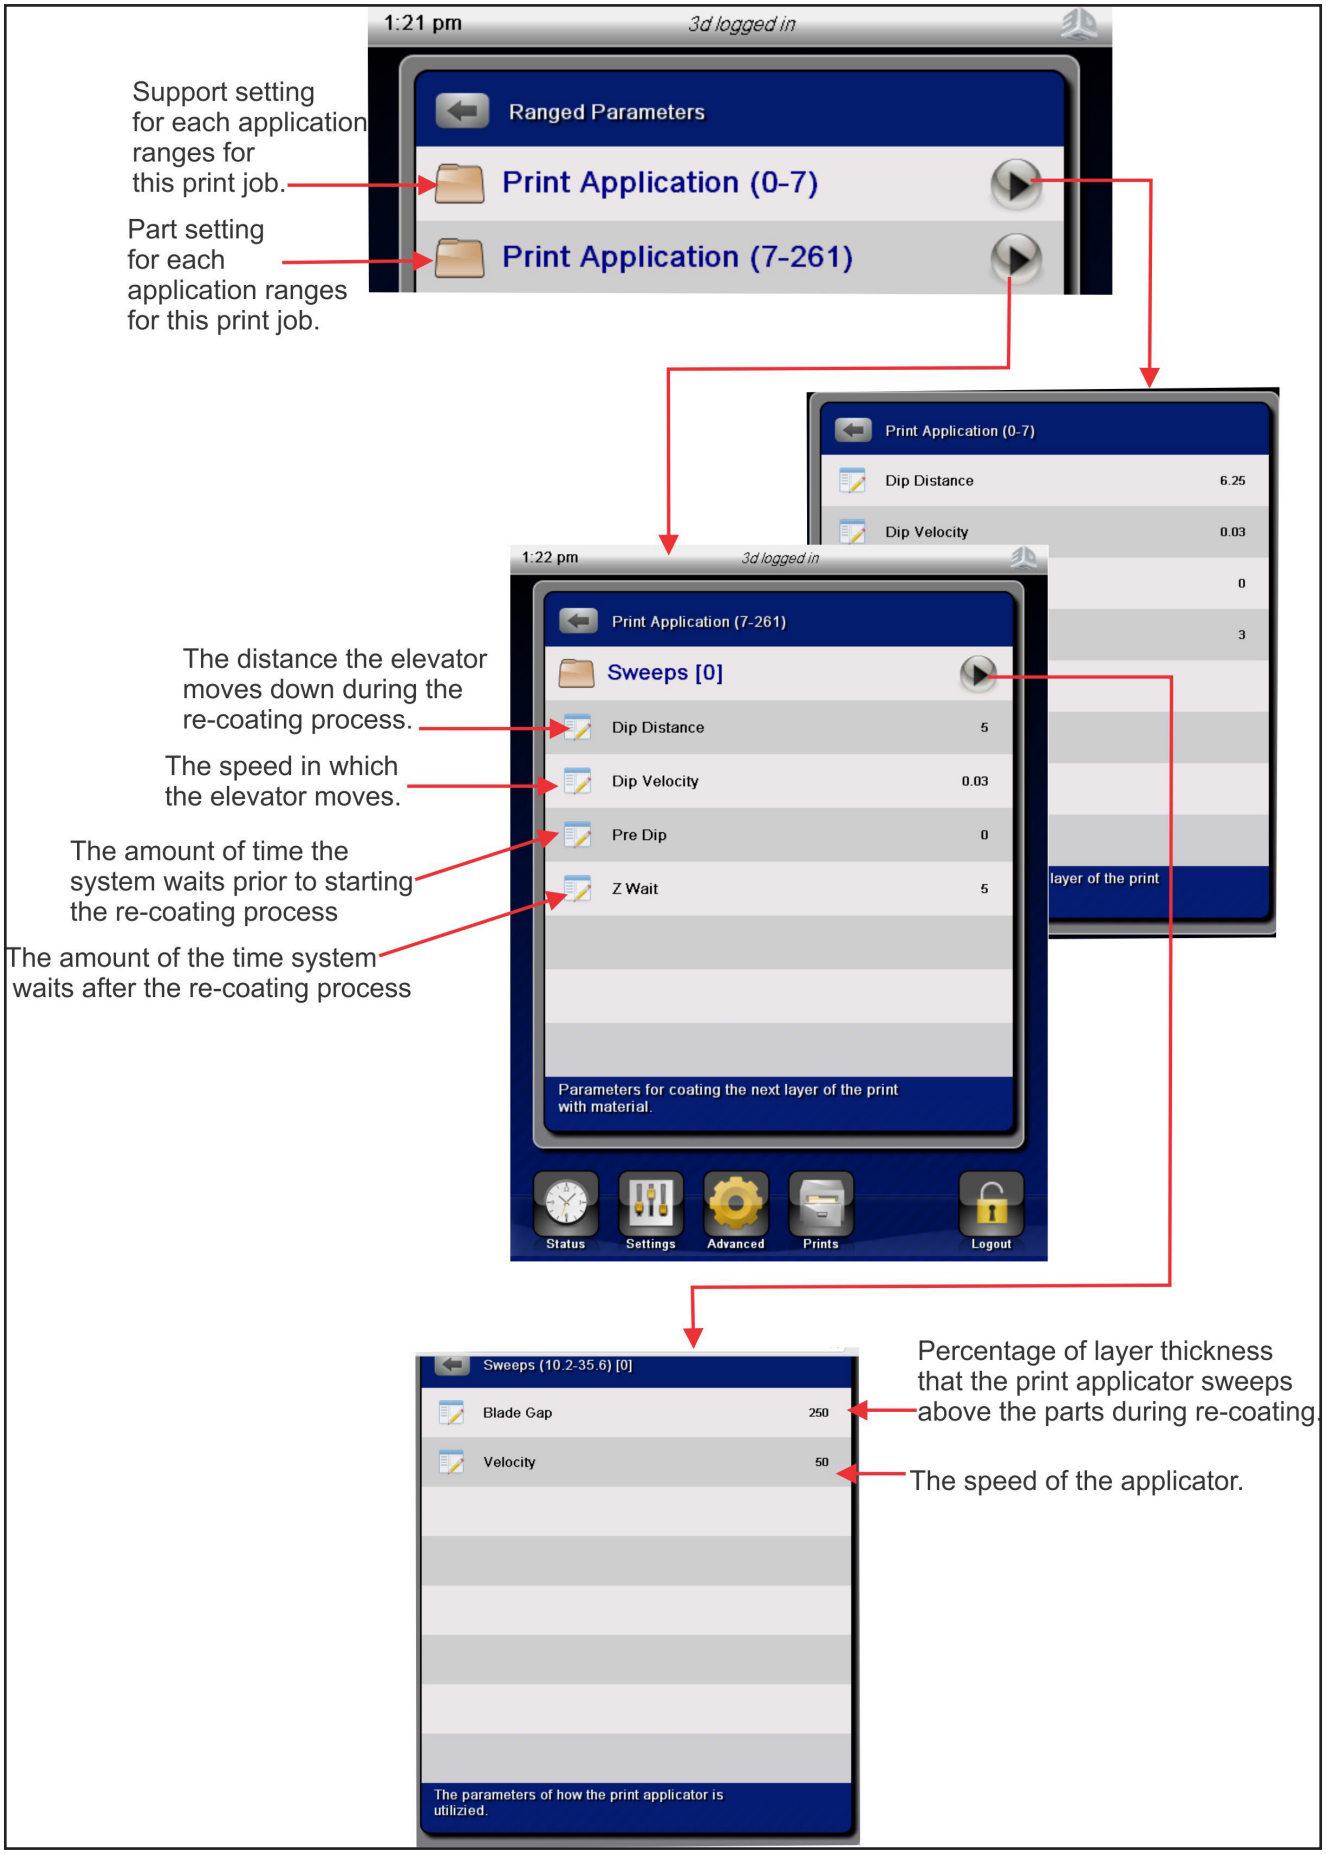


5. The print jobs can be moved up or down in the print queue.
    - In the “Printer Status” press “Prints” at the bottom of screen.
    - In the “Prints” screen press “Move” in the lower left hand corner of the screen.
    - Move the print job up or down by pressing on the up/down arrow key beside the print job you wish to move.

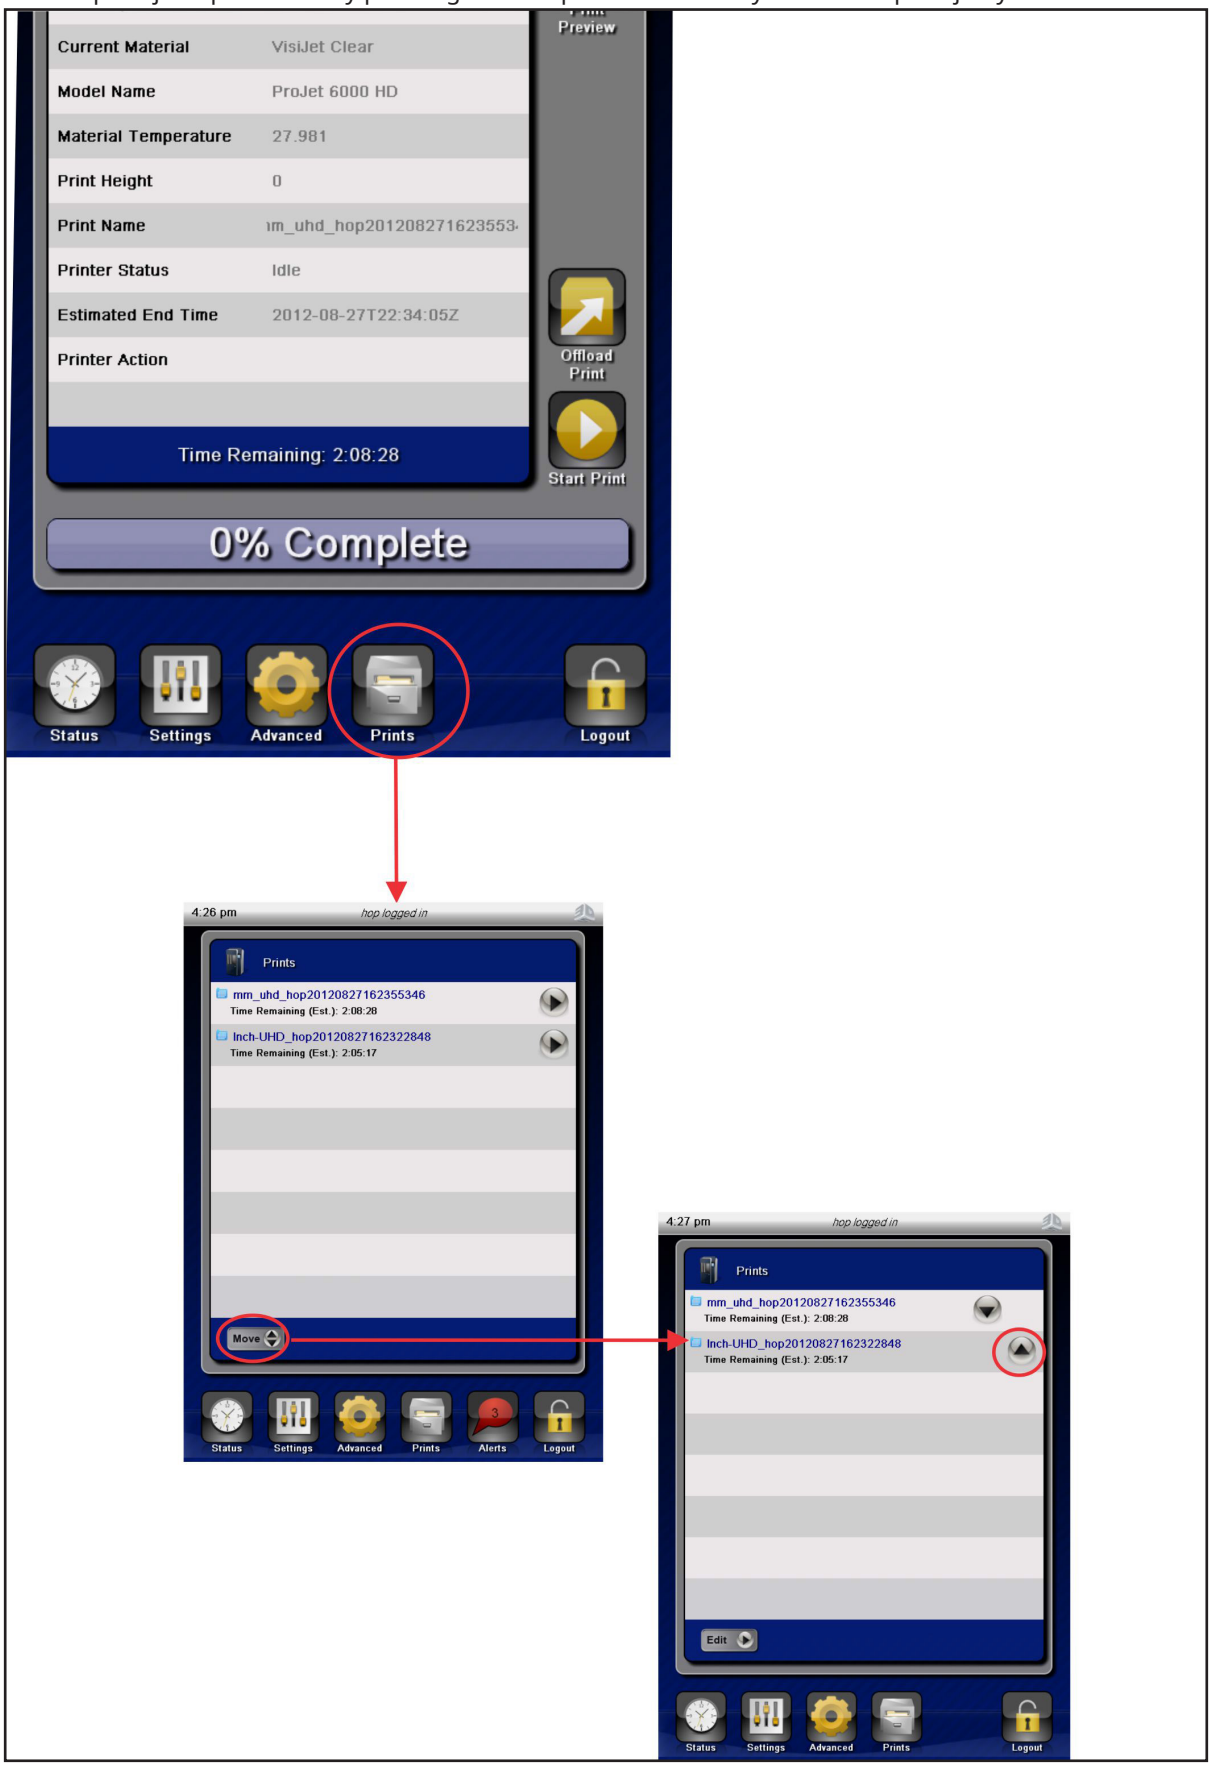


ALERTS

Pressing the **Alerts** icon and the front panel will display any error conditions that require the user to take action.

In the sample shown below, the hostname was changed and the system provides the user an alert that indicates that this is a condition that requires the system to reboot.

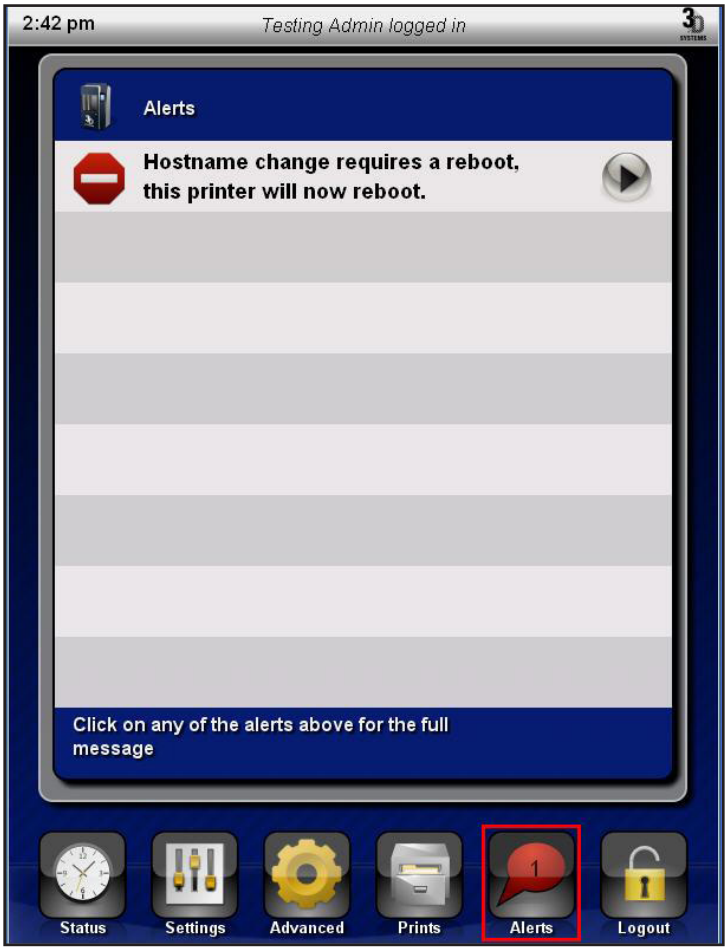

1. To see additional information or recommended actions to take, press the arrow next to the alert message.

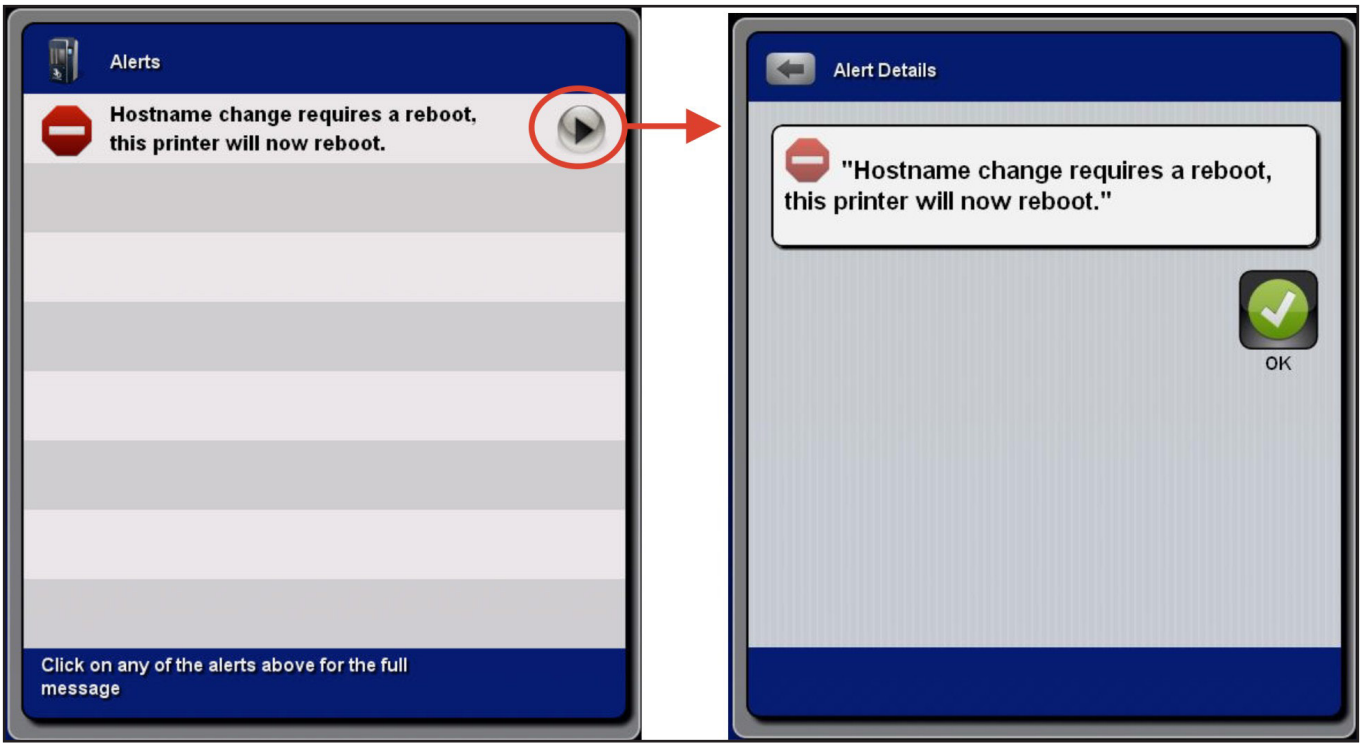

2. Although there is no additional information for this particular condition, the action the user needs to take is indicated by the presentation of the **OK** key.
   Pressing the **OK** key will acknowledge the message and subsequently reboot the machine.

LOGOUT


1. To logout from the ProJet™ 7000, press the **Logout** icon as shown below.



2. The following pop-up will appear:



3. Press **Yes**. The ProJet™ 7000 will then display the opening screen.

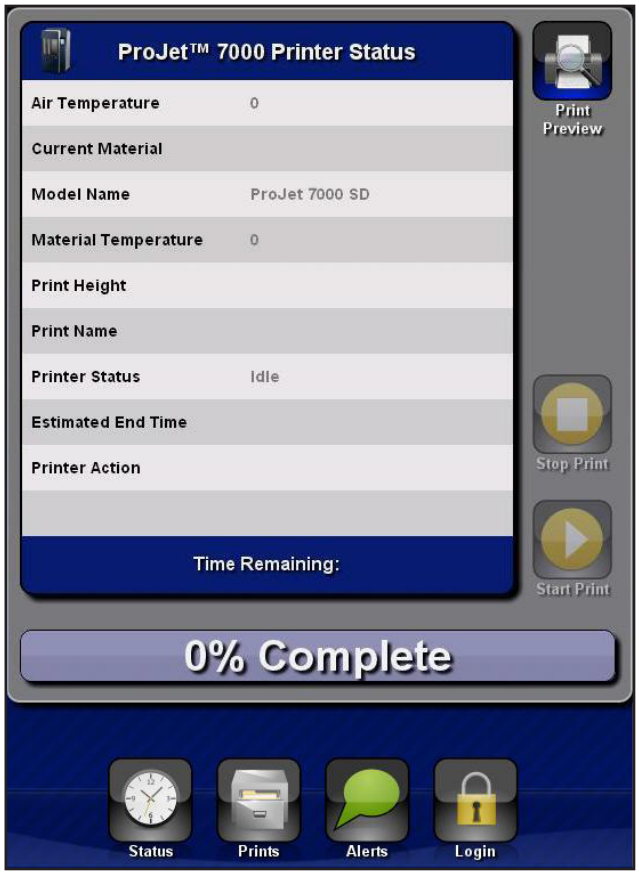

NEW FEATURES FOR FIRMWARE V1.6.2846

Restart Build Wizard

The **Restart Build** feature has been added to provide the user with more control over the process of restarting a build that has been interrupted. This option can only be accessed after a build has failed. Build failure is defined as any build that was started but did not end properly either through human intervention or hardware/power failure.


NOTE: Builds must complete at least 1 layer before the restart feature will be available.

Once a build has been interrupted and the printer is idle, the restart feature may be accessed through the status screen, at right.

1. Tape the **Restart Print** icon.
2. The screen on the next page will appear.



3. This screen shows the name of the build, the dimensions of the build, and time remaining for the build.
4. **Resume Print** - selecting this option will resume the print with no special parameters. The machine will level the material, scan the layer, and sweep.
5. **Settings** - selecting this option, the **Advanced Restart Wizard** options will be displayed, as seen below:

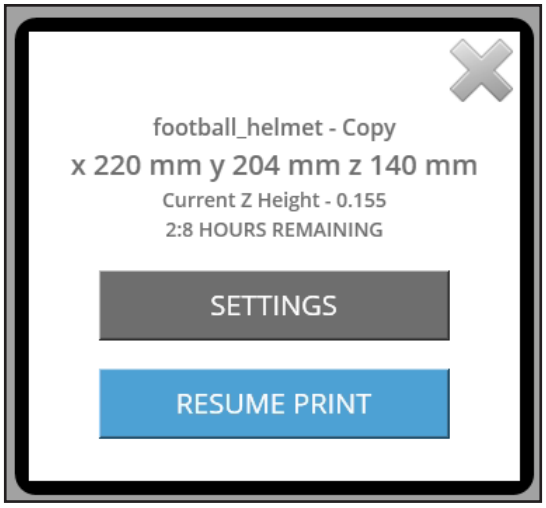


a. From here, you can home the elevator, adjust the elevator position, perform an applicator sweep, level the material, add more wait time to the current layer, select a specific layer, or rescan the selected layer multiple times.

NOTE: Sweeping is disabled during support recoat regions.

NOTE: If the elevator has not been homed the user may move the elevator downward but not upward.


NOTE: If the applicator has not been homed the user cannot move the elevator up beyond the last known layer.

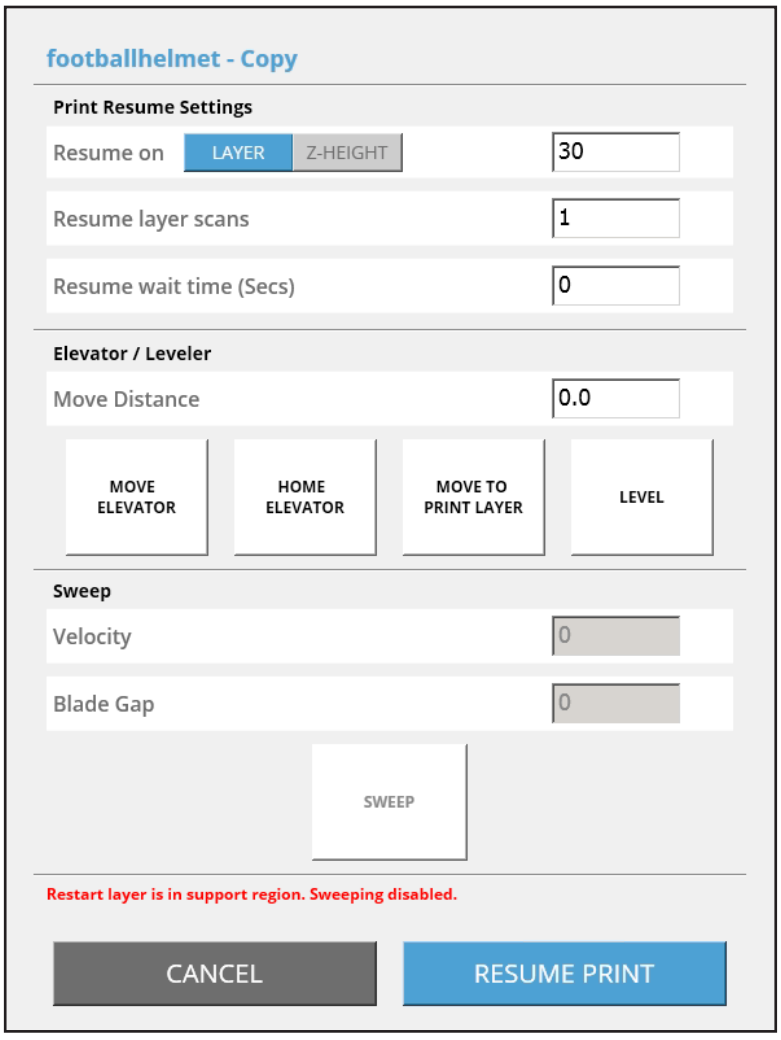


Recoat Parameter Modifications on-the-fly Wizard

This wizard assists with making mid-build recoating adjustments.

1. To access the Recoat Parameter Modification options, go the **Prints** screen and select the build settings tapping the arrow icon next to the build filename.

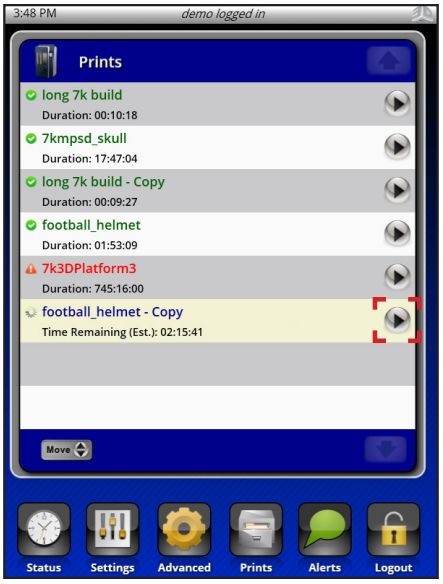

2. From the print settings, select the Recoat Parameters option:

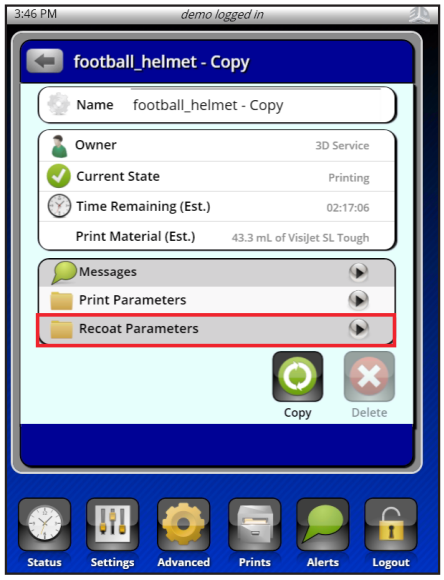


3. From here the user may open existing recoat styles and make adjustments. The user can also add recoat style ranges and sweeps to existing recoat styles.
   a. All modifications can be reverted by selecting **Restore Defaults**.



4. Editing Support Recoat Parameters
    a. Options for support ranges are limited due to the nature of support building.




5. Editing Part Recoat Parameters
    a. From here all part recoat parameters can be modified and extra sweeps can be added.

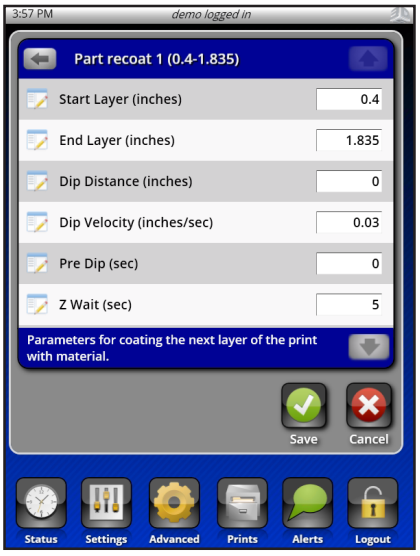


6. Modifying Sweeps
    a. To modify sweeps or add extra sweeps, tap the down arrow to reveal the sweep addition tools:




    b. Adding a new sweep will show you the default sweep parameters for the current recoat range you've selected:

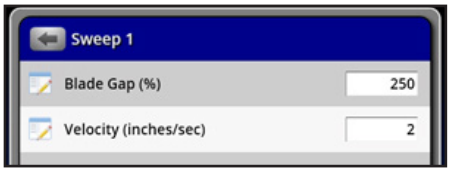


c. Selecting existing sweeps will allow you to change the current parameters for that sweep:

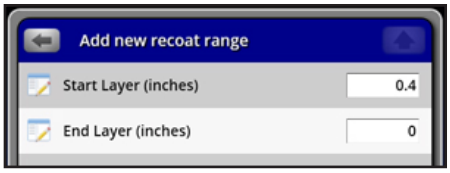

7. Selecting existing sweeps will allow you to change the current parameters for that sweep:
   a. Adding ranges is very similar to adding ranges in 3D Manage. First the user selects the start and end Z range. Once the Z end layer is selected the default options for that recoat range will populate. The defaults will be determined by the recoat range (Support / Part) and the BFF settings for that Z range.
   b. Ranges added between existing ranges will spawn additional ranges to fill in the full Z range, as seen at the right.
   c. In the example at right, if a part style range is added to a print with Z height 0-1.835” with a range of 0.4-1”, a new range of 1-1.835” will be added.

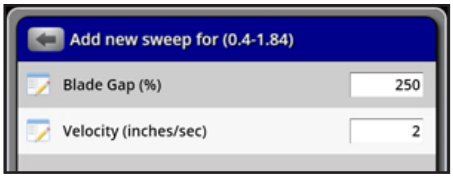


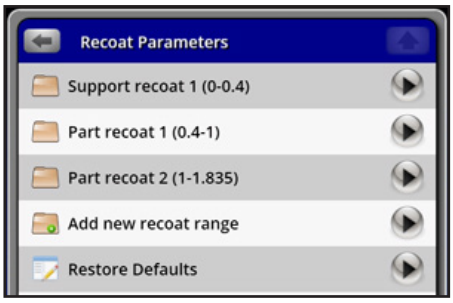


Stir Wizard

This wizard assists the user in stirring the material in the material cart.


1. To access the Stir Wizard, the user should first navigate to the advanced functions tab. Select **Stir**.

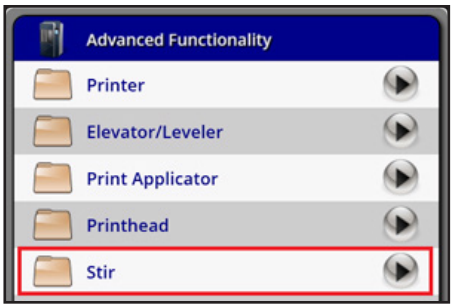

2. Select **Stir MDM**.

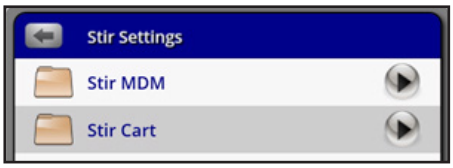


3. The following screen will appear. Tap **Start Stir**.

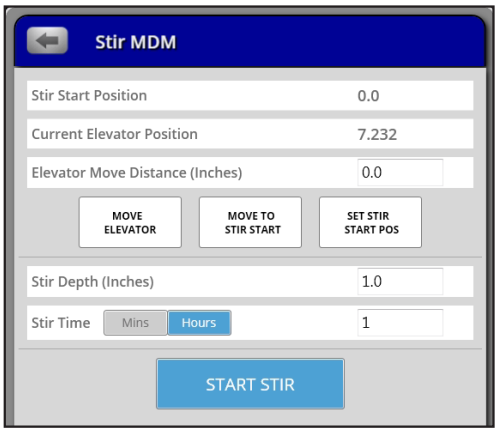

The following are potential issues with GUI v1.6.2846:


- User must use the backspace button to erase scale factor values before entering new values even though the values are highlighted when selected.
- Users running versions of 3D Manage older than v1.5.5438 will be unable to access ProJet machines running v1.6 and later software. This includes both remote access and remote build submission.

Reverting the ProJet software requires special instructions. Please contact Field Service to request a software downgrade if required.

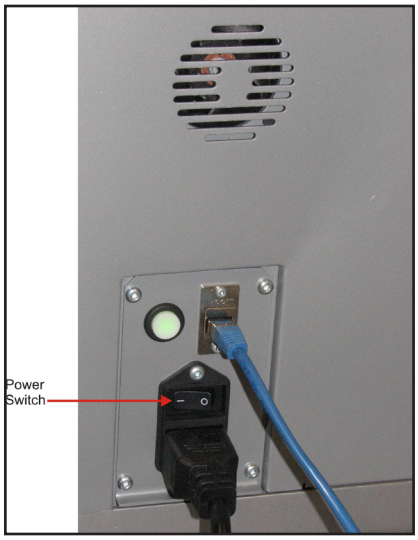


INSTALL PRINT TRAY AND MATERIAL CART

1. Verify that the printer is **OFF** before installing print tray and material cart.
2. Open the upper and lower chamber doors.
3. Verify that the print tray applicator blade is removed from the print applicator arm.

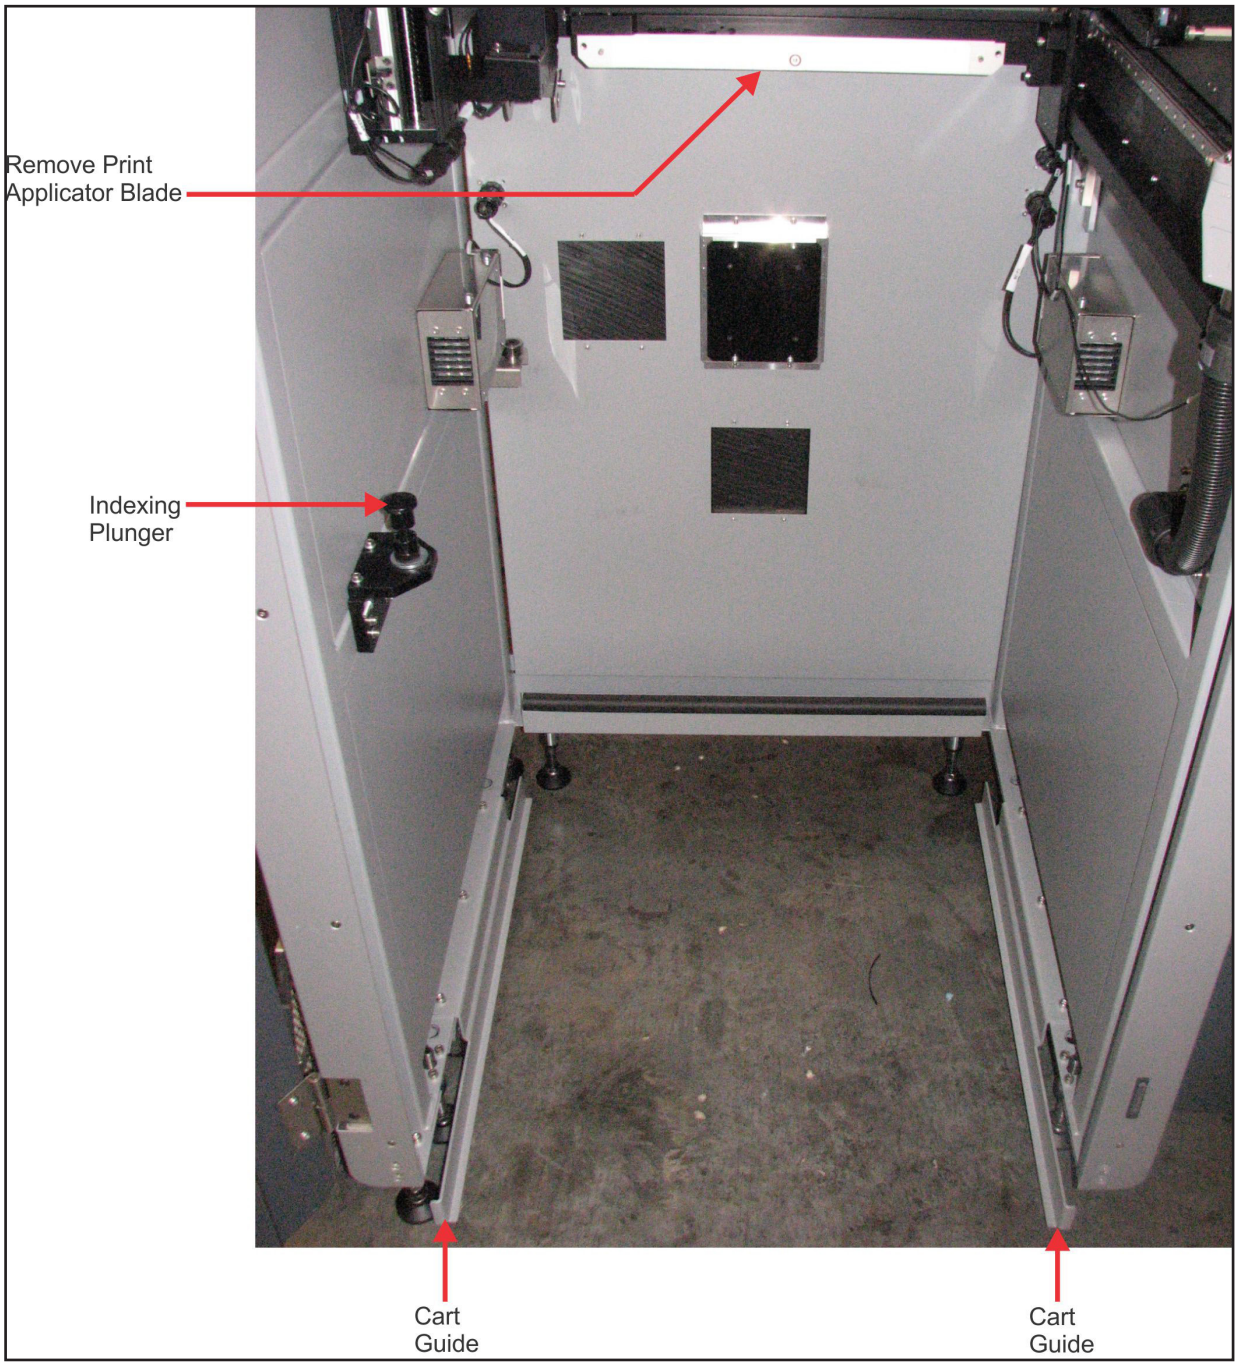

4. Roll the material cart directly in front of the machine.
5. Make certain the umbilical cable is clear and slowly push the material cart into the machine until it is positioned as shown below.

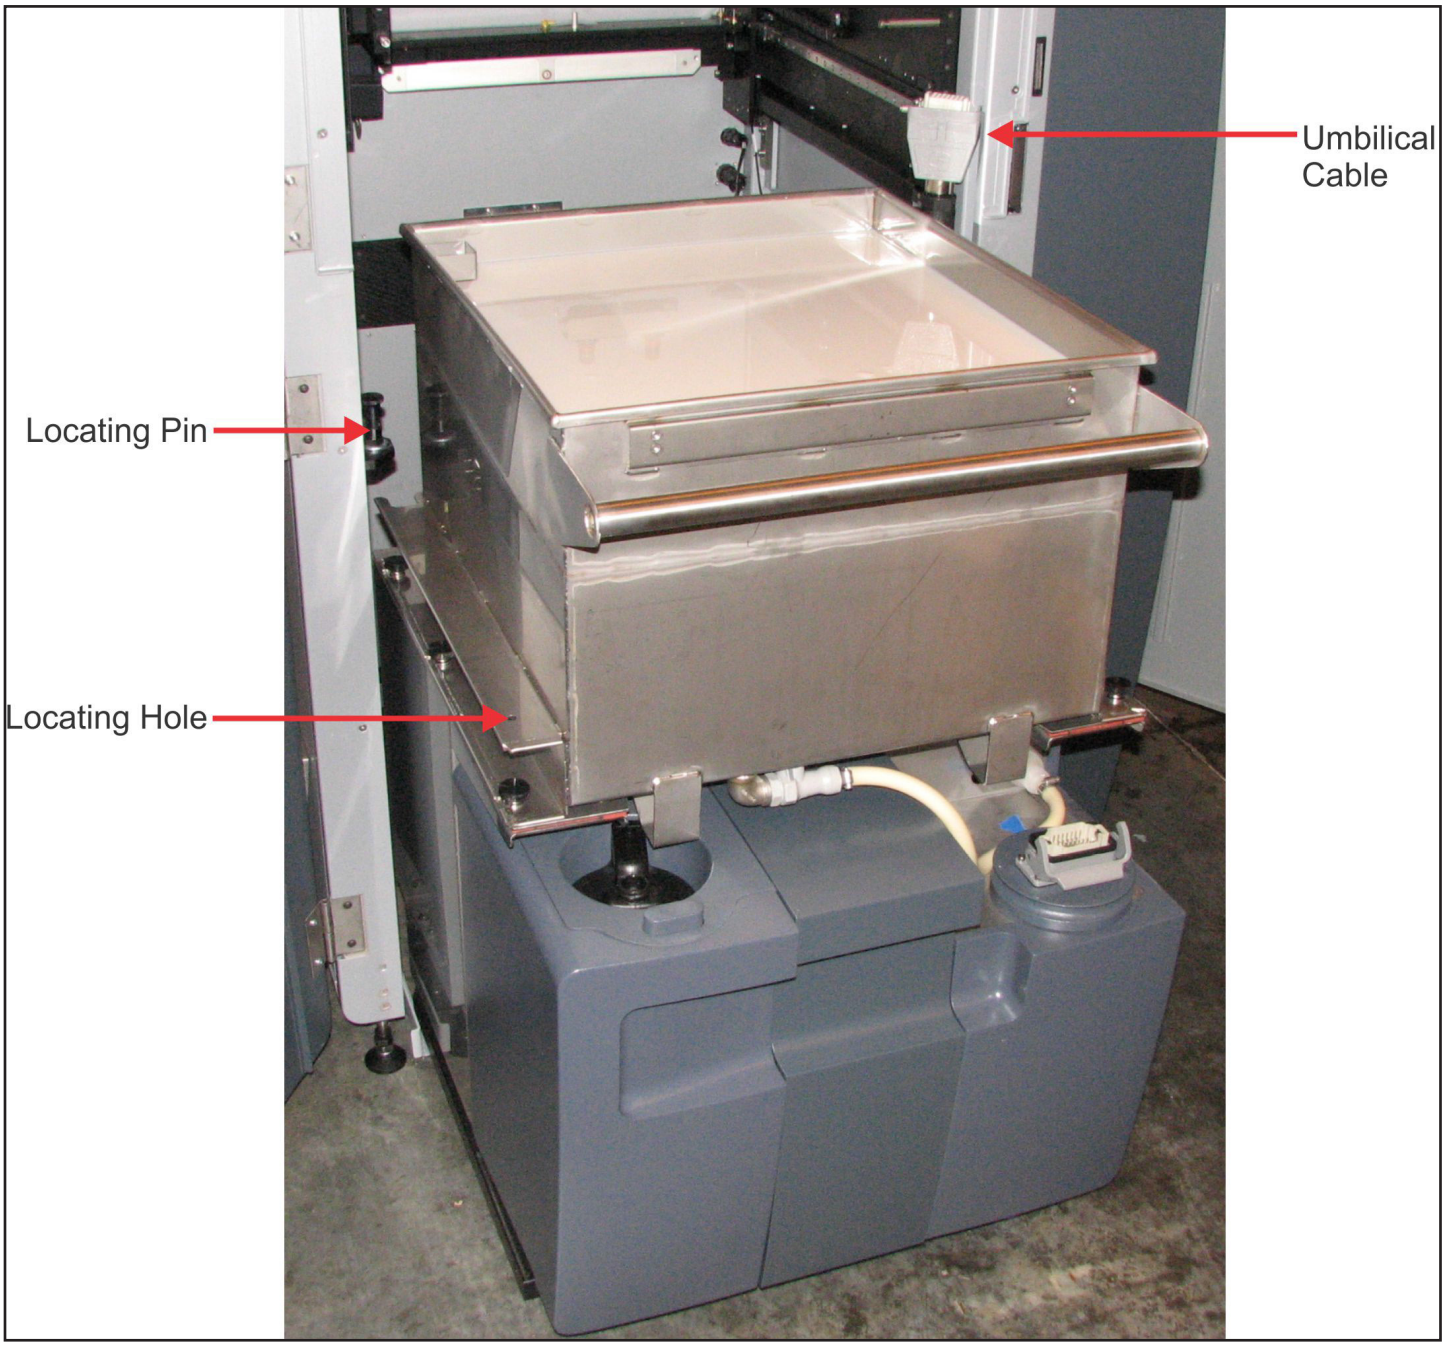


CAUTION: In the next step, make certain to move the cart very slowly to prevent damage to the cart and the machine.


6. Slowly push the cart forward until the locating hole is directly under the locating pin.



7. Pull the locating pin up and rotate it 90 degrees. The locating pin will drop into, or near the locating hole. If needed, slightly reposition the cart until the locating pin drops into the locating hole.

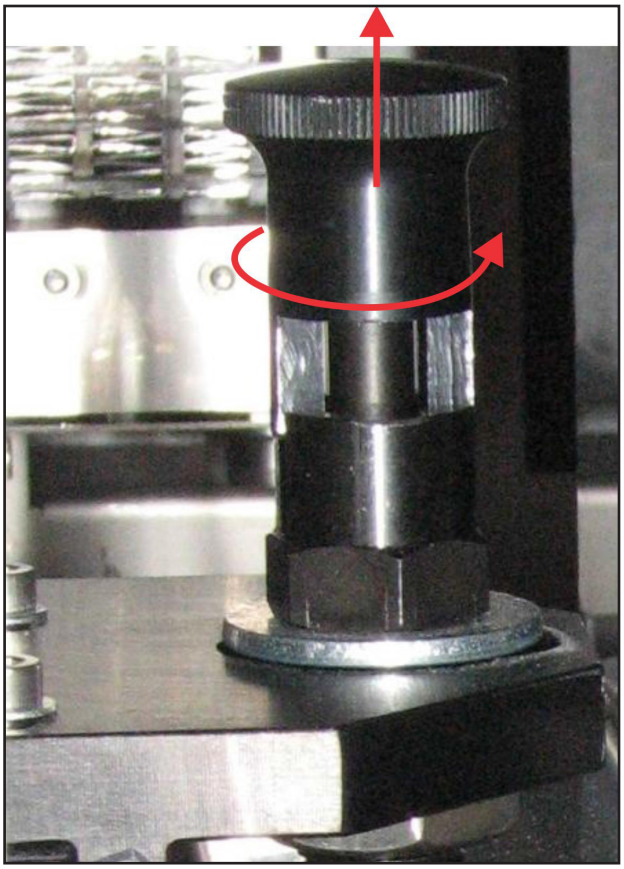


8. Connect the umbilical cable to the umbilical connector. Press down on the cable to make certain it is seated, then lift up on the connector latch to secure the cable in place.

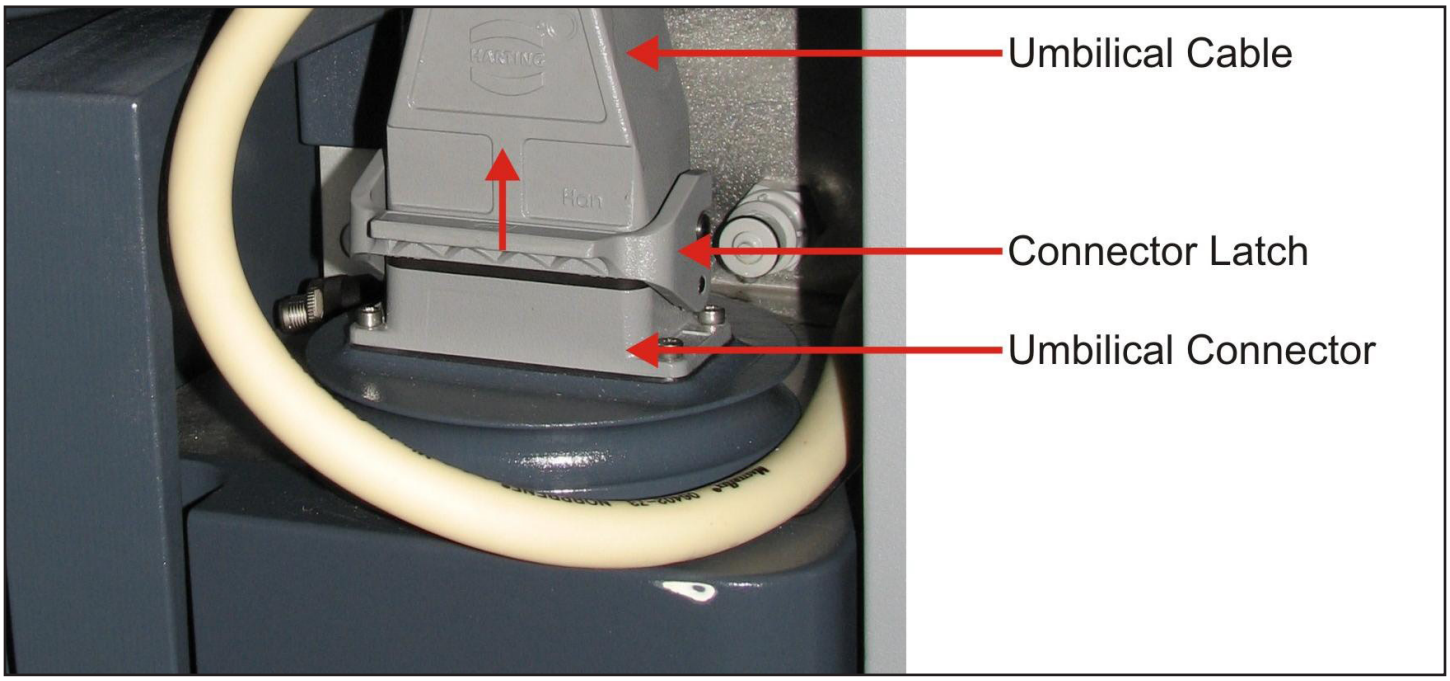


INSTALL ELEVATOR FORKS AND PRINT PLATFORM


1. The figure below shows a detailed view of the elevator block. The elevator forks are installed on the elevator block and supported by the elevator forks support pins (left and right side).

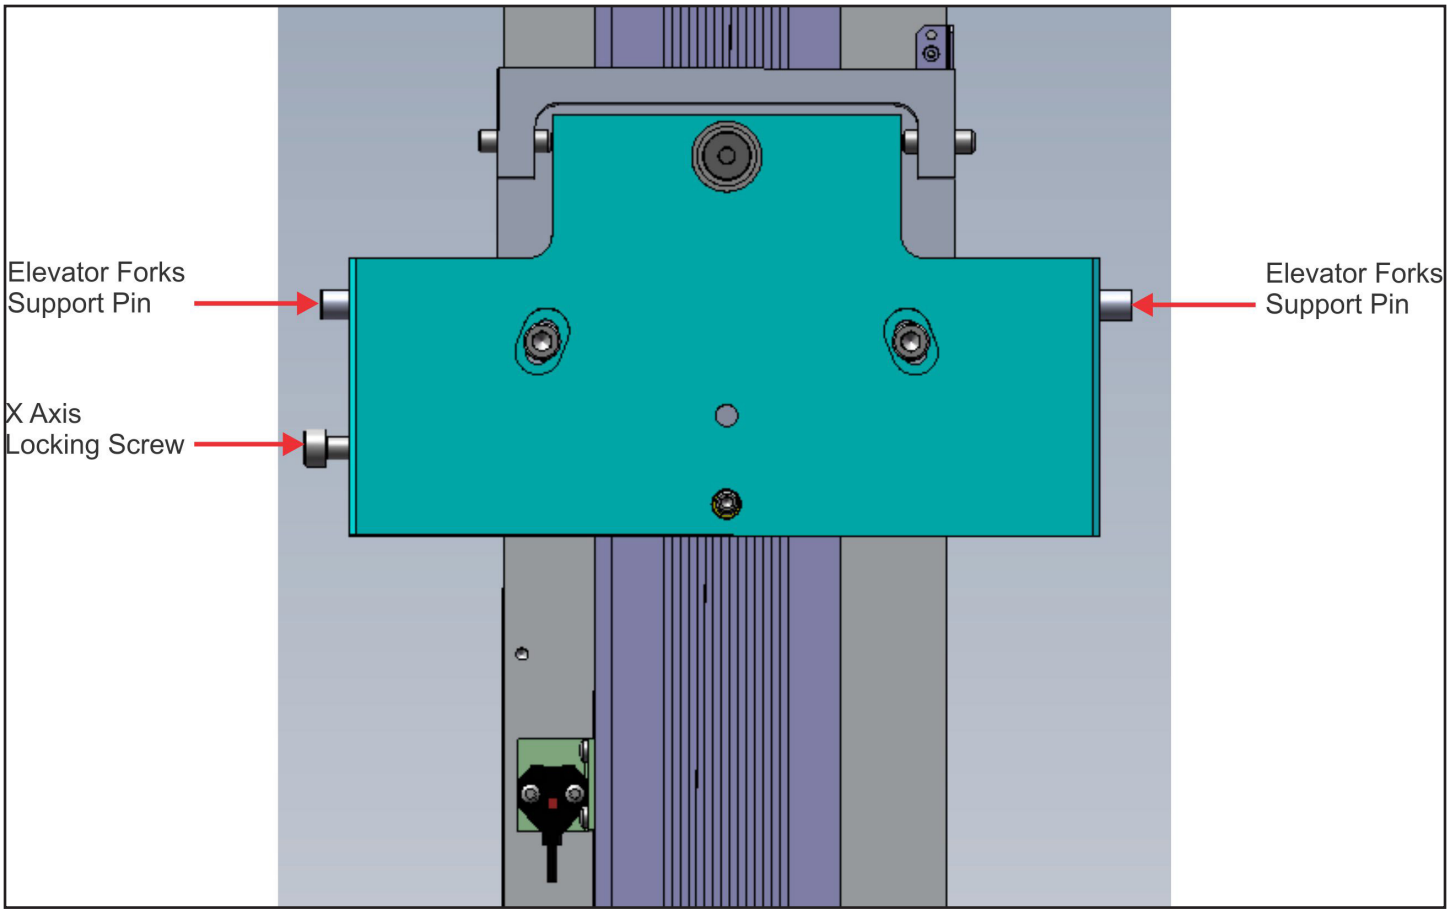

2. Install the elevator forks onto the elevator block as shown. Do not tighten the arresting screw at this time.

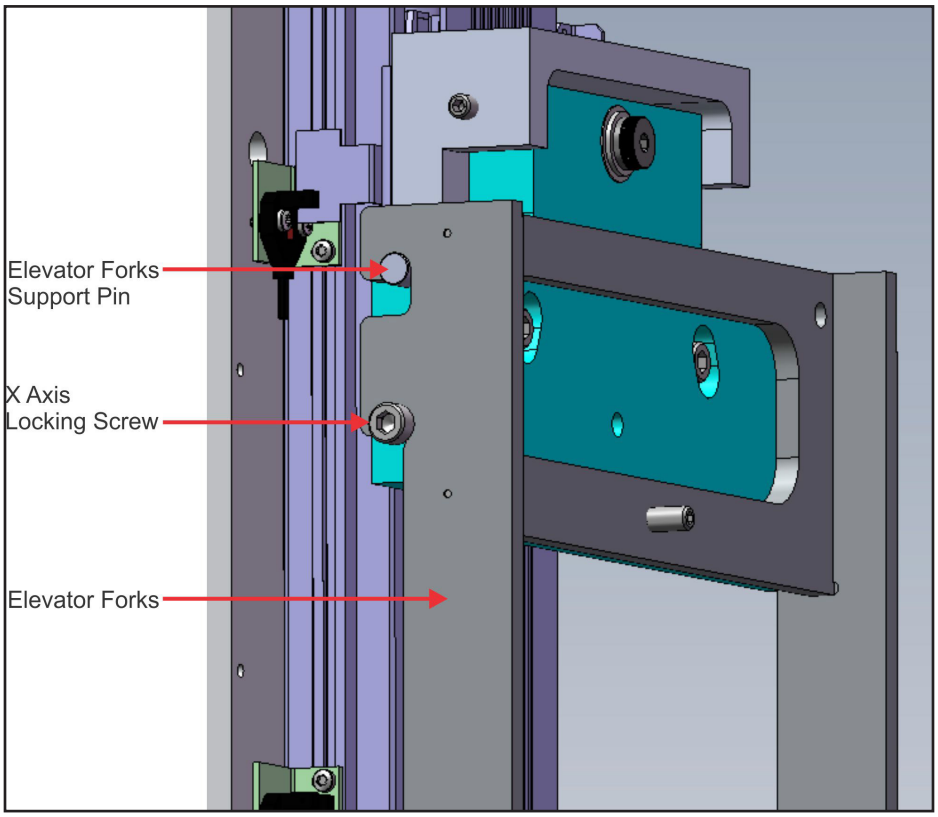


3. The print platform has two cutouts (top and bottom), located on the side on the platform.

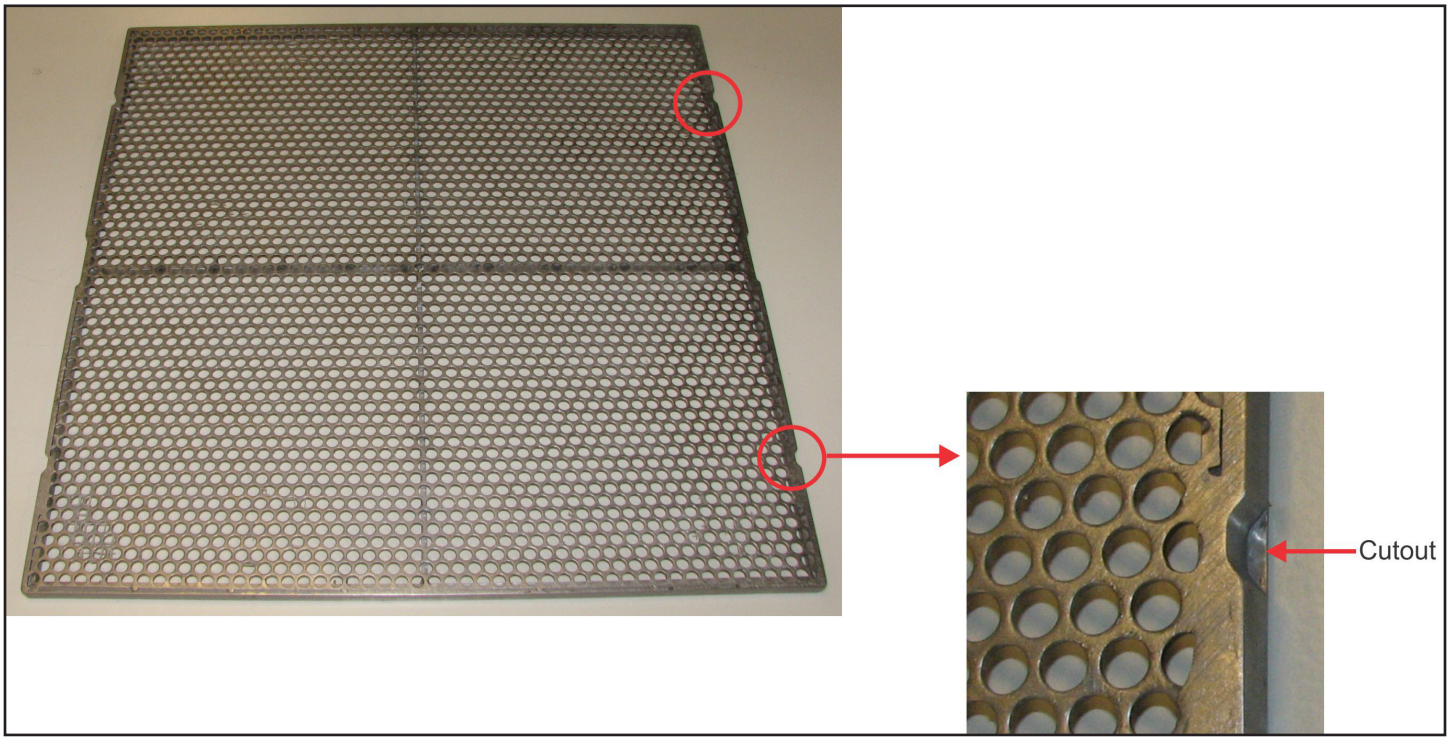


NOTE: The figures in the following steps show the elevator forks and print platform isolated on a bench, not on the machine. This is for the clarity of the figures only.

4. Install the print platform onto the elevator forks. Make certain the cutouts are positioned under the clamps.

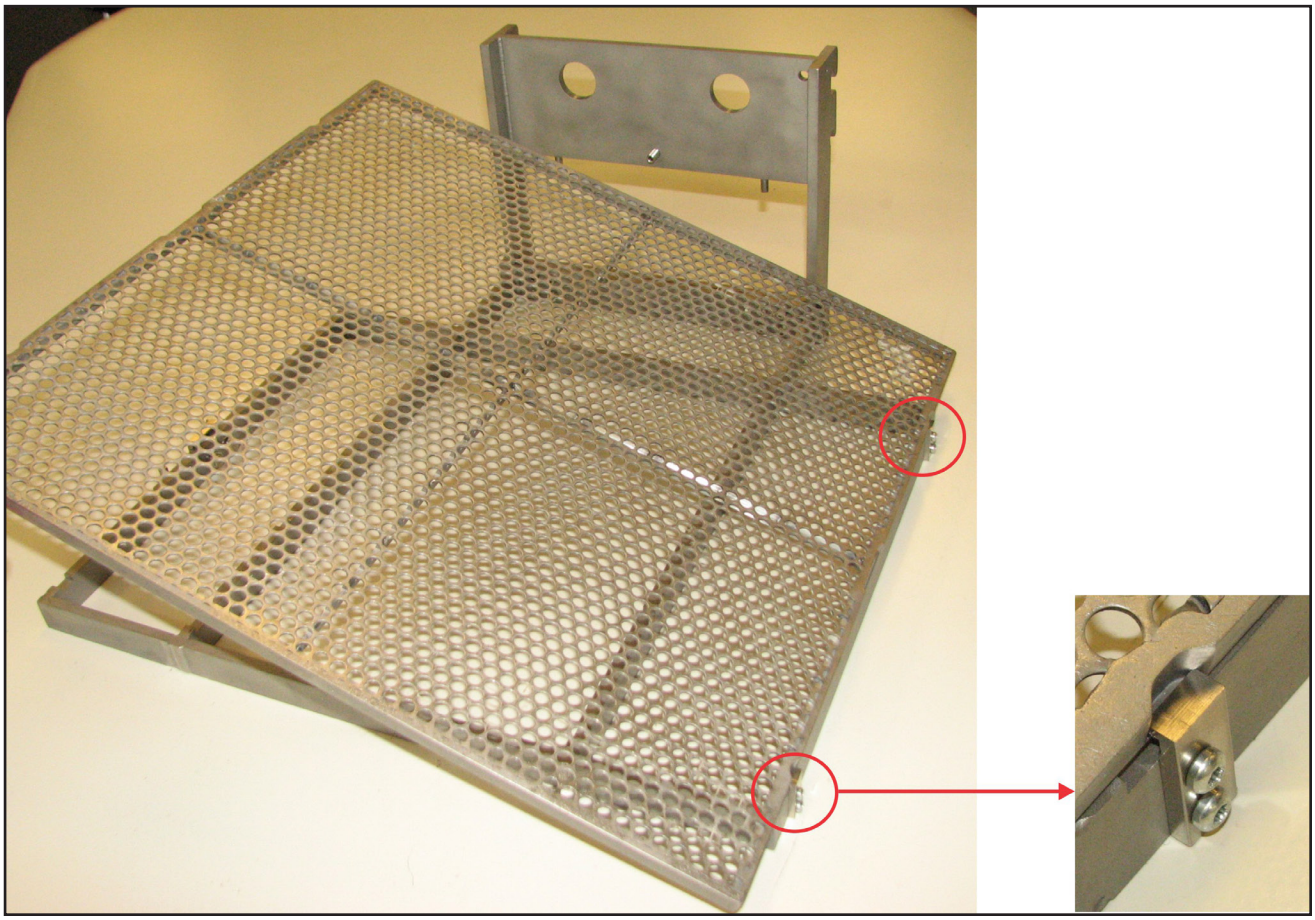


5. Lower the opposite side of the platform so the platform is resting flat on the forks. Push the latch cam to the right so the latch engages the cutout on the platform.
6. If this is the first time the elevator forks and platform have been installed, proceed to 5.05 Level Print Platform.

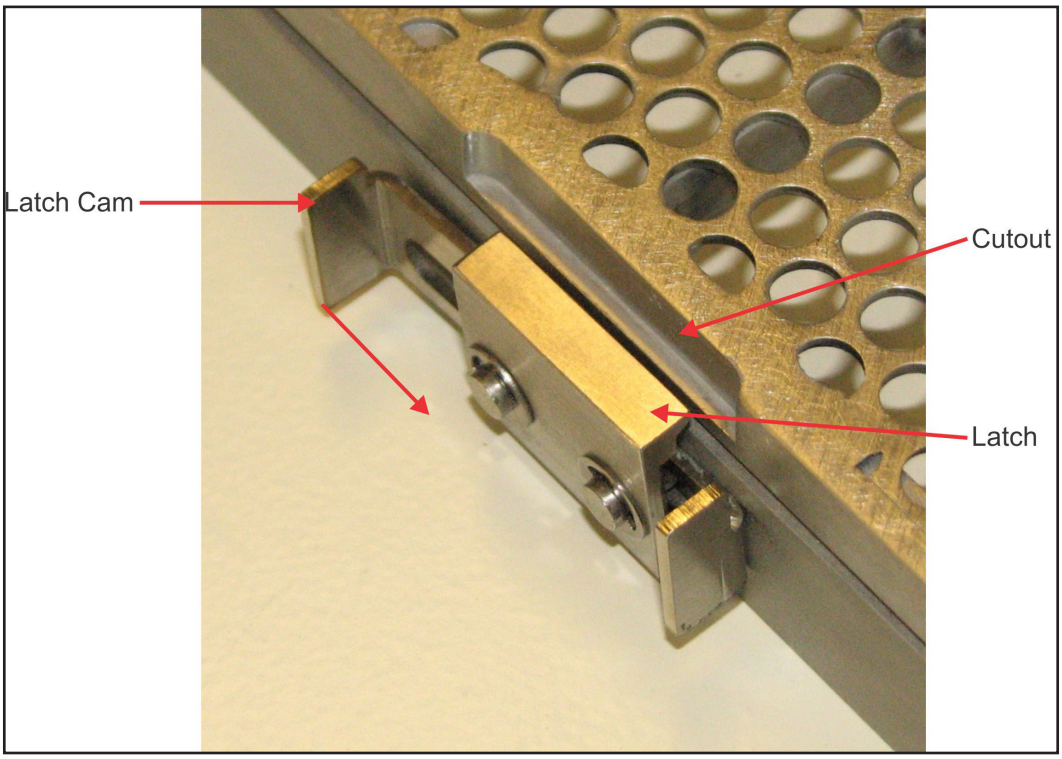

POWER UP AND LOGIN

1. Make certain the upper and lower chamber doors are closed.
2. Set the power switch on the back of the machine to **1** (On).

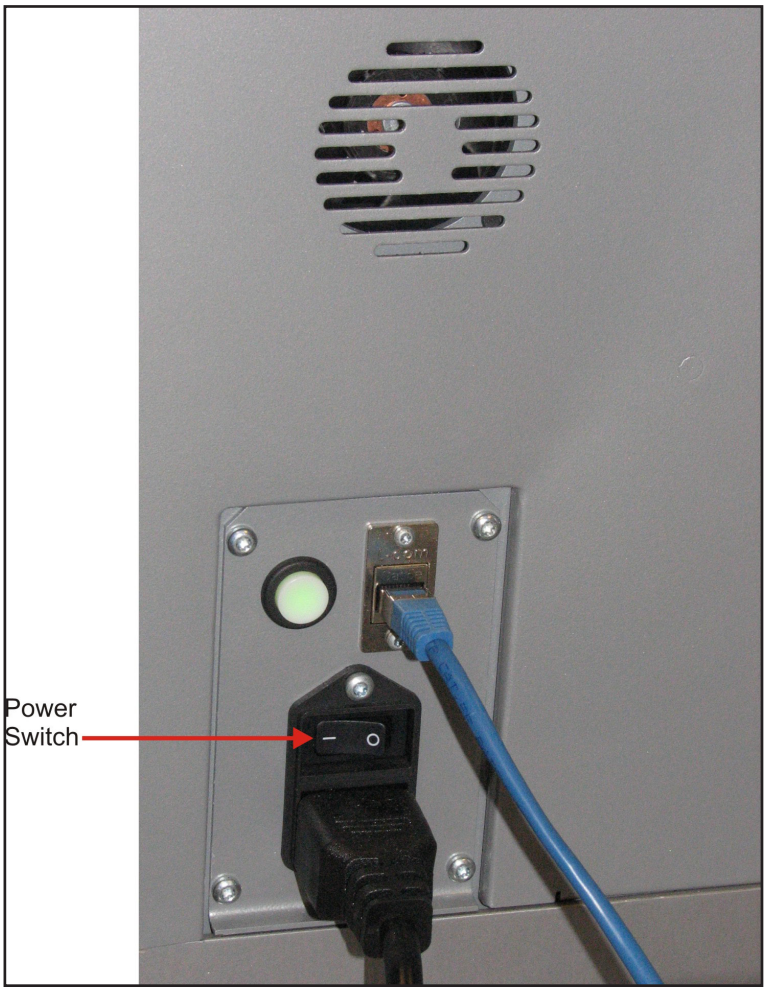


3. The machine will take approximately 3.5 minutes to start.
4. After the machine is powered up, the opening screen is displayed. To begin the login process, touch the **Login** icon.




5. The login screen is displayed. Touch the **Username** field.



6. A keyboard is displayed. Enter your username and password.
    a. Key in your username.
    b. Press **Enter**.
    c. Key in your password.
    d. Press **Enter**.
    e. Touch the **Submit** icon.

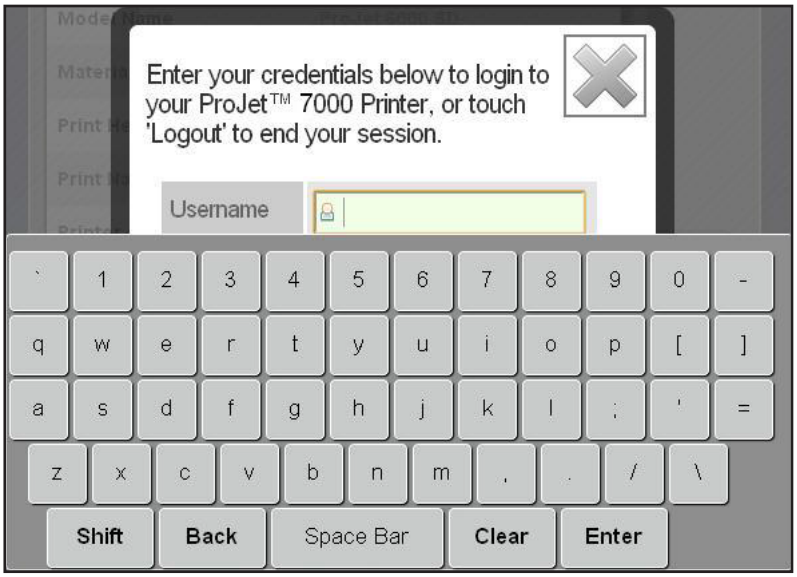


7. After logging in, the **Status** screen is displayed initially.

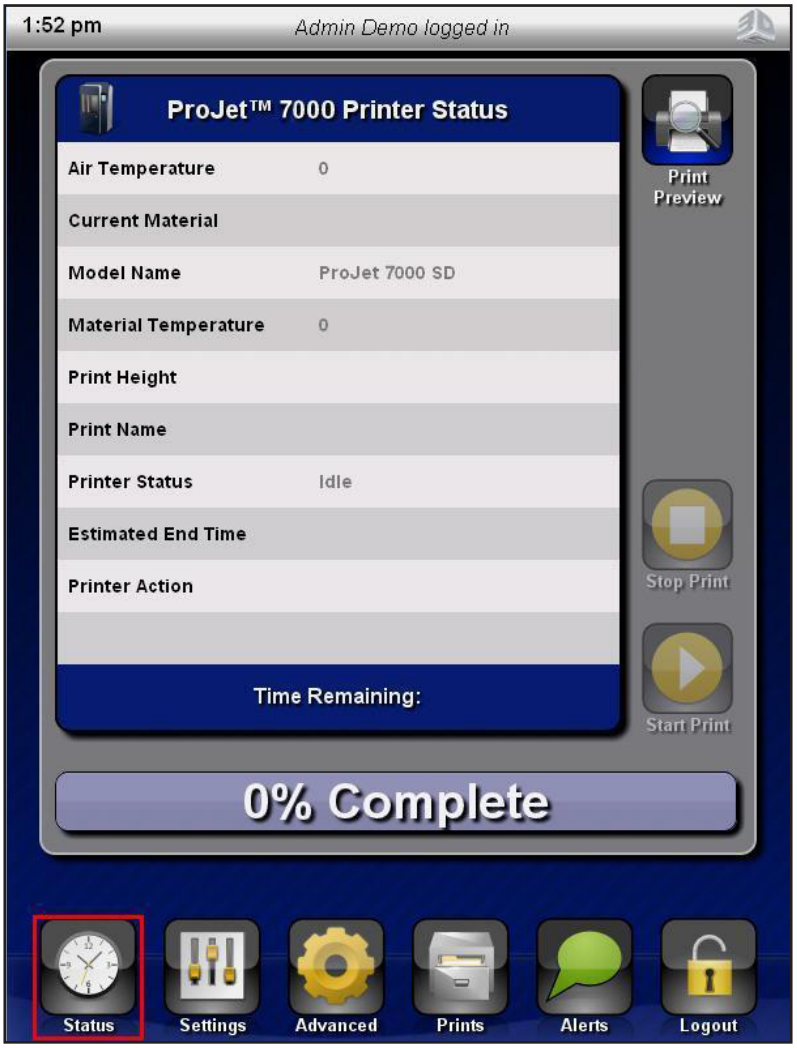


ADD MATERIAL TO THE MATERIAL CART AND PRINT TRAY

1. Open the lower chamber door.
2. Press the release button and extend the material bottle holder.
3. Install a full bottle of material. Make certain to press down firmly on the material bottle so the connector on the bottom of the bottle fully engages the coupler located in the bottom of the holder (refer to 3.1 ProJet™ 7000 Components for reference to components.)
4. If the container is new, puncture a small hole in the bottle cap using something with a sharp point, such as a screw driver or drill bit.
5. Push the holder back into place.
6. Close and lock the lower and upper chamber door.
7. On the GUI, select **Advanced > Elevator/Leveler**.
8. Press **Level Print Tray**.
9. The system will pump material from the bottle into the cart reservoir and into the print tray. The GUI will notify the user as additional bottles of material are needed.

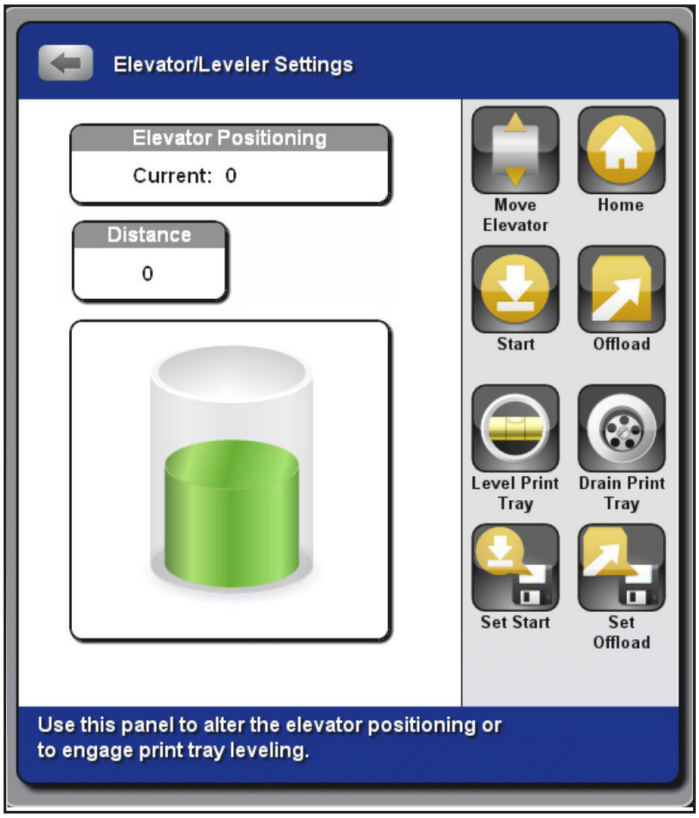


LEVEL PRINT PLATFORM


1. Lower the print platform to the **Start** position as follows:
    a. On the front panel, select **Advanced**
    b. Select **Elevator/Leveler**.
    c. Press the **Start** key.

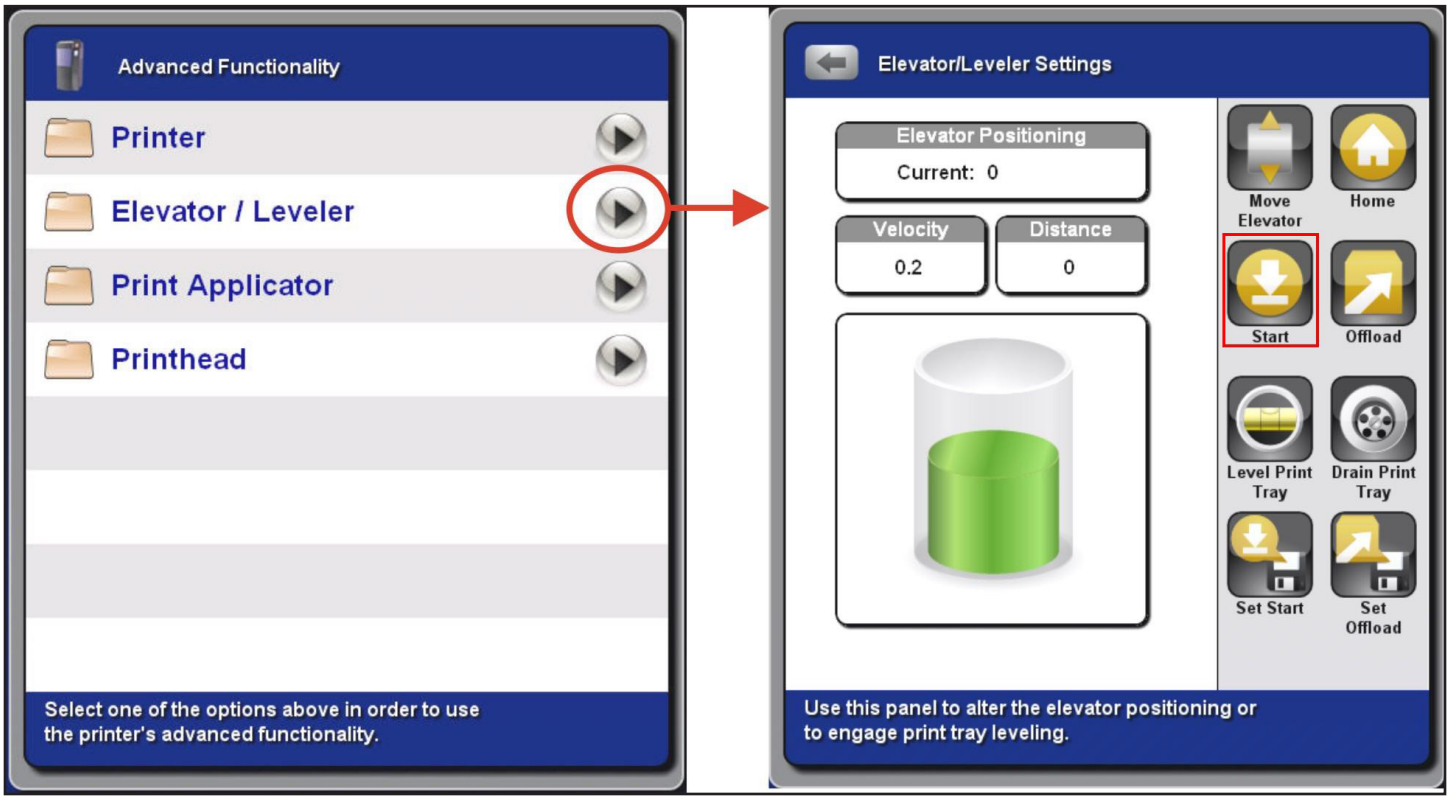


2. To adjust the platform in the Y axis, loosen both Y axis locking screws.
3. Turn the Y axis adjustment screws clockwise (or counter-clockwise) to achieve level in the Y axis.

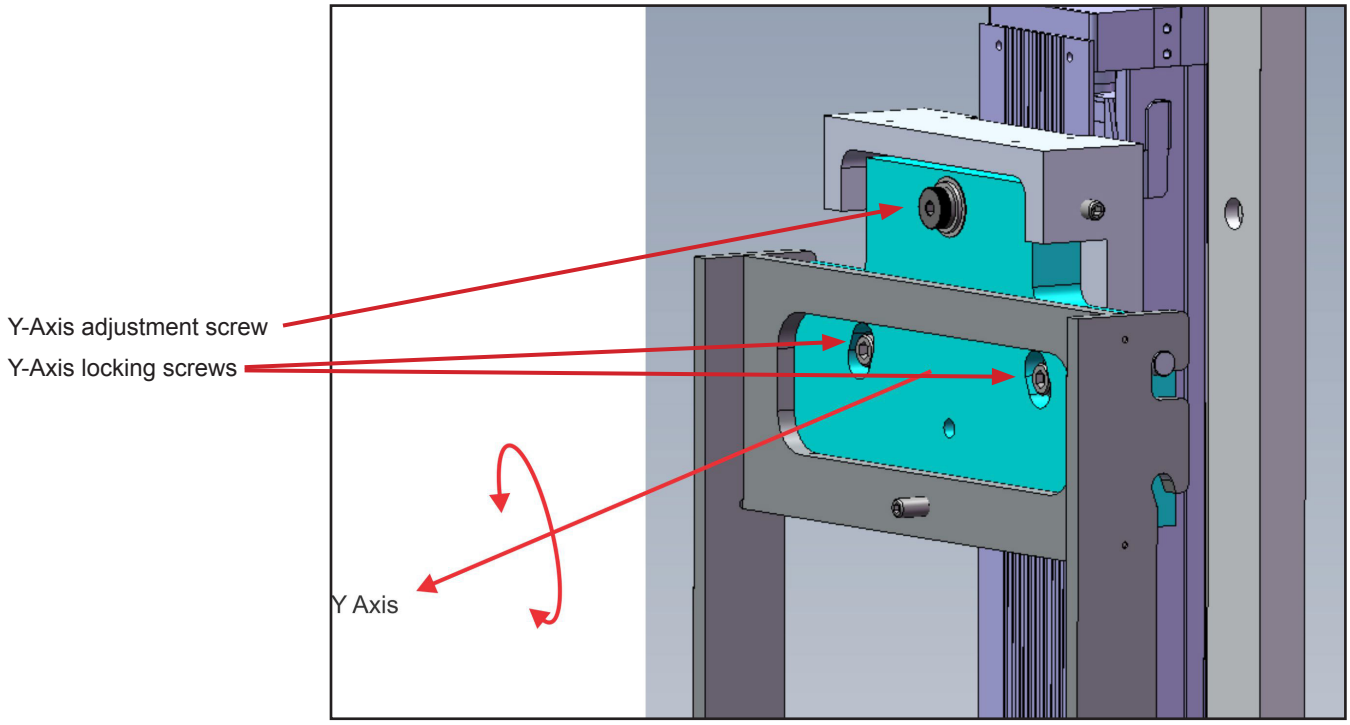

4. Tighten the Y axis locking screws.

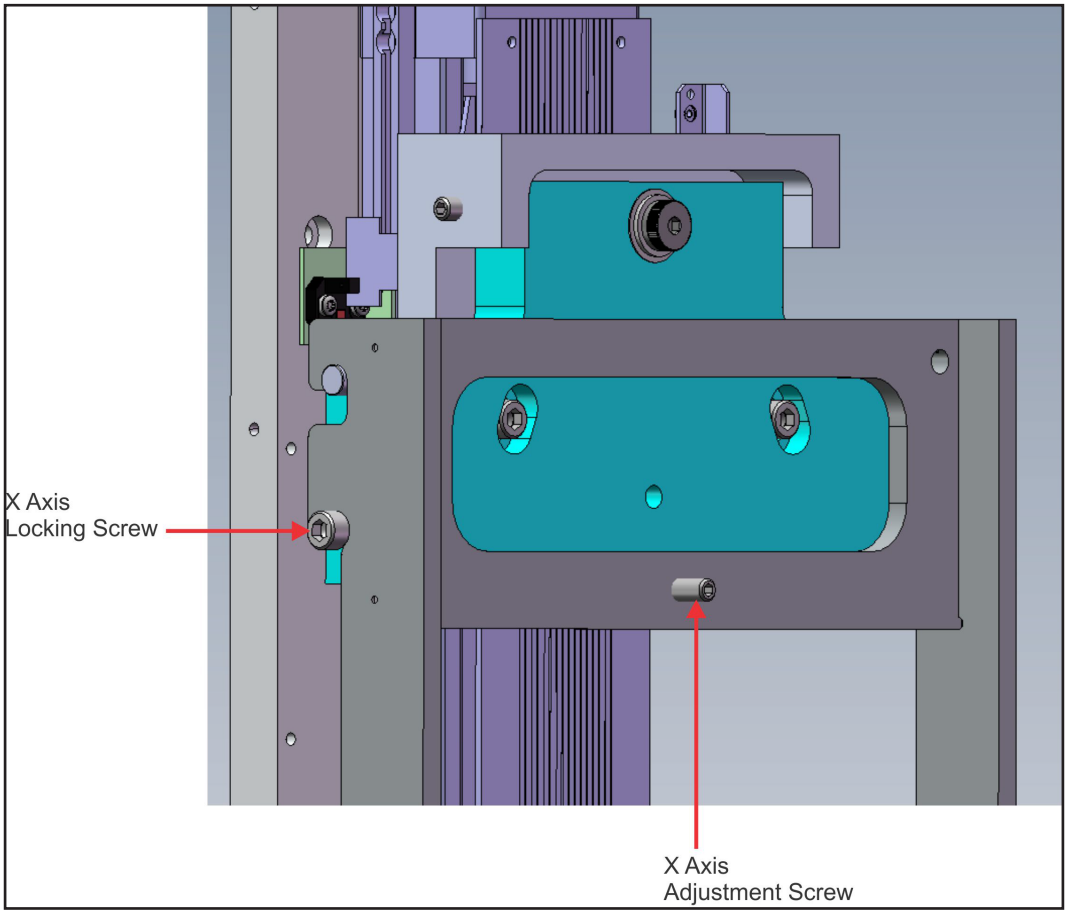

5. To adjust the platform in the X axis, slightly loosen the X axis locking screw.

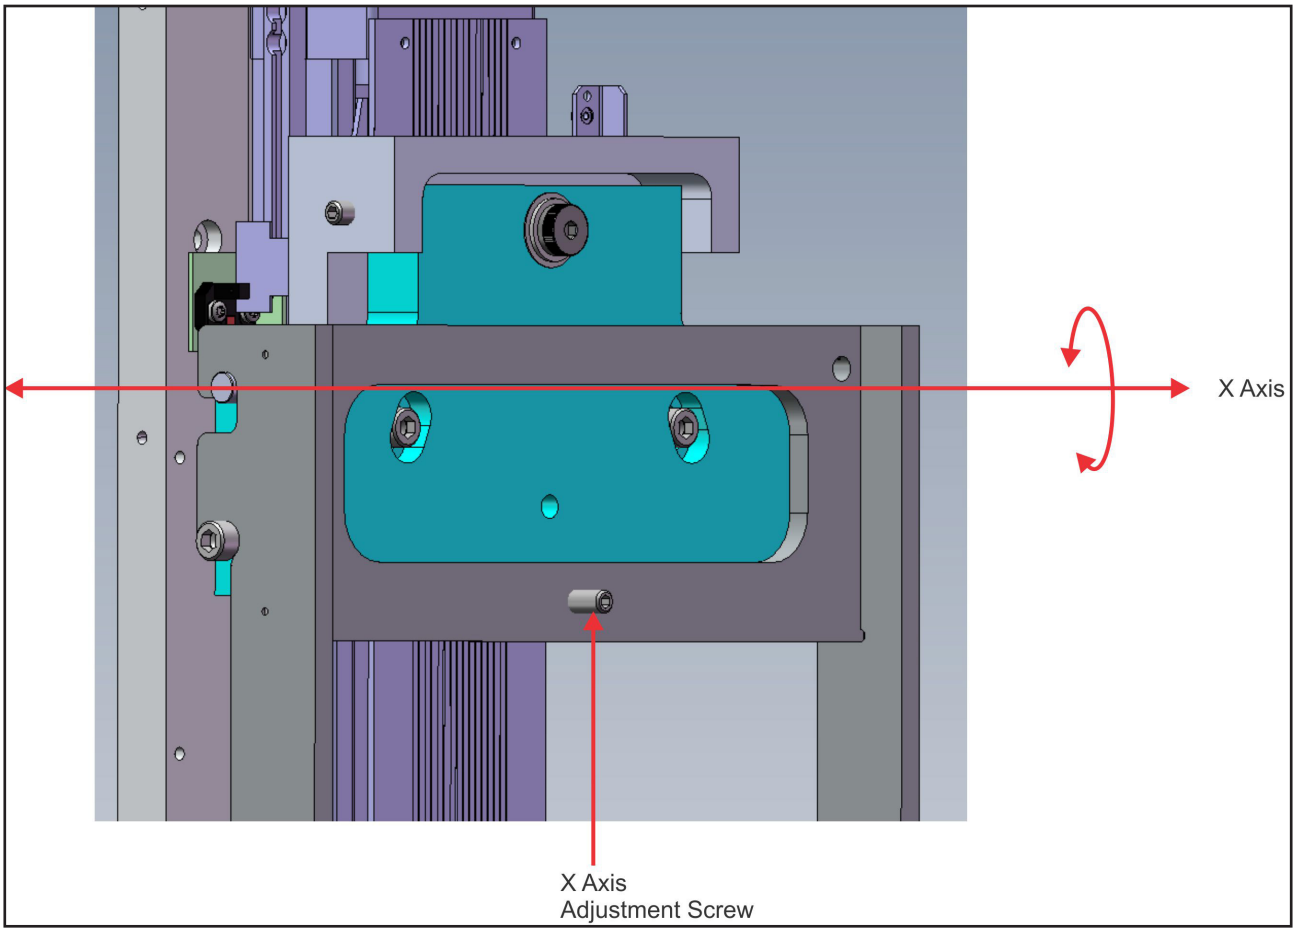


6. Turn the X axis adjustment screw clockwise (or counter-clockwise) to achieve level in the X axis.
7. Tighten the X axis locking screw.
8. Repeat steps 2 through 7 until the print platform is level with the surface of the print material.

INSTALL THE PROJET™ 7000 IN 3DSPRINT 2.5

3D **SPRINT**™ is the 3D Systems' software application used for preparing CAD models to be printed on an SLA printer. It is installed on a standalone computer which is provided by the customer. Double-click the 3D SPRINT icon on your computer/ laptop, or select it from your list of available programs loaded on your computer. For detailed information on the features of 3D **SPRINT**, as well as user guides for part preparation, you can access the full help document by clicking on the icon inside the 3D **SPRINT** software.

NOTE: If you do not have 3D SPRINT loaded on your computer you can obtain a copy at *http://infocenter.3dsystems.com/product-library/projet-7000#software-downloads*.

NOTE: Although there are QC styles in 3D SPRINT, it will not currently generate good QC parts. For printing with QC styles, revert to using 3D Manage software until the next version of 3D SPRINT is available.

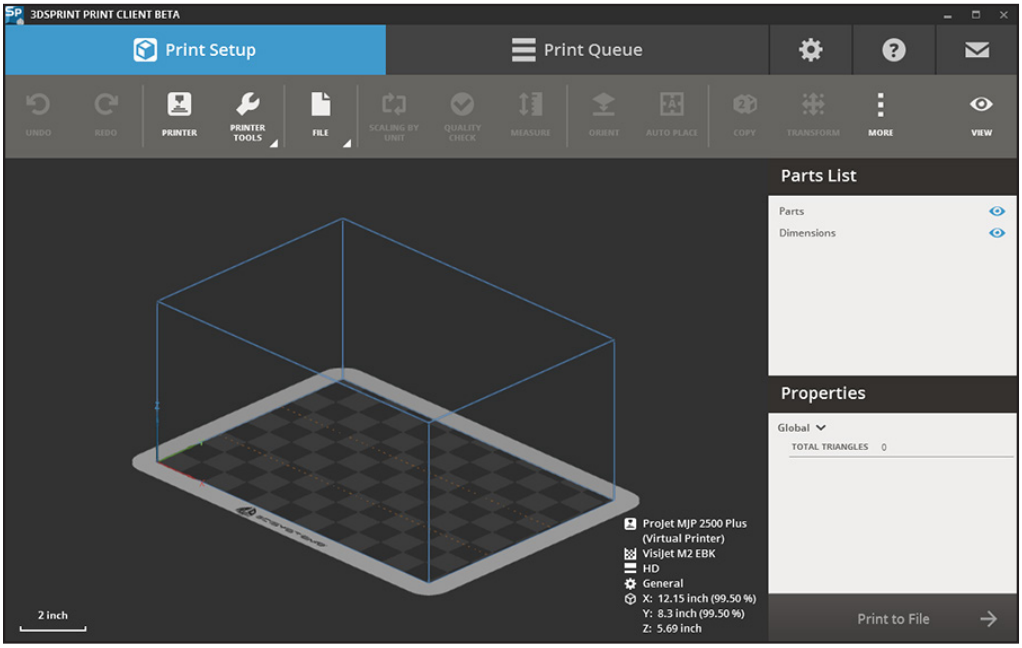


3DSprint Home Screen

INSTALL THE PROJET™ 7000 IN 3D MANAGE

3D Manage is Legacy Software for the ProJet 7000. If you are still using 3D Manage, consider upgrading your computer to prepare it for 3DSprint.


1. Open 3D Manage.
2. Select **File > 3D Printer Setup**.

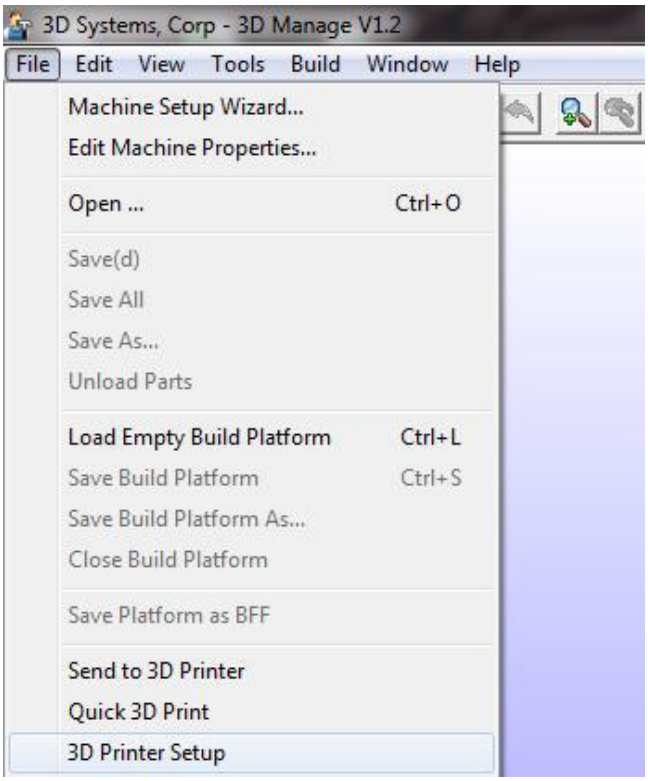


3. Click Add 3D Printer.



4. Enter the following information:
    a. Host Name or IP Address of the printer you wish to install
    b. User Name and password you will use to access the printer.
    c. Click **OK**.

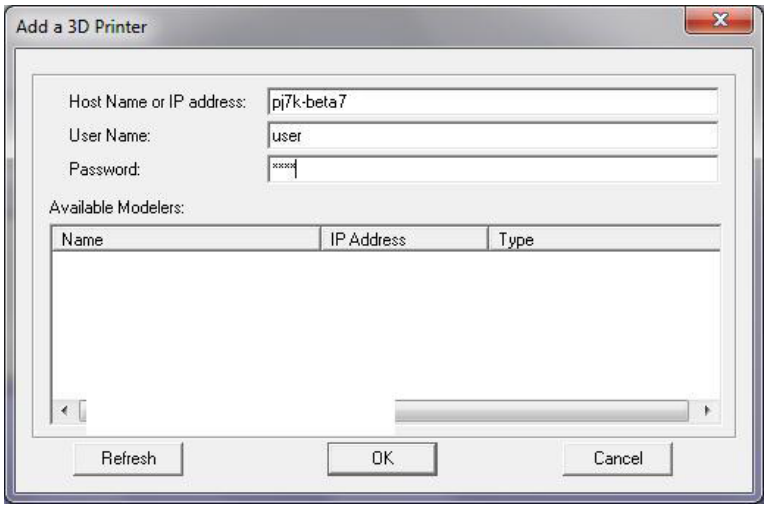


5. 3D Manage will show the printer as installed and available.

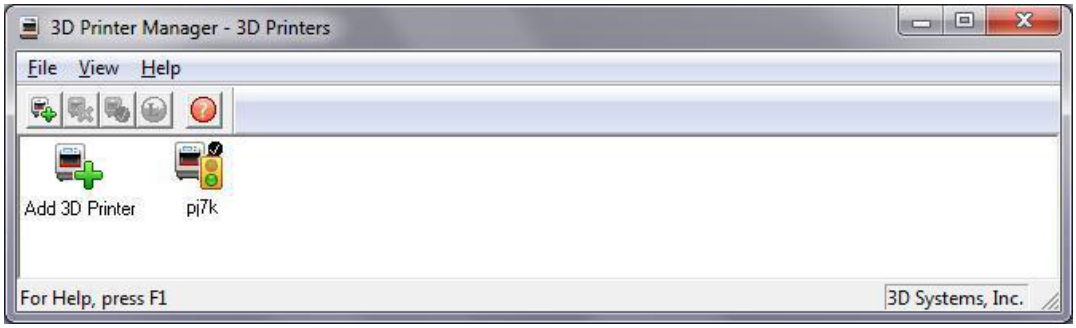


SUBMIT A PRINT JOB


1. Start 3D Manage.
2. Select **File > Send to 3D Printer**.

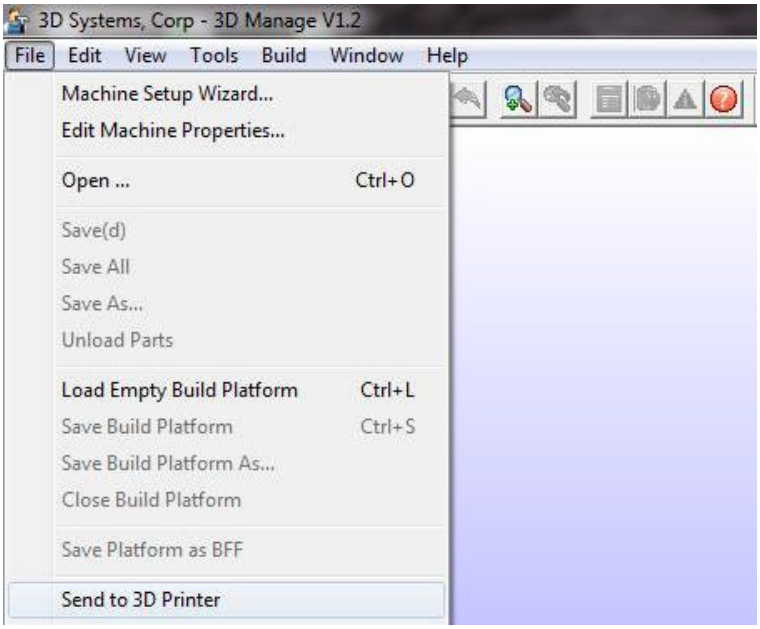


3. The system will ask you to select a printer.

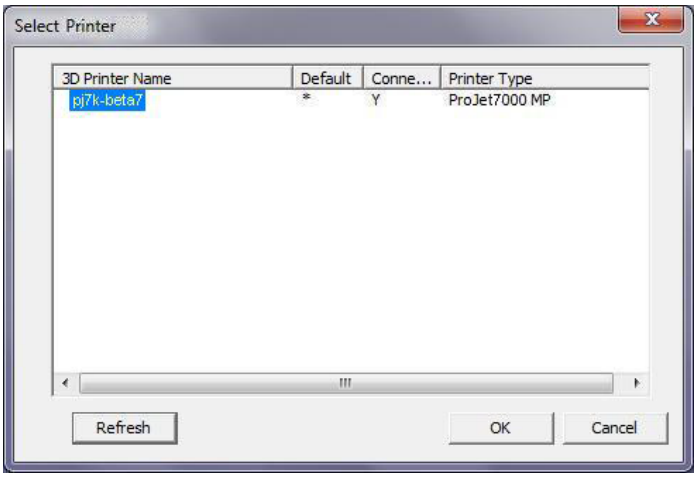


4. The system will ask you to select a part to build.

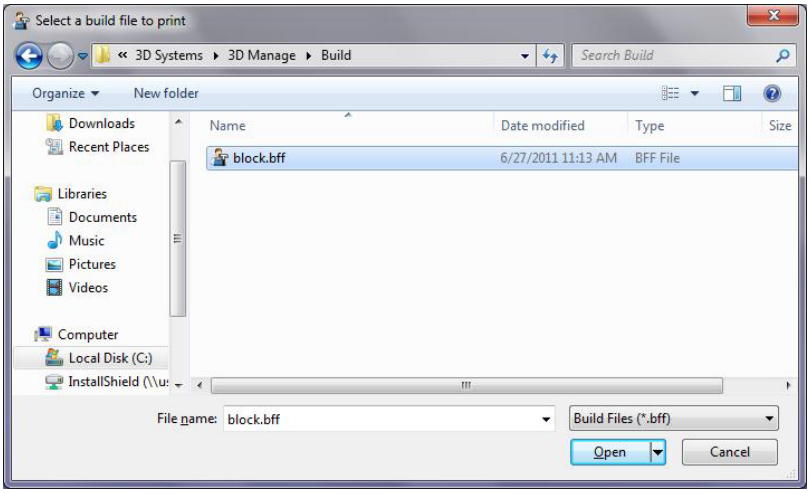


5. The following screen is displayed after selecting a part.

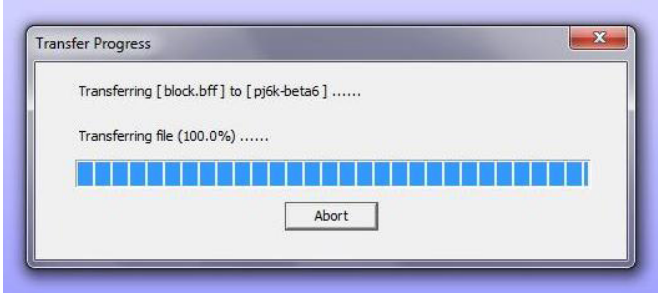

6. The system will request a username and password before displaying the **ProJet™ 7000 Printer Status** screen.

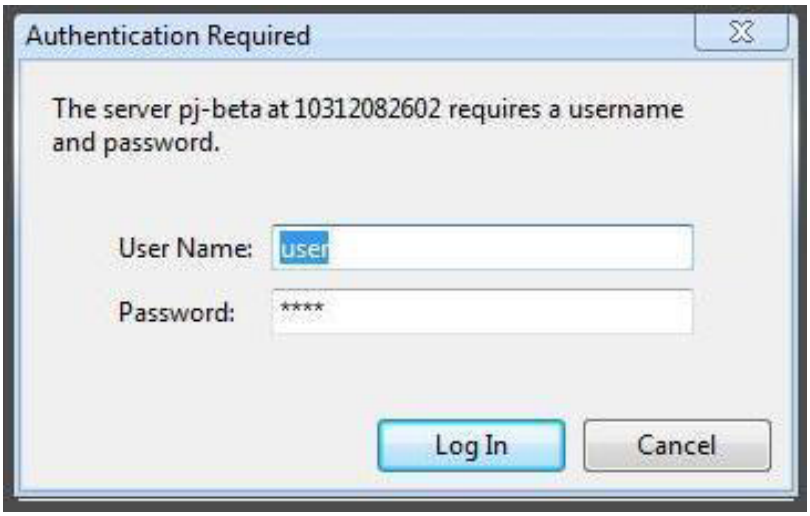


7. The **ProJet™ 7000 Printer Status** screen is displayed with the **block.bff** part displayed in the print queue.

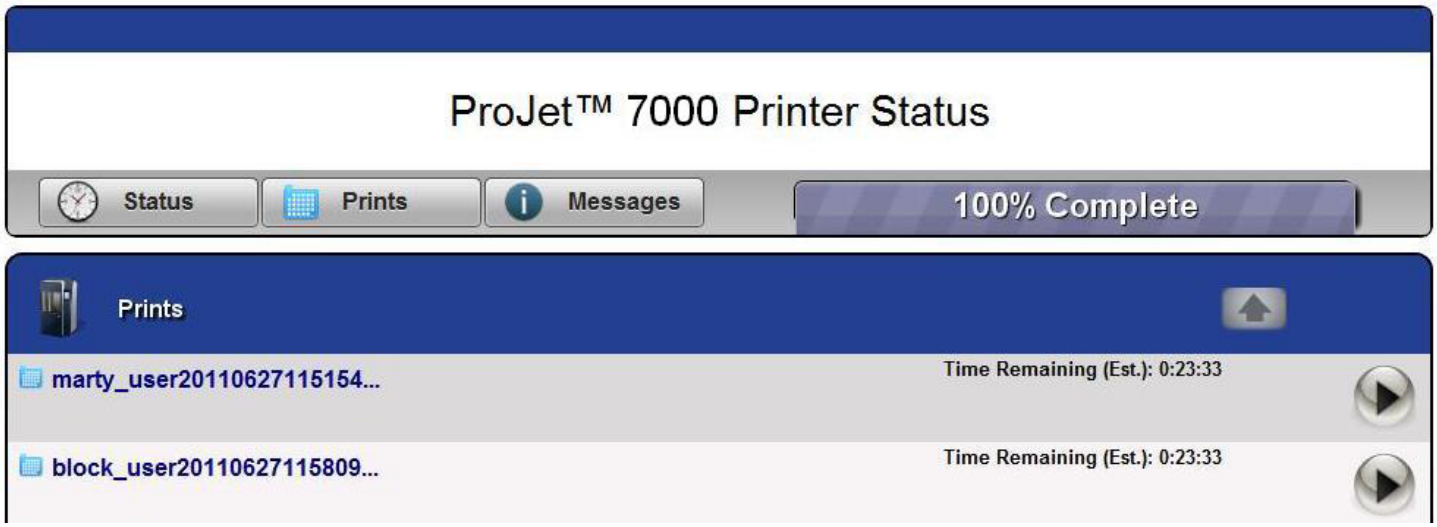

START A PRINT JOB

After print jobs have been submitted to the printer, the user may use the front panel to select and start a particular print job.

1. Press the **Prints** key.
2. The system will display the **Prints** screen.
3. Select a print job by touching the name on the display.
4. Press the **Start Print** key.

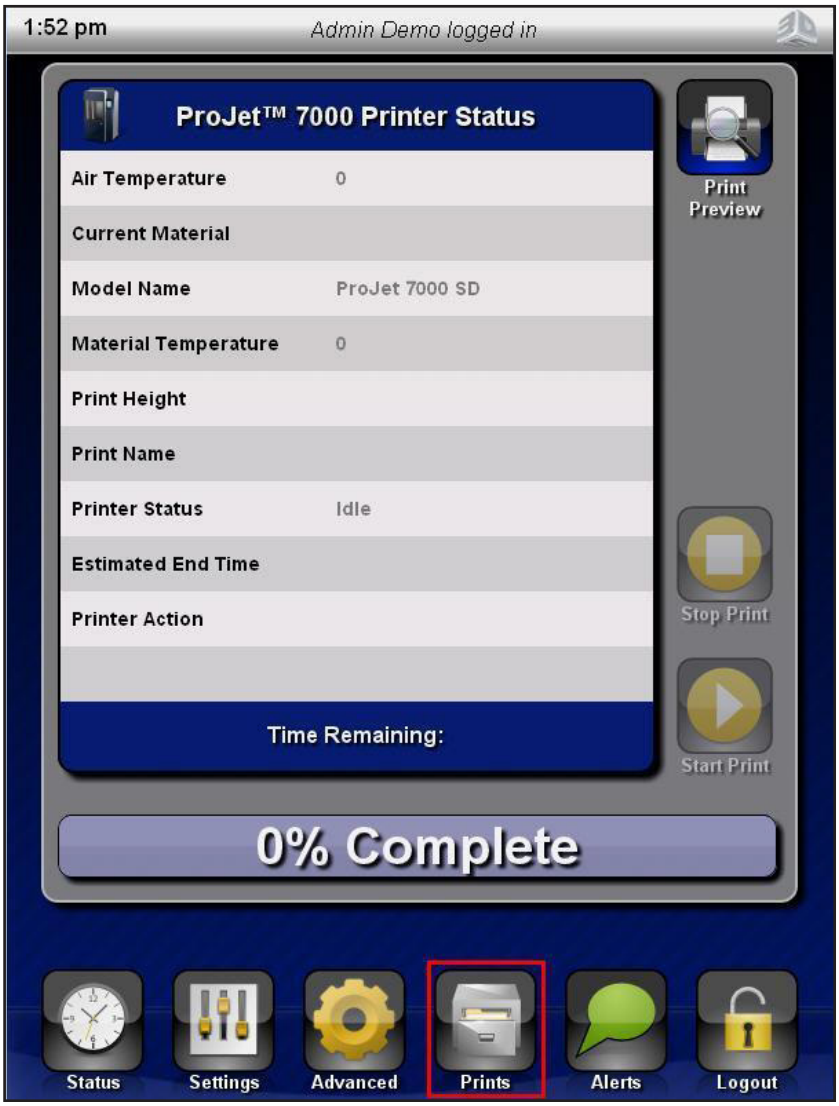


DELETE A PART IN PRINT PREVIEW

During printing, parts on the print platform can be deleted without aborting the entire print job.

Follow these simple steps to delete parts from the print platform using the “Print Preview” screen.


1. On the “Print Status” screen, press the “Pause Print” key to pause your print job; the printer will complete the current layer before pausing.

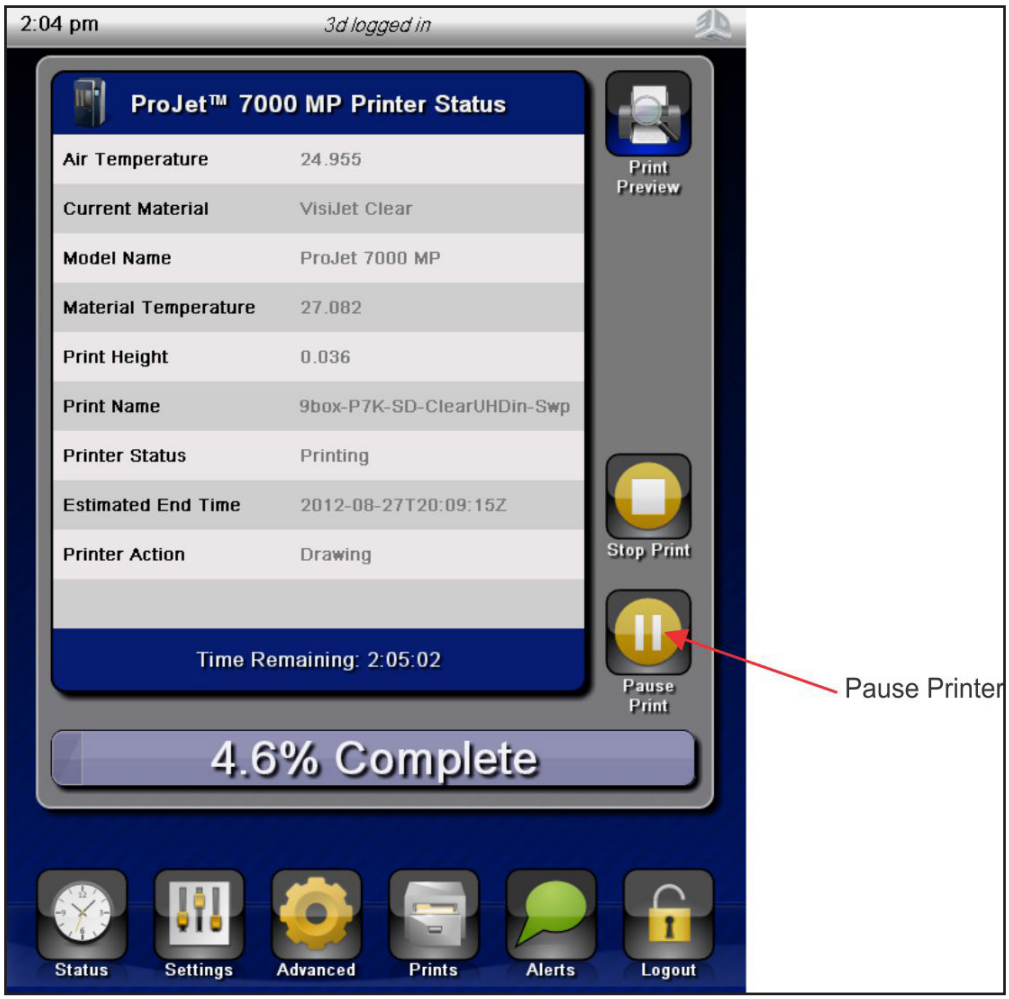


2. Once the printer has paused, press the “Print Preview” key in the upper right hand corner of the “Print Status” screen.




3. If necessary, tap on the “Zoom” key to zoom in on the part that you want to delete. Select the part by finger tapping on it; the part will high-light once it is selected.

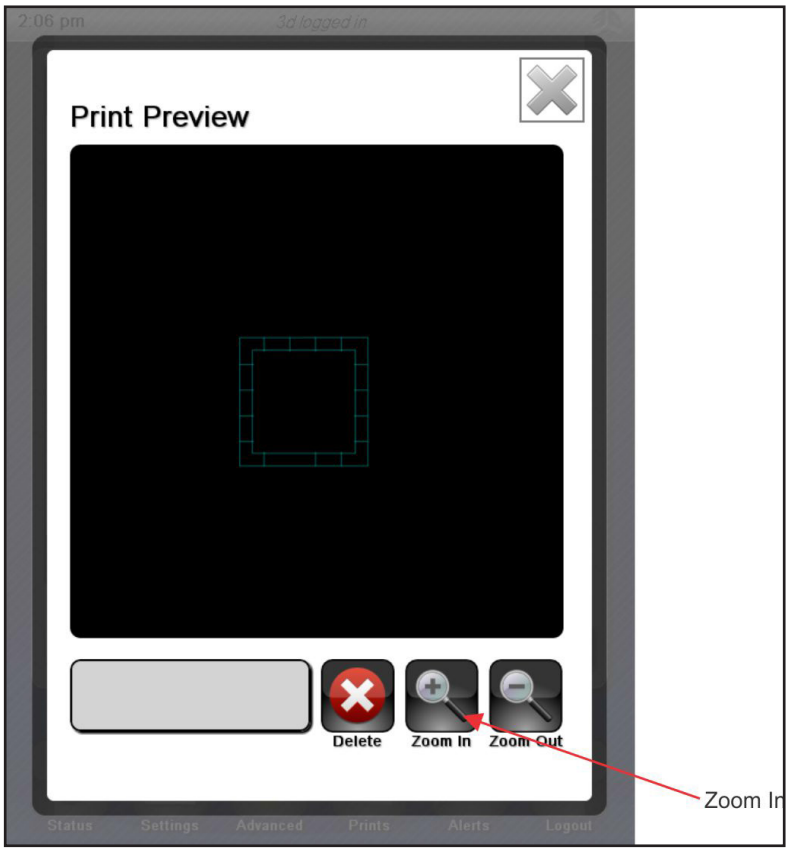

4. Press the “Delete” key to delete the part from the platform, the part will disappear from the platform. Select the X key to return to “Print Status” screen.

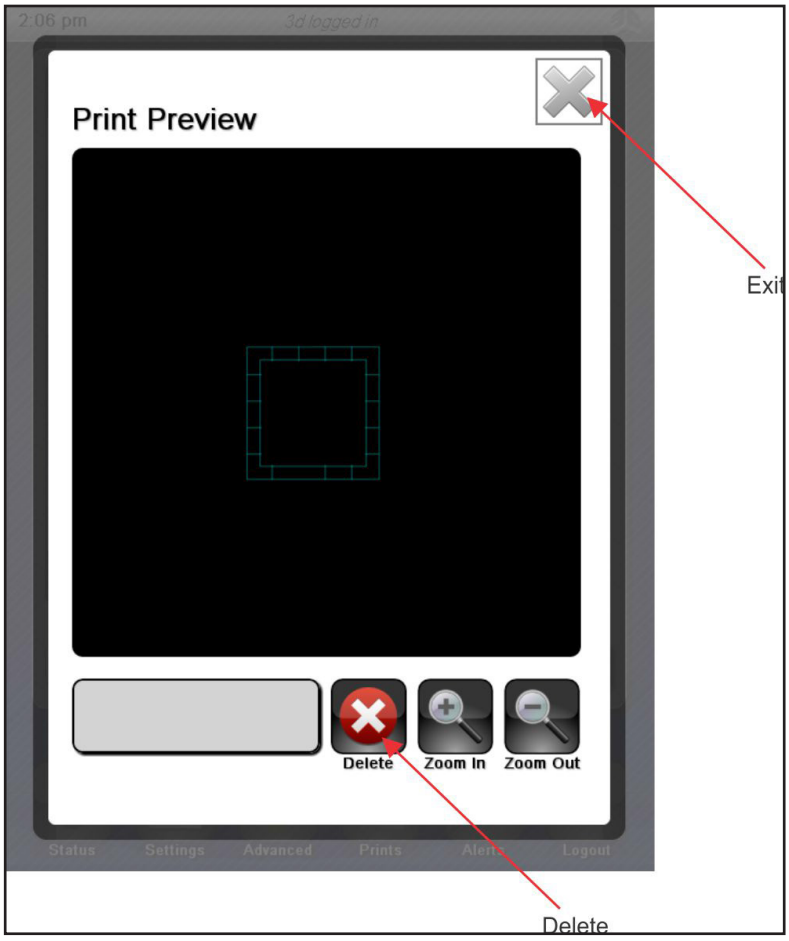

5. Select “Resume Print” to continue your print job.

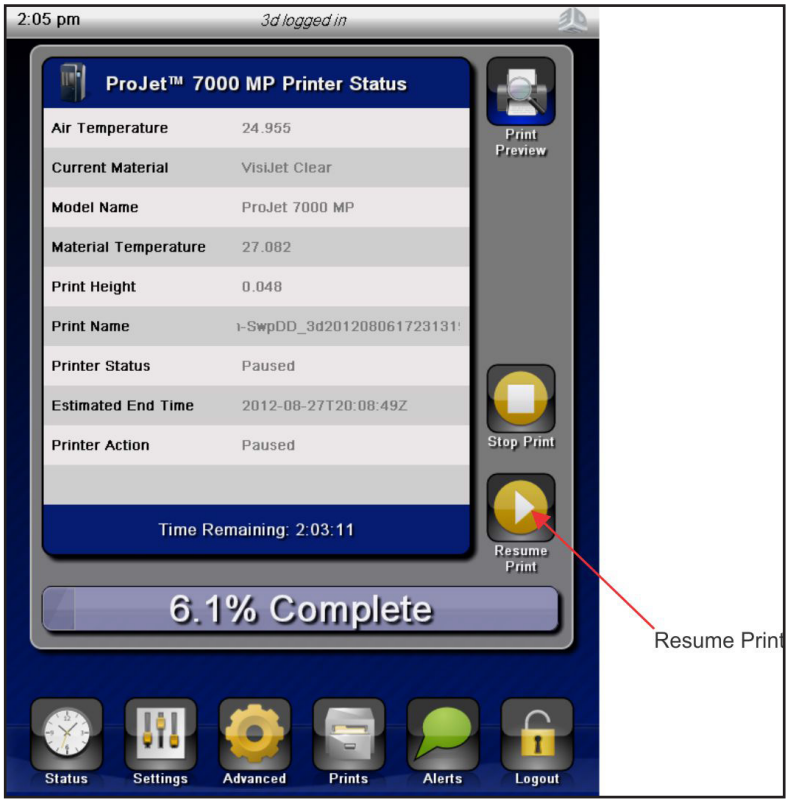


PRINT JOB COMPLETE - MOVE PLATFORM TO OFFLOAD POSITION


1. When a print job completes, the system will display the message **100% Complete** and the system will also indicate an alert.
   Press the **Alert** key to display the alert screen.




2. Press the right arrow key beside the print job.

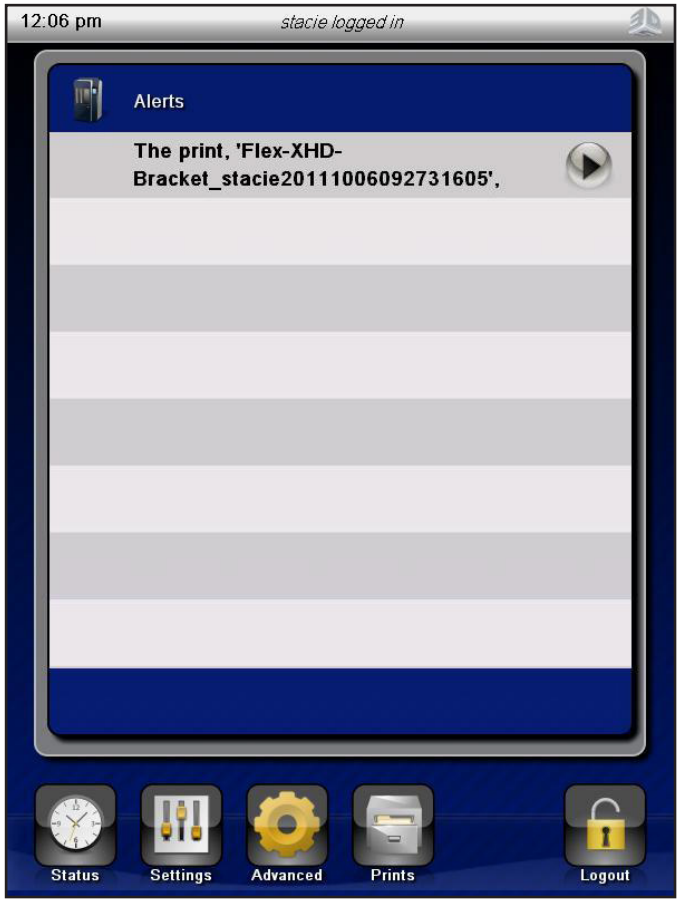

3. Press the Yes key to raise the print platform to the offload position.
   Do not open the chamber door until instructed to do so.

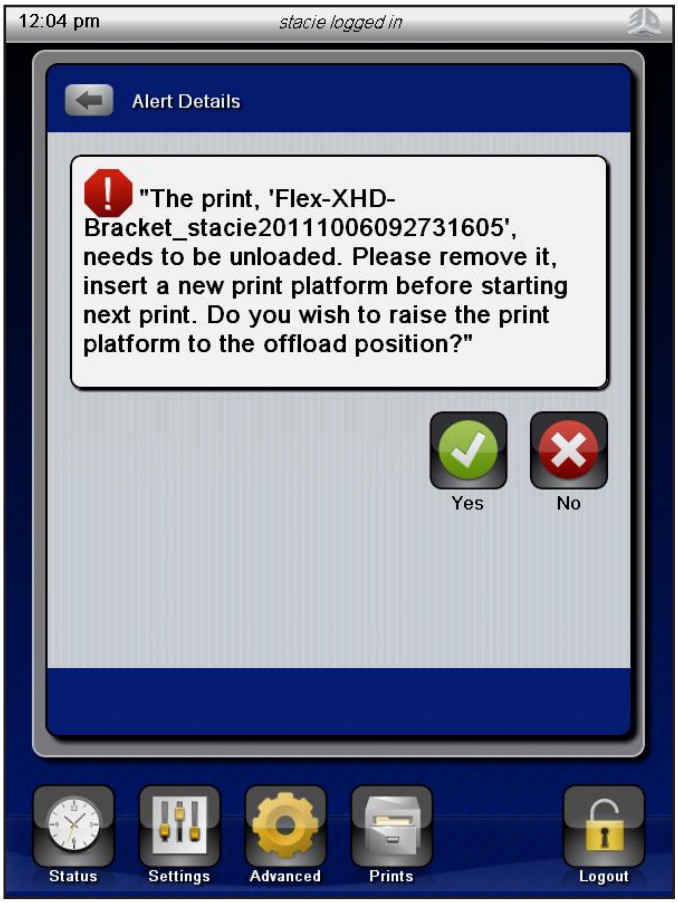


4. Open the chamber door and release the print platform from the forks.
5. Notches in the forks allow you to position the platform as shown.

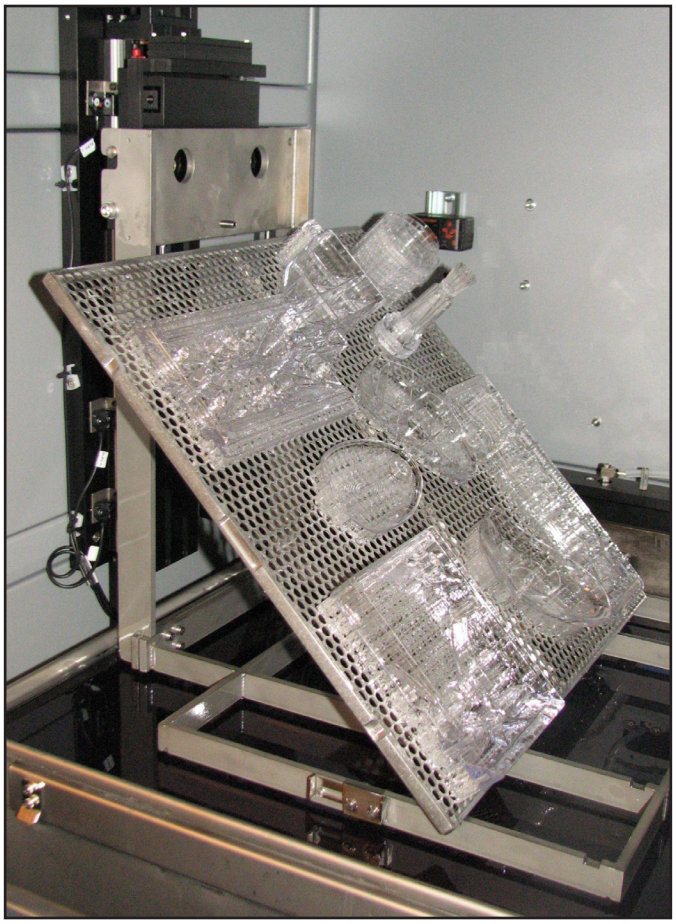


6. Carefully tilt the platform forward to drain print material that may be trapped in recessed areas or cavities within the parts.
7. To allow all excess resin to drain, leave the platform in this position for approximately five minutes.
8. Remove the print platform for post processing.

Move Print Platform to Offload Position using Elevator Controls

1. On the status screen, press Advanced.

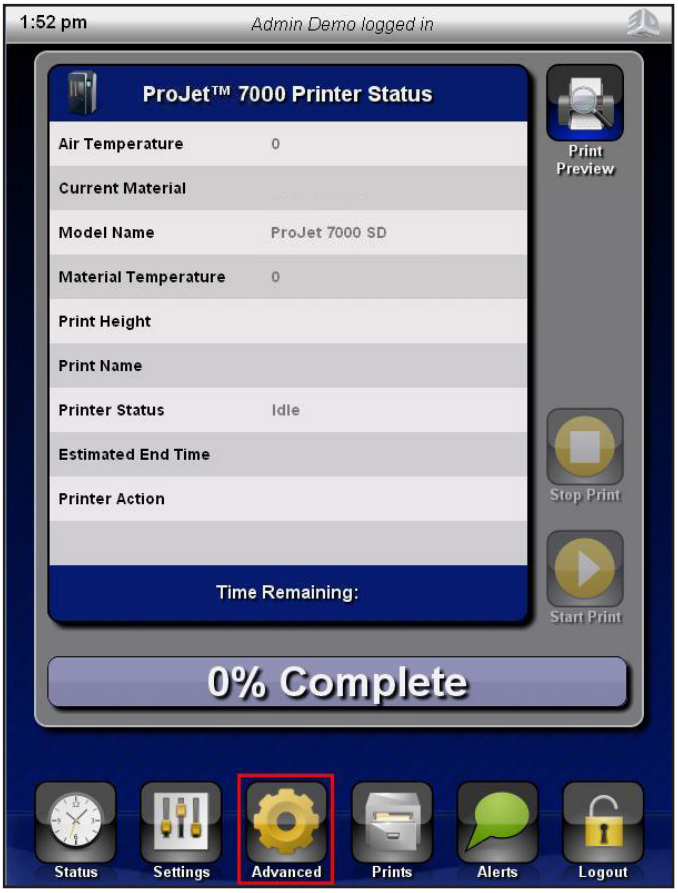


2. Press **Elevator/Leveler > Offload**. Do not open the chamber door until instructed to do so.

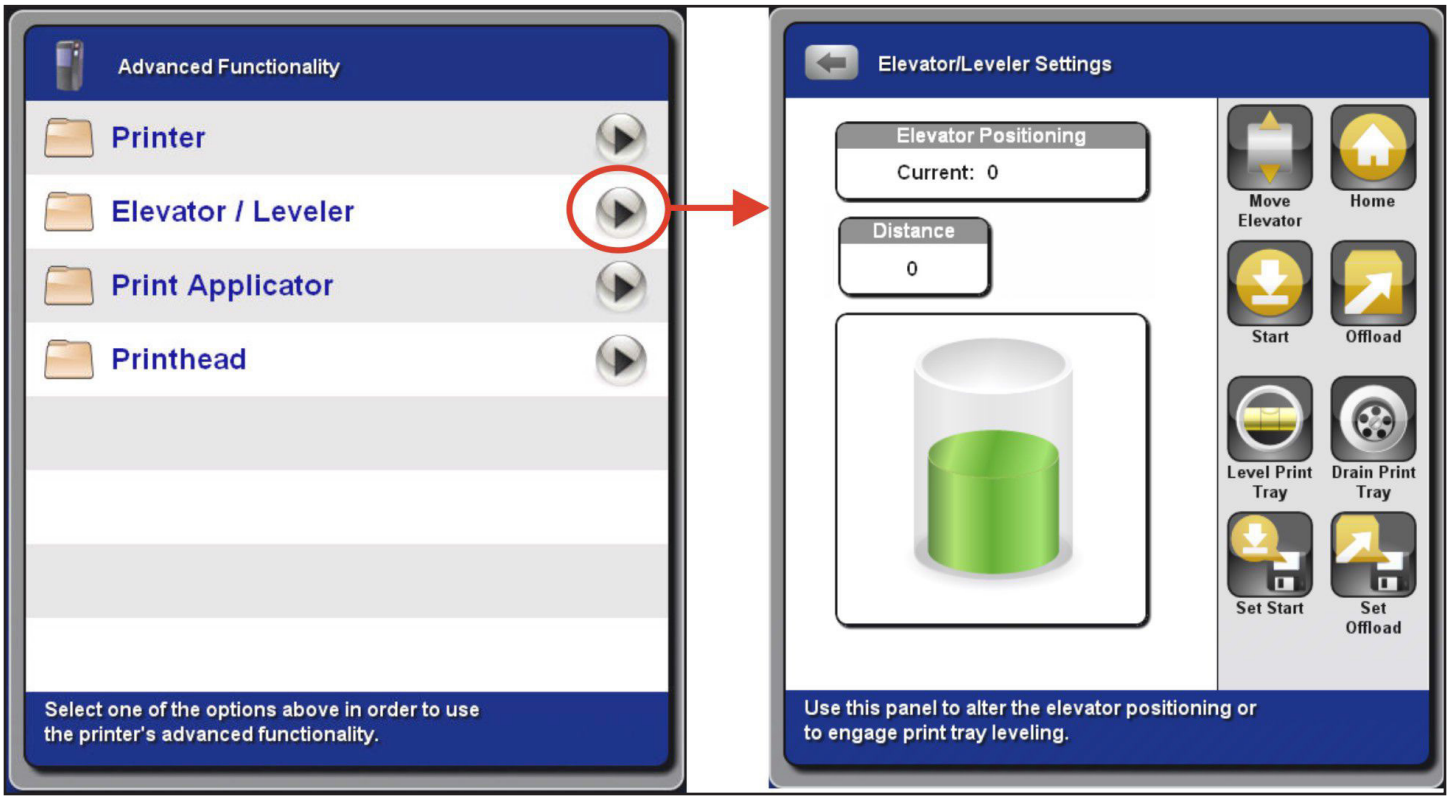

6 REMOTE OPERATION


1. To remotely access the ProJet™ 7000, enter the IP address or the system name for the printer into the internet browser. The default system name is *pj7k-xxxxx, where xxxxx is the last five digits of the printer's serial number.
2. The printer will require you to enter a user name and password. Use the same user name and password you would use if logging in on the front panel of the printer.

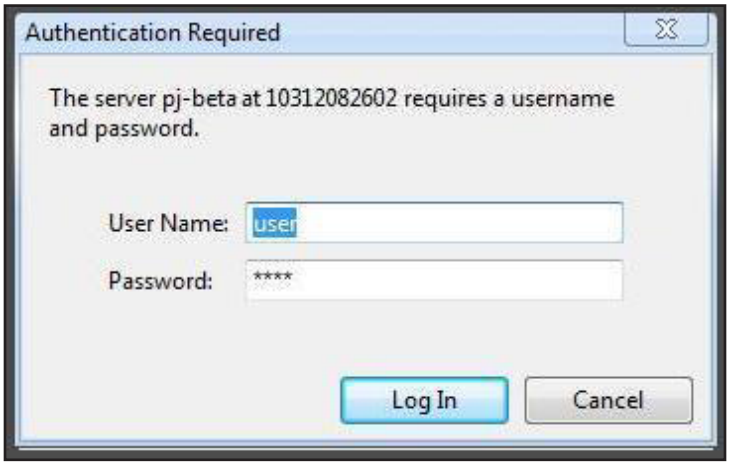


3. The system will display the screen shown below. The display provides three tabs you can view. The first screen displayed is the **Status** tab which contains the same information displayed on the printer GUI.



4. The **Prints** tab displays all print jobs that have been submitted to the printer. Clicking the  key adjacent to a print job will provide detailed information about that print job. Although the remote access allows you to view detailed information, you cannot modify prints jobs (delete, parameter modification, etc.) through this feature.

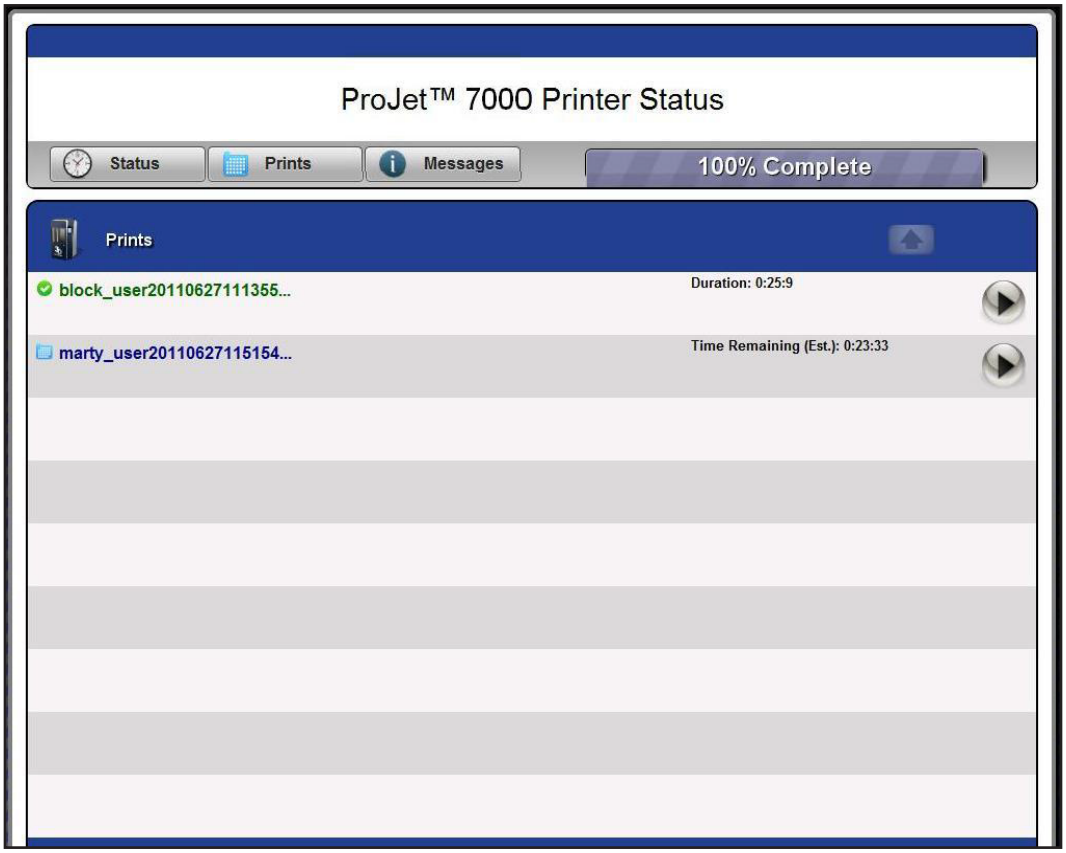

5. The **Messages** tab provides the same information that is provided on the **Alerts** screen of the printer GUI. Similar to the **Prints** tab, you can view information but you cannot "acknowledge" the alert messages.

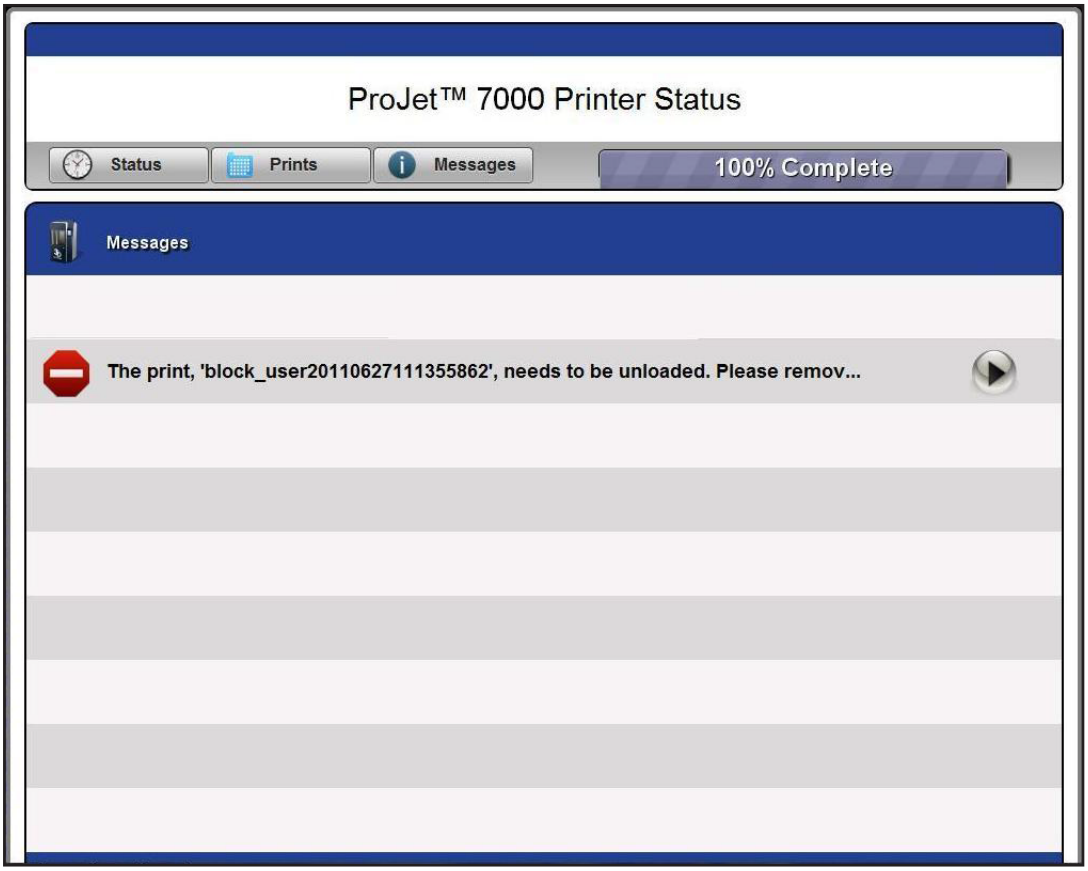

7 POST PROCESSING

For post processing, please refer to **ProJet™ Parts Finishing System User Guide** located on ***http://support.3dsystems.com***. The ProCure 350 UV Chamber provides essential final part curing to create a fully solidified part with stable mechanical properties and safe part handling. After building on the SLA system, the part is placed in this unit. Subjecting the part(s) to UV light for a period of time will fully solidify the part. After the part is removed from the unit, it is fully solidified and can be handled safely without gloves.

8 BASIC REGULATIONS

3D Systems has tested this printer to electromagnetic emission and immunity standards. These standards are designed to mitigate interference caused or received by this printer in a typical 3D-printing environment.

UNITED STATES

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with these instructions, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Changes or modifications to this equipment not approved by 3D Systems can void the authority of the user to operate this equipment.

CANADA

Ce dispositif est conforme aÌ la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage preìjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indeìsirable.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

EUROPEAN UNION



CAUTION: This is a Class A product. In a domestic environment, this product can cause radio interference in which case the user could be required to take adequate measures.

In order to allow the equipment to operate in close proximity to Industrial, Scientific and Medical (ISM) equipment, the external radiation from the ISM equipment may have to be limited or special mitigation measures taken.

Changes or modifications to this equipment not approved by 3D Systems can void the authority of the user to operate this equipment.

3D SYSTEMS

CE 24

EC DECLARATION OF CONFORMITY (DoC)

We

Manufacturer: *3D Systems, Inc.*
Address: *333 Three D Systems Circle Rock Hill, SC 29730*

declare under sole responsibility for issuing this declaration of conformity in relation to the following Product(s):

Product Description: *3D Professional Printer*
Model: *ProJet 7000 SD, ProJet 7000 HD, and ProJet 7000 HD*
Serial Number:

For the above given Product(s) is hereby declared that it conforms to the essential requirements set out in community harmonization legislation mentioned below:

Machinery Directive 2006/42/EC of 17 May 2006
Electromagnetic Compatibility Directive 2014/30/EU of 14 October 2014
Radio Equipment Directive 2014/53/EU


Statement about the relevant harmonized standards that have been used, or statement about the specifications in relation to which conformity is declared (Standard: Date of Issue):

EN 61010-1:2013
EN 12100:2010
EN 61000-6-1:2007
EN 61000-3-3:2013
EN 301 489-3 V2.1.1:2017
EN 60825-1:2014
EN55011:2009 + A1:2010
EN 61000-3-2:2014
EN 300 330 V2.1.1:2017

	North America	Europe
Name of Legal Entity authorized to compile the technical construction file and contact for regulatory topics:	*3D Systems Corporation 333 Three D Systems Circle Rock Hill, SC 29730, USA*	*Layerwise NV (a wholly owned subsidiary of 3D Systems, Inc.), Grauwmeer 14, 3001 Leuven, Belgium*

Signed for and on behalf of:

San Diego, CA, USA	*October 22, 2024*	*Doug Hoffman, VP Strategic Accounts*
Place of issue	*Date of issue*	

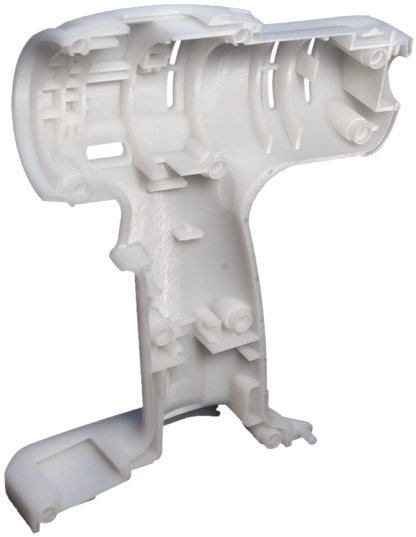

3D Systems, Inc.
333 Three D Systems Circle | Rock Hill, SC | 29730
www.3dsystems.com

©2017 3D Systems, Inc. All rights reserved.